


# PARTS LIST

## KNOW YOUR LAWN MOWER

Fig. 1

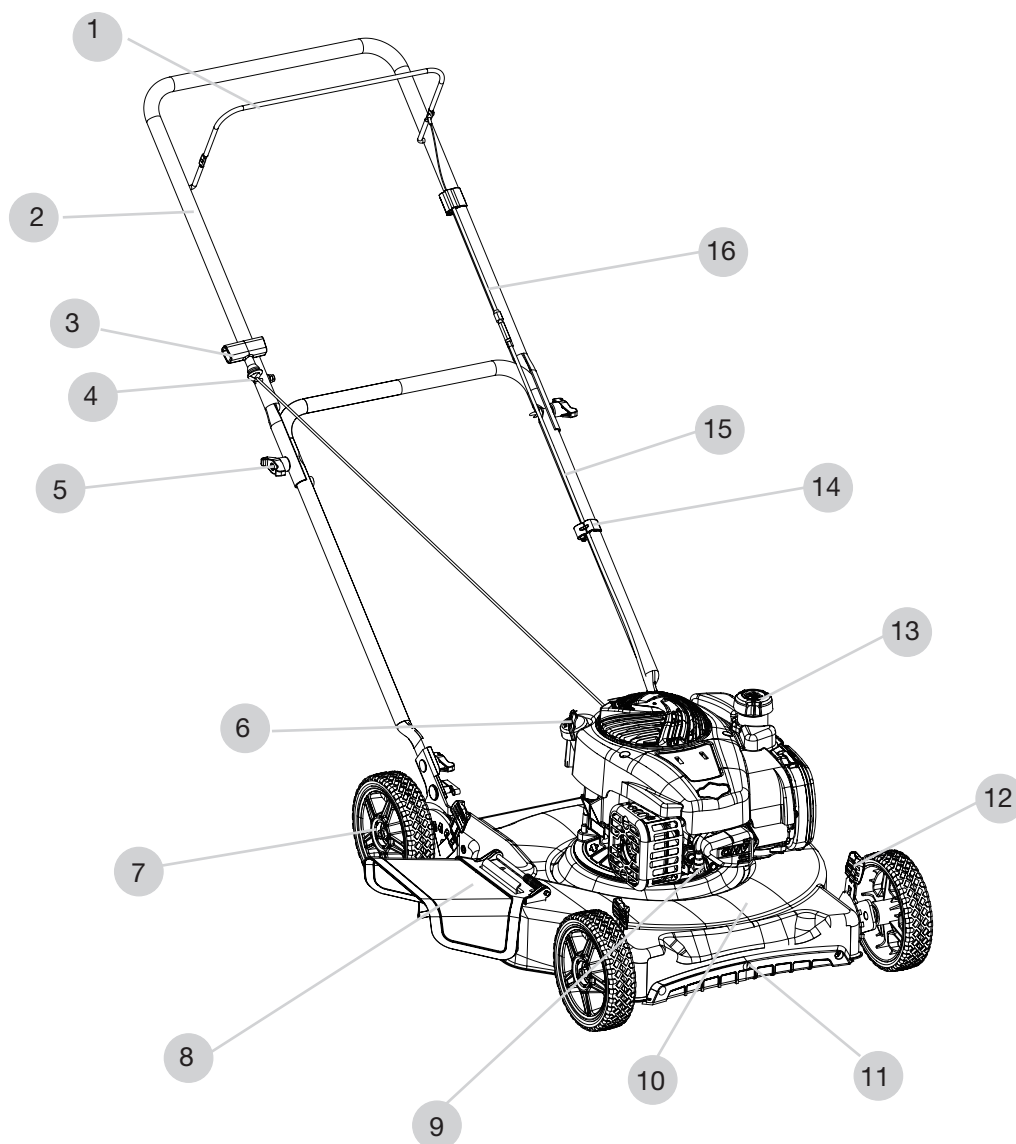

## PARTS LIST

1. Engine On/Off Control Bar
2. Upper handle
3. Recoil starter
4. Rope guide
5. Handle knob and bolt
6. Oil filler dipstick
7. Wheel
8. Side discharge chute
9. Spark plug cover
10. Cutting deck
11. Front bumper
12. Height adjustment lever - 1 per wheel
13. Gas filler cap
14. Cord clip
15. Lower handle
16. Bowden cable

### PARTS LIST

Carefully remove the lawn mower from its packaging and check that the following parts are included:

- A. Main mower deck (with upper and lower handle) 1 pc
- B. Cord clip 1 pc
- C. Manual 1 pc
- D. Handle knob and bolt 4 pcs
- E. Engine Oil (SAE 30 15 o.z.) 1 pc



#### **WARNING!**

**If any parts are damaged or missing, do not operate this lawn mower until the missing parts are replaced.**

**Failure to heed this warning could result in serious personal injury.**



#### **NOTE:**

**Always recycle the packaging in accordance with local recycling programs.**