

CYCLE GUIDE

The cycle guide below shows the default settings, available options and recommended fabric types for each cycle. Allowable modifier adjustments are shown below the default setting for each cycle.

Default Setting
 Available options
 ★ Cannot be used if Steam is selected
 ■ Turbo Wash™ will be deselected

Cycle	Fabric or Load Type	Wash Mode	Temp.	Spin	Soil	Soak	Stain Care	Extra Rinse	Water Plus	Delay Wash	PGM Save
Normal	Cotton, linen, shirts, jeans, mixed loads	Steam	Extra Hot ^b	Extra High	Heavy						
		Turbo Wash™	Hot	High	Heavy	★	■ ^c	●	●	●	●
		Cold Wash ^b	Warm	Medium	Normal						
Heavy Duty	Heavily soiled cotton fabrics	Cold Wash ^b	Cold	No Spin	Light						
		Fabric Softener	Tap Cold	No Spin	Light						
		No Option	Hot	Extra High	Heavy						
Bedding	Large items such as blankets, comforters, and sheets.	Steam	Hot	High	Heavy						
		Turbo Wash™	Warm	Medium	Normal	★	■	●	●	●	●
		Cold Wash	Cold	Low	Normal						
Bedding	Use the Bedding cycle for items such as pillows, comforters, pet bedding and other articles which have difficulty absorbing water. DO NOT WASH EXCESSIVELY LARGE ITEMS. If large/bulky items do not fit easily into the tub, there may not be enough room for them to move during washing. Keep like items together; do not mix large bulky items with smaller clothing items. Failure to follow these instructions may result in damage to the clothing or to the washer.	Fabric Softener	Tap Cold	No Spin	Light						
		No Option	Hot	Medium	Normal	★		●		●	●
		Steam	Warm	Low	Normal						
Sanitary	White fabrics	Cold Wash	Cold	No Spin	Light						
		Fabric Softener	Tap Cold	No Spin	Light						
		No Option	Extra Hot	Extra High	Heavy						
Allergiene™	Heavily soiled underwear, work clothes, diapers, etc. (less than 11 lbs.)	Steam	Hot	High	Heavy						
		Turbo Wash™	Warm	Medium	Normal			●	●	●	●
		Cold Wash	Cold	Low	Normal						
Bright Whites™	Underwear, pillow covers, bed sheets, baby wear. (less than 12 lbs.)	Fabric Softener	Tap Cold	No Spin	Light						
		No Option	Extra Hot	Extra High	Heavy						
		Steam	Hot	High	Heavy						
Tub Clean	Refer to page 27.	Turbo Wash™	Warm	Medium	Normal	★		●	●	●	●
		Cold Wash	Cold	Low	Normal						
		Fabric Softener	Tap Cold	No Spin	Light						
Tub Clean	Refer to page 27.	Steam	Hot	High	Heavy					●	
		Turbo Wash™	Warm	Medium	Normal						
Tub Clean	Refer to page 27.	Cold Wash	Cold	Low	Normal						
		Fabric Softener	Tap Cold	No Spin	Light						

^b Cold Wash and Extra Hot are not available with the Heavy soil level.

^c Stain Care cannot be used if Cold Wash is selected.

NOTE: The following options can only be used independently of each other: Steam, Turbo Wash™, Cold Wash.

Soak and Stain Care cannot be selected together.

Fabric softener and Turbo Wash™ cannot be selected together.

CYCLE GUIDE

The cycle guide below shows the default settings, available options and recommended fabric types for each cycle. Allowable modifier adjustments are shown below the default setting for each cycle.

- Default Setting
- Available options
- ★ Cannot be used if Steam is selected
- Turbo Wash™ will be deselected

Cycle	Fabric or Load Type	Wash Mode	Temp.	Spin	Soil	Soak	Stain Care	Extra Rinse	Water Plus	Delay Wash	PGM Save
Pre Wash+ Normal	Heavily soiled fabrics that require pre-washing.		Extra Hot Hot	Extra High High							
		Turbo Wash™	Warm	Medium	Normal	●		●	●	●	●
		Fabric Softener	Cold Tap Cold	Low No Spin	Light						
Perm. Press	Dress shirts/pants, wrinkle-free clothing, poly/cotton blend clothing, table-cloths	No Option			Heavy						
		Turbo Wash™	Warm	High	Normal	●		●	●	●	●
		Cold Wash	Cold Tap Cold	Low No Spin	Light						
Waterproof	Waterproof items - i.e. Water resistant clothing, mattress covers, outdoor clothes, plastic mats etc. (less than 14 lbs.)	No Option			Heavy						
			Warm		Normal			●	●	●	●
		Fabric Softener	Cold Tap Cold	Low No Spin	Light						
Delicates	Dress shirts/blouses, nylons, sheer or lacy garments (less than 8 lbs.)	No Option			Heavy						
			Warm		Normal	●		●	●	●	●
		Fabric Softener	Cold Tap Cold	Low No Spin	Light						
Towels	Big towels, small towels	No Option		Extra High High	Heavy						
		Turbo Wash™	Hot	Medium	Normal	●	■ ^c	●	●	●	●
		Cold Wash	Cold Tap Cold	Low No Spin	Light						
Speed Wash	Lightly soiled and small loads		Extra Hot Hot	Extra High High	Heavy						
		Turbo Wash™	Warm	Medium	Normal	●		●	●	●	●
			Cold Tap Cold	Low No Spin	Light						
Downloaded	The downloaded cycle (See page 22.)										

^b Cold Wash and Extra Hot are not available with the Heavy soil level.

^c Stain Care cannot be used if Cold Wash is selected.

NOTE: The following options can only be used independently of each other: Steam, Turbo Wash™, Cold Wash.

Soak and Stain Care cannot be selected together.

Fabric softener and Turbo Wash™ cannot be selected together.

NOTE:

To protect your garments, not every wash/rinse temperature, spin speed, soil level, or option is available with every cycle. A chime will sound and the LED will not light if the selection is not allowed.

*When a cycle is selected, the default time for that cycle is displayed. This time will change as modifiers or options are selected. Once the START/PAUSE button is pressed, the washer will measure the load.

The estimated time may change once the load has been measured. The washer automatically adjusts the wash time for the amount of laundry, water pressure, water and other operating conditions.