


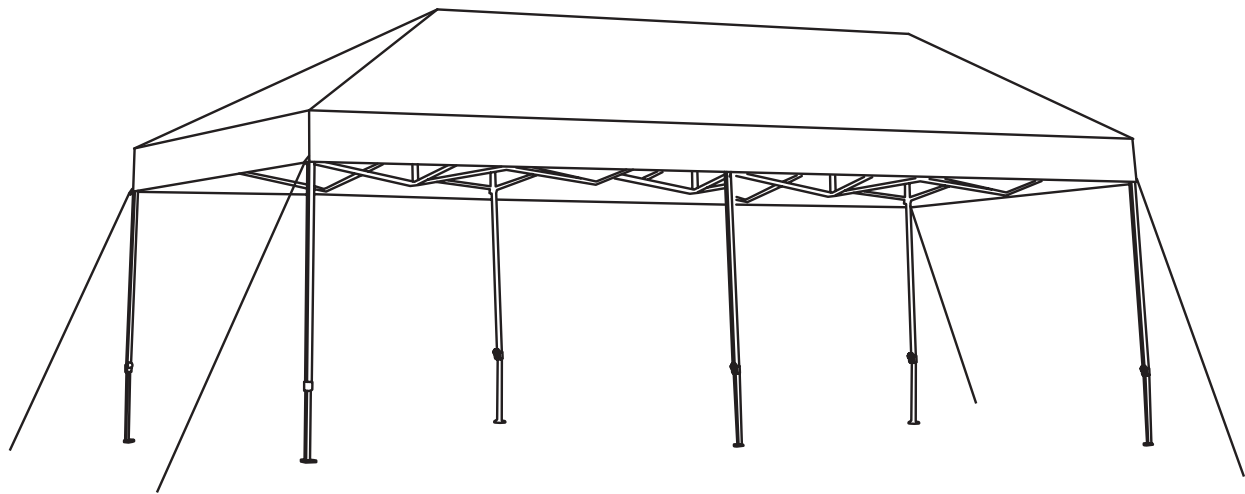


10 x 20 Commercial Canopy




ATTENTION!

IMPORTANT: READ THIS INFORMATION BEFORE PROCEEDING!
To avoid damage to your frame, please read the enclosed instructions carefully before setting up your canopy.

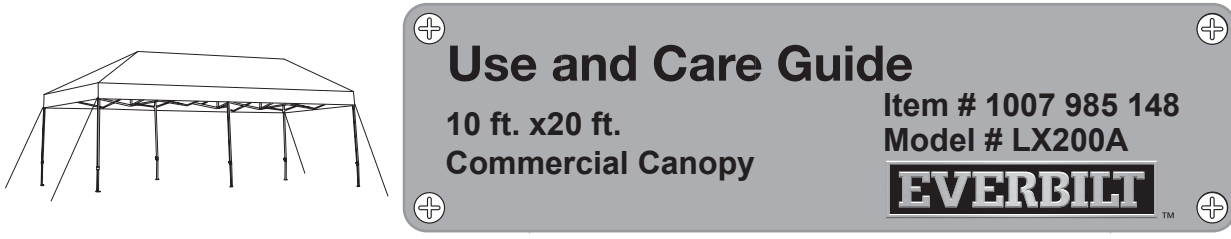


PACKAGE CONTENTS

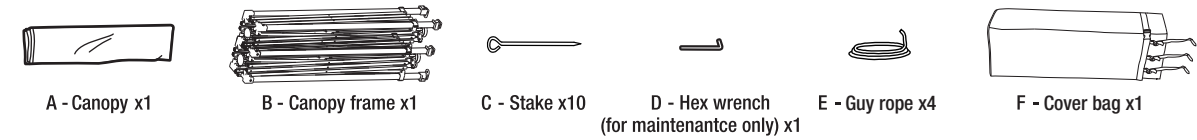

Setting Up the Canopy

1 OPENING THE CANOPY FRAME


- With a partner, stand on the narrow side and stand across from each other.
- Grasp the middle trusses on the bottom marked "OPEN HERE". Lift slightly off the ground and walk back spreading the trusses open.

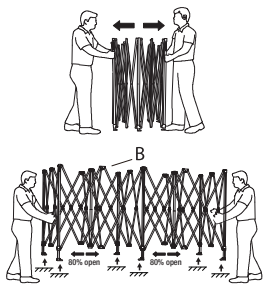

IMPORTANT:
Lift up the frame 2"-3" off the ground especially in tall grass or sand. Grasp the trusses away from the connections to avoid pinching. Get the frame 80%-90% opened.

2 ATTACHING THE CANOPY


- Unfold the canopy (A) and place on top of the canopy frame (B).
- Secure the canopy (A) to the corners of the canopy frame (B) using the hook and loop straps.

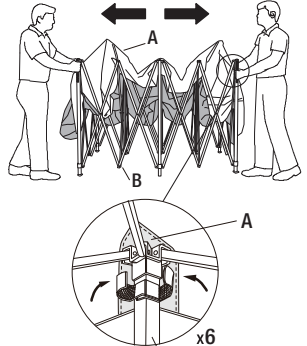

IMPORTANT:
Find the corners of the canopy before draping over frame. Do not attach the canopy while the frame is fully extended.

3 LOCKING THE FRAME


- With a partner, go under the canopy and push up the bottom hub until the "click" heard and the red button locked into the central pole.
- Secure the canopy top with webbing straps by wrapping over the truss bars.

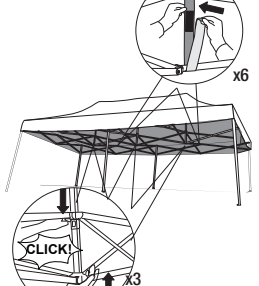

IMPORTANT:
Lift the frame slightly off the ground while pushing up hub. Use both hands to guide the pole into the hub.

4 ADJUSTING THE CANOPY HEIGHT


- With 1-2 partners at the long side to raise the canopy by sliding the lower inner leg until the leg push pin locks at the desired height.
- Repeat the above on the opposite side. Be sure to adjust two legs one time to avoid damaging the frame.

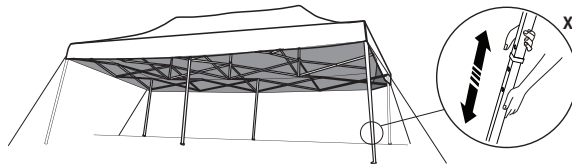

IMPORTANT:
Do not step your foot on the footplate while extending the leg. This creates tension to cause frame damage. Only extend legs after the central lock is engaged. Utilize the various height adjustment to create a level shade. Raise the 3 legs on the same side firstly, then raise the rest 3 legs at the same time.

5 SECURING THE CANOPY IN PLACE

- Insert a stake (C) into the foot of each canopy leg.
- Measure out each leg to a proper distance and secure four stakes (C) to the ground. Attach the ropes to the canopy top and tie the attached ropes to the stakes in the ground. Ensure the ropes have the proper tension by adjusting the plastic adjusters on the ropes.

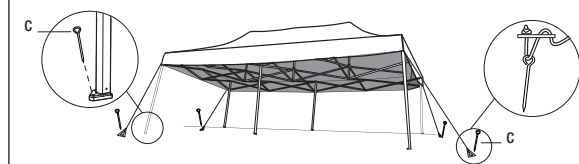


IMPORTANT:
Always secure your canopy with the guy ropes and stakes. Do not erect your gazebo in inclement weather, i.e. wind or rain. Ensure you erect the gazebo on a level surface free of any potential hazards. Be sure to erect your gazebo on a surface where all the gazebo legs and guy ropes can be fixed firmly into the ground.

Taking Down the Canopy


1 REMOVING THE STAKES AND RETRACTING THE LEGS

- Pull up all stakes from the ground.
- Press the push button to lower all legs.

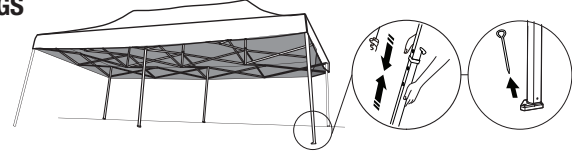


2 UNLOCKING THE CANOPY

- From underneath the canopy, releasing all the webbing straps. Then press in the red lock button to unlock the central poles.

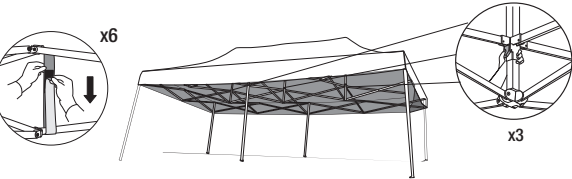


3 FOLDING THE FRAME

- Lift the canopy off the ground 2-3 inches and walk it in from both sides until the frame is fully closed.

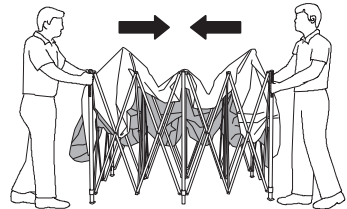

4 PACKING THE CANOPY IN THE STORAGE BAG

- Position the cover bag straps to align with the 3 wheeled legs. Slide down the bag over the closed frame.
- Loosen the strap and insert the red plug into the opening in the footpad and tighten straps by pulling down the strap loop.

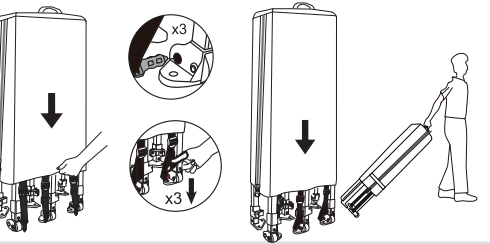

Safety Information

Please read and save these instructions before attempting to set up this tent.

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.
This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

CAUTION: Never set up or continue to use in any rain, wind, or storm conditions, especially lightning storms. Damage can occur to the tent and put you and others in potential danger.

CAUTION: Take care not to pinch your fingers in the frame during set up and take down.

CAUTION: Avoid setting up the tent on steep inclines.

CAUTION: Please try to avoid using it in heavy rain, high winds, stormy weather, especially lightning storms.

CAUTION: Do not use this tent for permanent shelter. It is designed for temporary use only.

CAUTION: Never leave the tent unattended.

Care and Maintenance

- Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives, or bleach.
- Do not machine wash.
- Never fold or store the canopy when it is wet or damp. Allow it to dry completely to avoid mildew.

Warranty

The manufacturer warrants for a period of 1 year from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, the manufacturer may provide replacement parts to the original purchaser. Original receipt or proof of purchase as well as proof of defect is required. The manufacturer will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser 1 year from the date of purchase and is not transferable. This warranty does not cover any product purchased through non-authorized dealers and/or online auction websites.

WHAT IS NOT COVERED

This 1 Year Limited Warranty does not cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain, or hail. In case of inclement weather, remove all valuables and persons and seek appropriate shelter. Under no circumstances will the manufacturer be liable or responsible for any incidental or consequential damages. This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 1 Year Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.


Contact the Customer Service Team at 1-800-305-1726 or visit HOMEDEPOT.com.



HOMEDEPOT.com
Please Contact 1-800-305-1726 for further assistance.

Spare Parts

To access spare parts, please call toll free 1-888-502-9589, Monday - Friday, 9:00 AM - 4:00 PM PST; or visit www.crown-shades.com; or email care@OutdoorDesignz.com

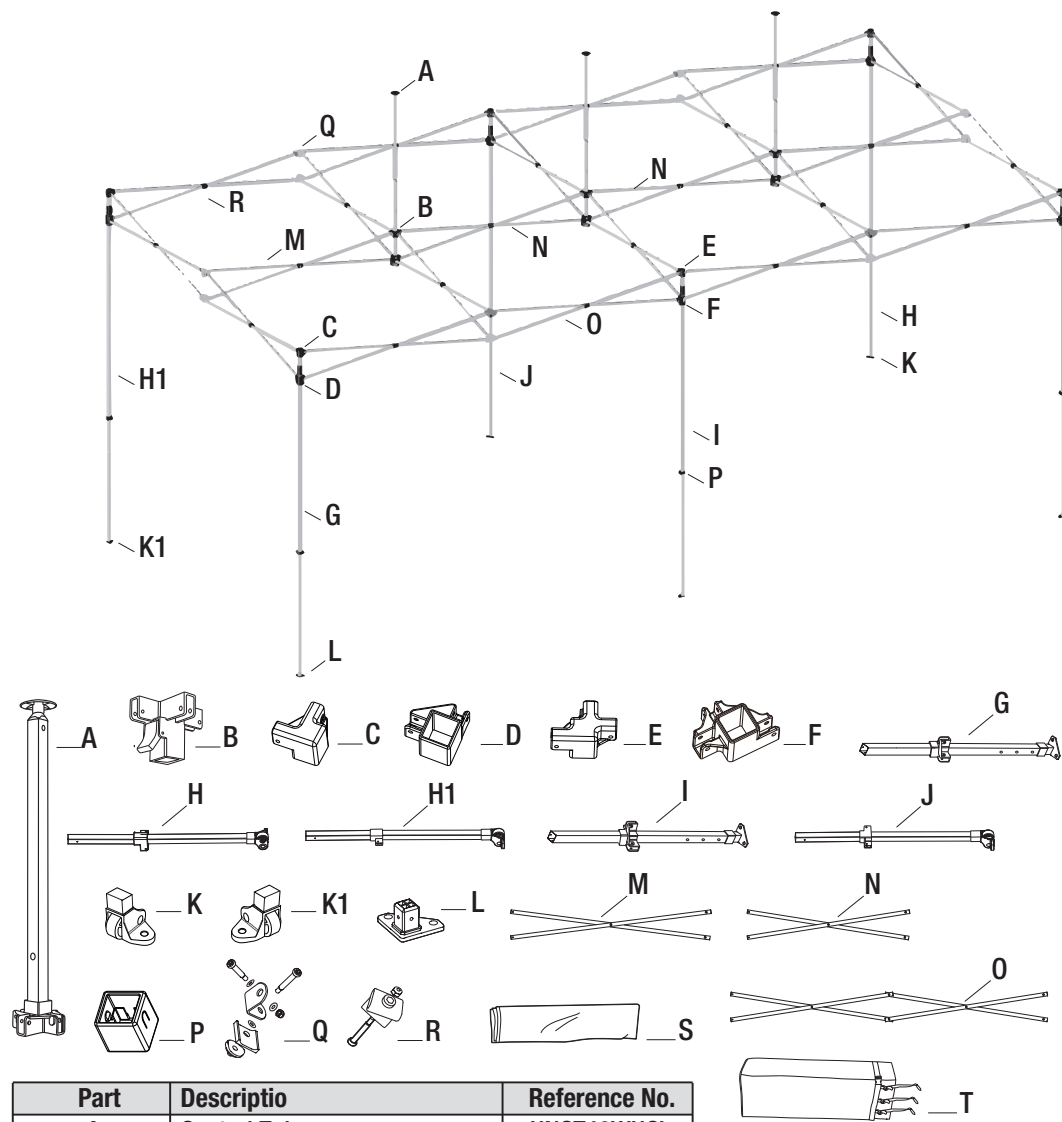

Part	Description	Reference No.
A	Central Tube	UNCT40WHCL
B	Central Slider	UNCS01BK00
C	Leg Cap-30	LXLC12BK2W
D	Slider-30	LXLS12BK2W
E	Middle Leg Cap-30	LXLC12BK3W
F	Middle Slider-30	LXLS12BK3W
G	Leg Assembly No wheel	UNLA12WHNW
H	Leg With wheel (Left)	UNLA12WHWL
H1	Leg With wheel (Right)	UNLA12WHWR
I	Mid Leg Assembly No wheel	LXLA12WHNW
J	Mid Leg Assembly With wheel	LXLA12WHWW
K	Foot with wheel (left)	UNFT12BKWL
K1	Foot with wheel (right)	UNFT12BKWR
L	Foot without wheel	UNFT12BKNW
M	Long Ceiling Assembly	LICA10WH00
N	Short Ceiling Assembly	CICA10WH00
O	Eave Assembly	SIEA10WH00
P	Leg Extender	UNLE12BK6P
Q	M5 Bolt Kit	UNBKM5BKXL
R	M4 Bolt Kit	UNBKM4BKCS
S	Top Fabric-White	UNT310WH20
T	Stow N Go Bag	UNCB20BKNN



HOMEDEPOT.com
Please Contact 1-800-305-1726 for further assistance.