

Cordless Bamboo Roll-Up

Installation Instructions


Please read the instruction sheet carefully before installing your new blind.

Package Includes:


- One Roll-Up Blind
- Brackets
- Screws

Tools Needed:


- Tape Measure
- Drill
- 1/16" Drill Bit
- Screwdriver
- Pencil

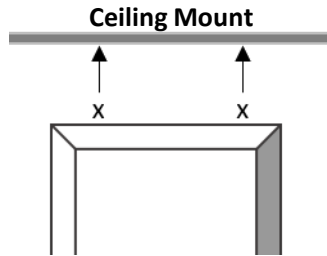


Outside Mount

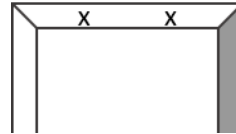

Wall Mount – No Window Frame

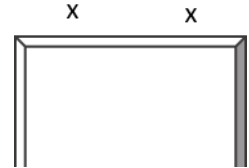

****Inside Mount**

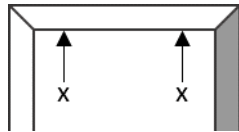

****For Inside Mount, Window Frame must have depth of at least six inches for roll-up clearance.**

Blind Installation:

1. Before installing, make sure blind is fully rolled up and secured. For easier installation, do not remove paper wrap packaging ties until finished.
2. Mark location of bracket holes, please note: The hook side of brackets will grasp the front of the headrail.
For Ceiling and Inside mounts: Hook side of bracket should face towards you, see image A below.
For Wall and Outside mounts: Hook side of bracket should face down, see image B below.

Tip: Make sure your mounting brackets and/or mounting surface are level and the same distance from the top of the window. For best accuracy, measure the distance with a tape measure.

3. Install Brackets: Drill 1/16" pilot holes at the hole marks first, then screw in brackets.
4. Attach the Blind for ceiling or inside mount: Insert front bevel of headrail into hook side of bracket, rotate back of headrail upwards into the back of the bracket, each bracket will click once engaged. Push button located on hook side of bracket will release front edge of headrail.
5. Attach the Blind for Wall or outside mount: Insert front bevel of headrail into hook side of bracket, rotate back of headrail towards wall into lower portion of the bracket, each bracket will click once engaged.. Push button located on hook side of bracket will release bottom edge of headrail.

Blind Tension Adjustment:

The Roll-Up Blind's tension easily adjusts with right and left adjustment knobs.

Rotate the left knob for desired tension, speed of movement when raising and lowering.

Rotate the right knob for open position adjustment if full retraction is not desired.

An even – slower speed tension helps to prevent uneven retraction of the Blind onto the roller.

Image A



Image B



Achim's Family of Home Furnishings

www.achimonline.com

Brooklyn, NY 11215

V-10

QUESTIONS: Contact customer service at 1-800-54-ACHIM
Visit our website at www.achimonline.com