8. WARNINGS

| LCD DISPLAY SYMBOLS FLASHING | WARNING MODE | CAUSE | SOLUTION |
|------------------------------|---|--|---|
| ğ m | Keeps flashing 1 time per second | Charging fault (high or low temperature protection) | Wait until the battery pack temperature is back to normal; reconnect the charger to recharge. |
| ₫ -@+ 🕈 | Flashing 1 time per second for 10 seconds, then off | DC output fault (over current or short-circuit protection) | Press DC output button to reset. |
| | Flashing 1 time per second for 10 seconds, then off | USB output fault (over current or short-circuit protection) | Press USB output button to reset. |
| | Flashing 1 time per second for 10 seconds, then off | AC output fault (high temperature, overload or short-circuit protection) | Press AC output button to reset. |
| ğ m | Flashing 1 time per second for 10 seconds, then off | Discharging high temperature protection | Wait until the battery pack temperature is back to normal, then press the Main Power Button to reset. |

9. TROUBLESHOOTING

| PROBLEM | POSSIBLE CAUSE | SOLUTION | |
|----------------------------|-------------------------------------|---|--|
| Power-up failure | Under-voltage protection | Recharge unit. | |
| | Abnormal load protection | Remove loads and recharge unit. | |
| | Damaged unit | Contact customer service. | |
| Charger fault | Unmatched charger | Use only the included charger. | |
| | Damaged charger | Contact customer service for replacement. | |
| | Abnormal power supply or connection | Reconnect the charger. If problem persists, replace the charger. | |
| Solar panel charging fault | Over-current | Use only the recommended solar panel. | |
| | Weak sunlight | Charge in a sunny place. | |
| | Damaged solar panel | Replace the solar panel. | |
| | Abnormal wiring-harness connection | Reconnect the wiring-harness. If problem persists, replace the solar panel. | |
| AC output fault | Battery under-voltage protection | Charge the unit. | |
| | Discharge over-current protection | Make sure loads are within allowed range (total ≤1000W). | |
| | Over-temperature protection | Turn unit off, allow to cool down and then restart. | |
| | Damaged unit | Contact customer service. | |
| Abnormal icon display | Abnormal loads | Remove loads. | |
| | Hardware fault | Contact customer service. | |
| | Damaged LCD screen | Contact customer service. | |
| LCD screen fault | Damaged LCD screen | Contact customer service. | |

10. SPECIFICATIONS

| Internal battery type | Lithium polymer |
|-----------------------|-----------------------------------|
| Capacity | 880 Wh |
| AC charging input | 20V, 6A |
| Inverter | 1000W (Pure Sine Wave) |
| AC output | 2 x 110V/60 Hz 1000W Max. |
| DC output | 3 x 12V DC, 10A Max. |
| USB Output | 3x 5V/2.4A Max.; 1 x 5V/3.0A Max. |
| Light | 2W |

11. REPLACEMENT PARTS

AC charger......930261008Z

12. BEFORE RETURNING FOR REPAIRS

For REPAIRS OR RETURNS, visit 365rma.com Visit batterychargers.com for Replacement Parts.

13. LIMITED WARRANTY

For information on our one year limited warranty, please visit batterychargers.com or call 1-800-621-5485 to request a copy. Go to batterychargers.com to register your product online.

Schumacher® is a registered trademark of Schumacher Electric Corporation.