

USE AND CARE MANUAL

Teak 2-Piece Outdoor Lounge Chair Set with 3-Position Backrest

Model: ECF83JX

IMPORTANT: Please read and retain for future reference.

1. SAFETY WARNINGS & PRECAUTIONS

WARNING: To reduce the risk of serious injury, read and understand all instructions prior to assembly and use.

WARNING: This product contains small parts which could present a choking hazard to children. Keep small parts away from children during assembly.

CAUTION: Assembly requires two adults. Do not attempt to assemble this product alone.

WARNING: Check all hardware connections periodically and tighten as necessary. Loose connections may result in product instability.

CAUTION: Maximum weight capacity: 300 lbs (136 kg) per chair. Do not exceed this limit.

WARNING: Do not stand on the chairs. This product is designed for seated use only.

CAUTION: Place chairs on level, stable surface only. Use on uneven ground may cause tipping.

WARNING: Keep away from open flames and heat sources. Teak is naturally fire-resistant but not fireproof.

CAUTION: Ensure 3-position backrest mechanism is fully locked before use.

WARNING: Inspect product before each use. Do not use if parts are damaged, broken, or missing.

CAUTION: Do not drag furniture. Lift and carry to avoid damage to legs and frame.

WARNING: Prolonged exposure to direct sunlight may cause fading of cushions. Store cushions indoors when not in use.

2. PRODUCT COMPONENTS

Your ECF83JX Teak 2-Piece Lounge Chair Set includes the following components:

Component	Description	Quantity
A	Seat Frame (Left Chair)	1 pc
B	Backrest Frame (Left Chair)	1 pc
C	Seat Frame (Right Chair)	1 pc
D	Backrest Frame (Right Chair)	1 pc
E	Left Armrest	2 pcs
F	Right Armrest	2 pcs
G	Front Leg Assembly	2 pcs
H	Rear Leg Assembly	2 pcs
I	3-Position Adjustment Mechanism	2 sets
J	Adjustment Pins/Locking Bolts	4 pcs
K	Seat Cushions	2 pcs
L	Backrest Cushions	2 pcs
M	Hardware Kit (Bolts, Nuts, Washers)	2 sets
N	Allen Wrench	1 pc

Tools Required (Not Included): Allen wrench (included), adjustable wrench, Phillips head screwdriver

3. ASSEMBLY INSTRUCTIONS

IMPORTANT: Do not tighten all screws until the final assembly step. This allows for proper alignment of all components.

Step 1: Leg Assembly

Attach front leg assembly (G) and rear leg assembly (H) to seat frame (A or C) using provided bolts and washers. Do not fully tighten yet.

Step 2: Backrest Installation

Connect backrest frame (B or D) to seat frame using 3-position adjustment mechanism (I). Insert adjustment pins (J) into desired position holes. Ensure mechanism moves smoothly.

Step 3: Armrest Attachment

Attach left armrest (E) and right armrest (F) to the frame using provided hardware. Align armrests with pre-drilled holes.

Step 4: 3-Position Mechanism Setup

Test the 3-position backrest adjustment: Lift the adjustment lever, move backrest to upright (Position 1), medium recline (Position 2), and flat (Position 3). Ensure locking mechanism engages securely at each position.

Step 5: Cushion Placement

Place seat cushions (K) on seat frames. Attach backrest cushions (L) to backrest frames using ties or fasteners provided.

Step 6: Final Tightening

Once all components are properly aligned and adjustment mechanism is tested, fully tighten all bolts using Allen wrench (N). Check stability of both chairs.

4. 3-POSITION BACKREST ADJUSTMENT GUIDE

Your teak lounge chairs feature 3 adjustable positions for maximum comfort:

Position 1: Upright (90°)

Ideal for reading, dining, or conversation. Perfect for outdoor meals or socializing. Backrest is vertical.

Position 2: Medium Recline (120°)

Relaxed lounging position. Suitable for reading, enjoying beverages, or casual conversation.

Position 3: Deep Recline (160°)

Maximum relaxation position for sunbathing or napping. Nearly flat for complete comfort.

How to Adjust:

1. Stand beside the chair and locate the adjustment lever on the right side.
2. Lift the lever to release the locking mechanism.
3. While holding the lever, move the backrest to desired position with your other hand.
4. Release the lever to lock the position. Ensure the locking pin engages fully.
5. Gently test the backrest to confirm it is locked securely before use.

WARNING: Always ensure the chair is on stable ground before adjusting positions. Never adjust while occupied. Check that the mechanism locks securely at each position.

5. TEAK WOOD CARE & MAINTENANCE

Understanding Teak Wood: Teak is a premium hardwood containing natural oils and rubber that make it naturally resistant to rot, insects, and weather. Over time, untreated teak will naturally weather to a beautiful silver-gray patina.

5.1 Regular Cleaning for Teak

Basic Cleaning: Clean with mild soap and water using a soft brush or cloth. Rinse thoroughly with clean water. Allow to air dry.

Removing Dirt: For stubborn dirt, use a soft brush and soapy water. Always brush along the wood grain direction.

Avoid: Do not use pressure washers, steel wool, or abrasive cleaners. These can damage the wood surface and remove natural oils.

Frequency: Clean every 2-3 months during active use season.

5.2 Teak Oil Treatment (Optional)

Purpose: Teak oil helps maintain the original golden-brown color of new teak. Without oil, teak will naturally weather to silver-gray.

Application: Apply high-quality teak oil using a clean, lint-free cloth. Work in the direction of the wood grain.

Frequency: Apply every 3-6 months depending on sun exposure. More frequent application needed in sunny climates.

Important: Apply only to clean, dry wood. Allow oil to penetrate for 15-30 minutes, then wipe off excess. Allow 24 hours to dry before use.

Note: Once you start oiling teak, you must continue to maintain the oiling schedule to prevent uneven coloring.

5.3 Natural Weathering (Silver-Gray Patina)

If you prefer the natural silver-gray appearance of weathered teak:

- Allow teak to age naturally without oil treatment
- Clean regularly to remove dirt and prevent mold

- Weathering process takes 6-12 months depending on climate
- Weathering does not affect strength or durability of the wood

5.4 Cushion Care

Cleaning: Remove cushion covers (if removable) and machine wash cold on gentle cycle. Air dry only. Do not bleach.

Spot Cleaning: For non-removable covers, spot clean with mild soap and water. Blot dry with clean towel.

Storage: Store cushions indoors when not in use. Do not leave cushions in direct sunlight for extended periods to prevent fading.

Water Protection: Cushions are water-resistant but not waterproof. Remove standing water promptly. Allow to air dry completely before storage.

6. SEASONAL MAINTENANCE

Spring Setup:

- Inspect teak wood for cracks, splits, or damage. Teak is naturally durable but check for any issues.
- Clean thoroughly to remove winter dirt and debris.
- If maintaining golden color, apply first coat of teak oil for the season.
- Check all hardware and tighten if necessary.
- Test 3-position adjustment mechanism and lubricate if needed.
- Clean cushions and allow to air dry completely before use.

Summer Care:

- Clean teak monthly with soap and water to remove dirt and body oils.
- Wipe up spills immediately to prevent staining.
- Rotate cushions regularly to ensure even wear and sun exposure.
- Store cushions indoors during heavy rain or when not in use for extended periods.
- Reapply teak oil if maintaining golden color (every 2-3 months in sunny climates).

Fall Preparation:

- Deep clean all teak surfaces.
- If storing for winter, apply final coat of teak oil (if oiling) to protect during storage.
- Clean and thoroughly dry all cushions before storage.
- Inspect and repair any damage before winter storage.
- Check that adjustment mechanisms are clean and lubricated.

Winter Storage:

- Store furniture in dry, covered area (garage, shed, or basement) if possible.
- If outdoor storage is necessary, use high-quality waterproof furniture covers.
- Ensure covers allow air circulation to prevent mold and mildew.
- Elevate furniture slightly off ground to prevent moisture damage.
- Store cushions separately in dry, ventilated area indoors.

- Check periodically for mold or mildew during storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Teak surface rough or splintering	Weathering; lack of maintenance	Sand lightly with fine-grit sandpaper (220 grit) along grain; apply teak oil
3-position backrest won't lock	Loose hardware or worn mechanism	Tighten all bolts; check adjustment pins; lubricate mechanism
Chair wobbles or feels unstable	Uneven ground or loose legs	Ensure level surface; tighten leg hardware
Cushions waterlogged	Prolonged rain exposure	Remove covers if possible, air dry completely. Replace if moldy
Metal hardware rusting	Exposure to moisture	Replace with stainless steel hardware; apply protective wax
Teak has black spots or mold	Moisture buildup; poor air circulation	Clean with mild bleach solution (1:10), rinse, dry in sun. Improve airflow
Backrest difficult to adjust	Dirty or dry mechanism	Clean mechanism; apply light lubricant (silicone spray)
Cushion covers faded	Sun exposure	Rotate cushions; store out of sun when not in use

8. WARRANTY INFORMATION

Limited Warranty: This product is warranted against defects in materials and workmanship for a period of one (1) year from the date of purchase.

What is Covered: Defects in materials and workmanship under normal use and maintenance. Teak wood is naturally resistant to rot and insects; this natural resistance is part of the material properties.

What is NOT Covered: Damage resulting from misuse, abuse, neglect, improper assembly, unauthorized modifications, natural weathering (color change), fading, or normal wear and tear.

Claim Procedure: To make a warranty claim, contact customer service with proof of purchase and photos of the defect. Do not return product to store without authorization.

Limitation of Liability: This warranty is in lieu of all other warranties, express or implied. Manufacturer shall not be liable for incidental or consequential damages.

9. CUSTOMER SERVICE

For questions, replacement parts, or warranty claims:

Email: Nicesure-aftersales@outlook.com

Model Number: ECF83JX (Have this ready when contacting us)

10. PRODUCT SPECIFICATIONS

Specification	Details
Model Number	ECF83JX
Product Name	Teak 2-Piece Outdoor Lounge Chair Set with 3-Position Backrest
Configuration	2-Piece Set (2 Lounge Chairs with Cushions)
Material	Solid Teak Wood (Tectona grandis)
Cushion Material	Water-Resistant Polyester Fabric
Weight Capacity	300 lbs (136 kg) per chair

Backrest Positions	3-Position Adjustable (Upright, Medium Recline, Deep Recline)
Assembly Required	Yes (2 adults recommended)
Country of Origin	China

RETAIN THIS MANUAL FOR FUTURE REFERENCE