

# INSTRUCTION MANUAL OF ELECTRIC OVEN

MODEL NO.: HF-120

HIOVEN20L16X13B



Power Consumption: 1200W

Rated Voltage: 120V~60Hz

**Carefully read all the instructions before using the appliance and keep this manual for future reference.**

#### IMPORTANT SAFEGUARDS:

1. Never immerse the housing, which contains electrical components and the heating elements, in water nor rinse it under the tap.
2. Do not let any water or other liquid enter the appliance to prevent electric shock.
3. Never touch the inside of the appliance while it is operating.
4. Ensure all packaging materials and any promotional labels or stickers are removed from the oven before first time use.
5. The temperature of accessible surfaces may be high when the appliance is operating. Do not touch hot surface, Use handles or knobs.
6. This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
7. Children should always be supervised to ensure that they do not play with this product.
8. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not operate appliances with damaged cord or plug or after the appliances Malfunctions, or has been damaged in any manner.
10. The use of accessory attachments not recommended may cause hazard or injury.
11. Do not place this oven on or near a hot gas or electric burner or in a microwave oven.
12. When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
13. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
14. To disconnect, turn all the knobs to OFF, then remove the plug. Always hold the Plug, but never pull the cord.
15. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
16. Do not cover any part of the oven with metal foil.
17. Use extreme caution when removing tray or disposing of the hot grease or other hot liquids.
18. Do not clean with metal scouring pads pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
19. Never leave the appliances unattended while broiling or toasting.
20. Over sized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
21. A fire may cause if the oven is covered or touching inflammable material, including curtains draperies, walls and like, when on operation. Do not store any item on the oven during operation.
22. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
23. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
24. **When not in use, always unplug the unit.** Do not store any materials, other than recommended accessories in this oven.
25. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
26. This appliance is not intended to be operated by means of an external timer or separated remote-control system.
27. This appliance is for **HOUSEHOLD USE ONLY**. Do not use outdoors.
28. Do not use appliance for other than intended use.
29. **WARNING:** Polythene bags over the product or packaging may be dangerous. To avoid danger of suffocation, keep away from babies and children. Such bags are not toys.
30. **WARNING:** For safety' s sake, when using non-stick cookware or electric appliance with nonstick coatings, keep your pet birds out of the room. Birds have respiratory systems that are sensitive to many kinds of fumes, including fumes from overheated nonstick.



The temperature of all surfaces marked with this symbol will be very hot when the appliance is in use and after use, **CAUTION: HOT SURFACE**. Do not touch these surfaces as possible injury could occur. Allow to cool completely before handling this appliance.


# 148mm

## NAME OF PARTS:



1. **Timer switch knob** – To set cooking time up to 60 minutes, it will automatically turn the oven off with bell ring when the set time reach.
2. **Indicator light** – Showing the status of the oven power supply.
3. **Heater switch knob** – To set heater working mode by turning knob to desired setting.
4. **Thermostat switch knob** – To adjust the desired cooking temperature.
5. **Door handle** – For nice looking and safety door opening.
6. **Tempered glass door** – Keeping the heat inside the oven and for clear viewing of the food cooking.
7. **Bake tray** - Use for all your baking and roasting needs.
8. **Wire rack** - Use for broiling and baking needs.
9. **Tong** – Use for moving the bake tray and wire rack

# 210mm

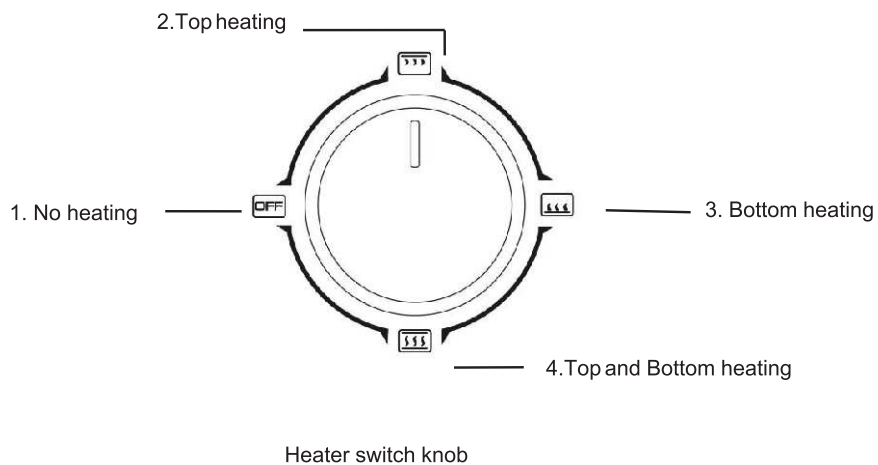

Heater switch knob

# OPERATION INSTRUCTIONS

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY

## Before using your oven for the first time

Be sure to:


1. Make sure that the oven is unplugged and all the knobs are in the "OFF" position.
2. Clean all the accessories from the package before cooking by a safe way.
3. Thoroughly dry all accessories and re-assemble into the oven. Plug oven into outlet and you are ready to use your new oven.
4. After re-assembling your oven, we recommend that you run it at the max temperature for approximately 15 minutes to eliminate packing odor that may remain after shipping.

## USING YOUR OVEN

### HELPFUL HINTS

1. Be relieved if there is any smoke for the first operating, as it is normally for the first heating, and it will disappear within 15 minutes.
2. In general, it is not necessary to preheat the oven, But you may get better results if you heat the oven before cooking some delicate meals, such as rare medium meat and cakes.
3. If you want to stop cooking before the timer stops, just turn the timer switch knob to the OFF position. It will cancel the cooking.
4. When not in use, turn all the knobs to OFF position for safety and then the indicator light will turn off.
5. You can choose the Bake tray or Wire rack or both together for cooking, it depends on your cooking idea and the food itself.
6. The bake tray will help for easy cleaning, as it can collect the crumbs and oil when you set it at the bottom position of the cavity.
7. You can use this oven for **BAKE,BROIL,TOAST,ROAST,REHEAT** functions.


### HOW TO BAKE

1. Place Bake tray with food into the bottom position of the oven.
2. Turn the heater switch knob to on the third position  , use the mode of Bottom heating.
3. Turn the Thermostat switch knob to the desired temperature.
4. Turn the Timer switch knob to the desired cooking time.
5. When cooking completed, open the door completely and remove the food.
6. Turn all the knobs to OFF position to switch off the oven if all cooking completed.

**Tips:** Baking function can be used for roasting meats including chicken, baking cakes, cookies and more.


### HOW TO BROIL

1. Place Bake tray or Wire rack with food into the top position of the oven.

2. Turn the heater switch knob to on the second position , use the mode of Top heating.
3. Turn the Thermostat switch knob to the desired temperature.
4. Turn the Timer switch knob to the desired cooking time.
5. When cooking completed, open the door completely and remove the food.
6. Turn all the knobs to OFF position to switch off the oven if all cooking completed.


**Tips:** Broiling function can be used for beef, chicken, fish and more others, and also can be used to top-brown casseroles and gratins.

## HOW TO TOAST

1. Place Bake tray or Wire rack with food into the middle position of the oven.
2. Set the temperature switch knob to max temperature.
3. Turn the heater switch knob to the fourth position , use the mode of Top&Bottom heating.
4. Turn the Timer switch knob to the desired cooking time.
5. When cooking completed, open the door completely and remove the food.
6. Turn all the knobs to OFF position to switch off the oven if all cooking completed.


**Tips:** Toasting function can be used for bread, chicken, beef, and more others. Toasting function can brown and crisp the outside of your bread while keeping the inside soft and moist.

## HOW TO ROAST

1. Place Bake tray or Wire rack with food into the bottom position of the oven, then close the door.
2. Turn the Thermostat switch knob to the desired temperature.
3. Turn the heater switch knob to the fourth position , use the mode of Top&Bottom heating.
4. Turn the Timer switch knob to the desired cooking time.
5. When cooking completed, open the door completely and remove the food.
6. Turn all the knobs to OFF position to switch off the oven if all cooking completed.

**Tips:** Roast function can be used for cooking a variety of meats and poultry that are tender and juicy on the inside and roasted to perfection on the outside.

## HOW TO REHEAT

1. Place Bake tray with food into the bottom position of the oven, then close the door.
2. Turn the Thermostat switch knob to the desired temperature, suggest :160 °C .
3. Turn the heater switch knob to the fourth position , use the mode of Top&Bottom heating.
4. Turn the Timer switch knob to the desired cooking time, suggest : 15 minutes.
5. When cooking completed, open the door completely and remove the food.
6. Turn all the knobs to OFF position to switch off the oven if all cooking completed.

**Tips:** Reheat function is ideal for reheating leftovers without browning.

## CLEANING

1. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. Make sure that the appliance is cool safe temperature and unplug from outlet before cleaning.
3. Do not immerse appliance in water or wash it under waterspout.
4. Removable wire rack, bake tray, crumb tray (if applicable) can be washed, as normal kitchenware.
5. Clean outside of appliance with a damp sponge.
6. Do not use abrasive cleaners or sharp utensils to clean the oven, as it will result in scratch and may bring safety problem.
7. Let all parts and surfaces dry thoroughly prior to plugging oven in and using for another time.

## SAFETY NOTICE:

KEEP OUT OF CHILDREN REACH AND THERE IS ALWAYS ATTENDED BY AN ADULT WHILE OPERATING THE OVEN.