
 


Check that you have all your parts and accessories.

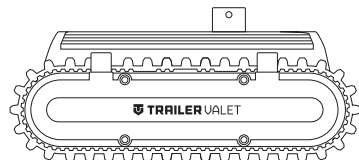

RVR5 UNIT



ROTATION PIN



STOW PIN & COTTER PIN



 
SECURITY BOLT



BRACKET CLAMPS (2X)




BASE TOWER




BRACKET BOLTS (4X)



 
MOUNTING JOINT




BRACKET

 

REMOTE CONTROL

 

SCREWS (4X)

 

BATTERY CHARGER




MANUAL





# TRAILER VALET RVR5 w/ MOUNT BRACKET

## Quick Start Guide


**NOTE:** Make sure that unit is fully charged. First charge at least 6-8 hrs.

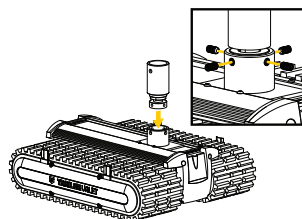

  
1. Fit the Base Tower into the slot on the top of the RVR and secure with the four included screws. Install the Mounting Joint on top of the Base Tower and secure with Rotation Pin.




4. To start maneuvering, simultaneously press and hold forward/backward and right/left buttons.

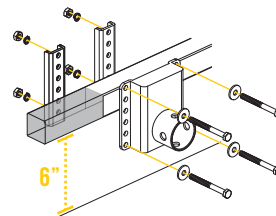


2. Check trailer height and ensure installation is on a flat surface. Install the RVR Mounting Bracket to the trailer frame. (at least 6 inches of clearance)

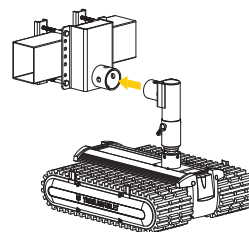

5. Use the remote to move the unit towards the bracket socket.

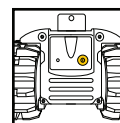


FRONT OF RVR

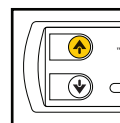

REMOTE CONTROL

3. Turn on RVR by press the start/stop button located on the front of the RVR. Turn on the remote control by pushing the forward button once (hold for a few seconds)

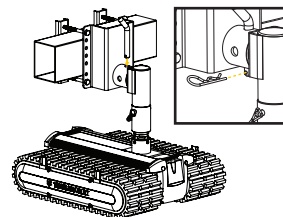


6. Install and secure the unit utilizing the stow pin, and start moving!

To use the RVR with a drill, read the manual for step-by-step instructions. For supporting documents, visit us at [support.trailervalet.com](https://support.trailervalet.com).

Scan the QR code to access some helpful videos to help you get started and **#MoveForward**.




Check that you have all your parts and accessories.

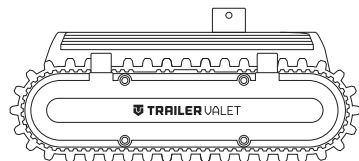

RVR5 UNIT



 
SPANNER WRENCH



ROTATION PIN



 HITCH BALL




COUPLING PLATE




BALL BASE



 
BASE TOWER



REMOTE CONTROL

 

SCREWS (4X)

 

BATTERY CHARGER





MANUAL



# TRAILER VALET RVR5 w/ BALL TOWER

## Quick Start Guide

**NOTE:** Make sure that unit is fully charged. First charge at least 6-8 hrs.

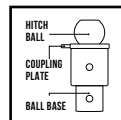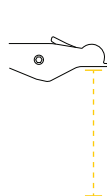

COMPLETE

1.

Check trailer height and set up hitch ball and base. Ensure installation is on a flat surface.


2.

Fit the Base Tower into the slot on the top of the RVR and secure with the four included screws.





4.

To start maneuvering, simultaneously press and hold forward/backward and right/left buttons.

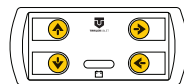

5.


Attach the hitch ball w/ ball base to the coupler and tighten - Don't forget your spanner wrench and tighten that locking nut.

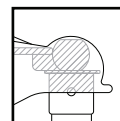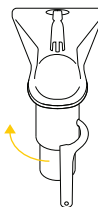


LOCK

3.


Turn on RVR by press the start/stop button located on the front of the RVR. Turn on the remote control by pushing the forward button once (hold for a few seconds)

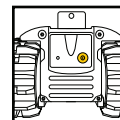

FRONT OF RVR

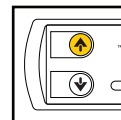

REMOTE CONTROL

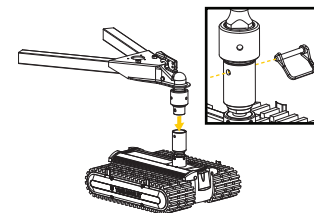

6.

Using your trailer jack, lower the hitch towards the unit's rotating coupler and attach a rotation pin to secure and start moving!

To use the RVR with a drill, read the manual for step-by-step instructions. For supporting documents, visit us at [support.trailervalet.com](https://support.trailervalet.com).

Scan the QR code to access some helpful videos to help you get started and **#MoveForward**.

