



Bellefurn

Outdoor Furniture Maintenance Manual

1. Introduction

Thank you for choosing our outdoor furniture. Proper maintenance is essential to preserve the appearance, durability and service life of your furniture. This manual provides simple and practical maintenance guidelines to help you take better care of your furniture.

2. Daily Cleaning

Regular daily cleaning can effectively remove dust, dirt and light stains on the furniture surface, preventing them from accumulating and causing damage.

- Prepare a clean, soft cloth and a basin of warm soapy water (use neutral detergent, such as ordinary hand-washing soap, avoid using strong alkaline or corrosive cleaners).
- Dip the cloth in the soapy water, wring it out until it is slightly damp (do not leave excessive water on the furniture surface, especially for wooden or metal furniture).
- Wipe the furniture surface gently in a circular motion to remove dirt.
- After cleaning, use another clean, dry cloth to wipe the surface thoroughly to ensure no water residue remains.

3. Cushion Cover Care

The cushion cover of our outdoor furniture is designed to be detachable and machine washable for easy cleaning. Please follow the steps below to clean it:

- First, unzip or unfasten the fasteners on the cushion cover and remove it from the cushion core.
- Before washing, check the cover for stubborn stains and pre-treat them with a small amount of neutral detergent (do not rub vigorously to avoid damaging the fabric).
- Put the cushion cover into the washing machine. Select the gentle washing mode with cold or warm water (water temperature not exceeding 30° C).
- Use neutral laundry detergent. Do not use bleach, fabric softener or other chemical additives that may damage the fabric's water resistance or color fastness.
- After washing, take out the cushion cover promptly and hang it to dry in a cool, ventilated place. Avoid direct sunlight exposure to prevent fading and fabric aging. Do not tumble dry.
- After the cover is completely dry, put it back on the cushion core and fasten the zippers or fasteners.

4. Storage and Dust Prevention (When Not in Use)

Proper storage when the furniture is not in use (such as during long rainy seasons, winter or when you are away for a long time) can significantly extend its service life.

- Dust Prevention with Furniture Cover: Choose a high-quality, waterproof and breathable outdoor furniture cover that fits the size of your furniture. Before covering, ensure the furniture surface is completely clean and dry. Cover the furniture tightly to prevent dust, rainwater and debris from entering. Regularly check the cover for damage or water accumulation and deal with it in time.
- Indoor Storage: If conditions permit, move the furniture to a dry, well-ventilated indoor space (such as a garage, storage room or basement). Before storage, clean the furniture and cushion covers thoroughly and ensure they are completely dry to prevent mold growth. Avoid placing the furniture in a damp, dark or direct sunlight-exposed indoor area.

5. Customer Service

If you have any questions about furniture maintenance, please contact our customer service team:

- Email: LaurenTemples@outlook.com

- Phone: 1-888-733-8169

We are committed to providing you with high-quality products and services.