



Item #658477

Model #APH03715K01

## USE AND CARE GUIDE

---

### NILES PARK 18 IN. ROUND CAST TOP SIDE TABLE



Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. - 6 p.m., EST, Monday - Friday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

---

#### **THANK YOU**

*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this dining table.*

*We strive to continually create quality products designed to enhance your home.*

*Visit us online to see our full line of products available for your home improvement needs.*

*Thank you for choosing Hampton Bay!*

# Table of Contents

---

Table of Contents.....	2	Assembly.....	5
Warranty .....	2	Maintenance .....	6
What is Covered .....	2	Care and Cleaning .....	6
What is Not Covered .....	2		
Pre-Assembly .....	3		
Planning Assembly.....	3		
Hardware Included.....	3		
Package Contents.....	4		

# Warranty

---

## 3 Year Frame Limited Warranty

### What is Covered

We warrant the frame to be free of manufacturing defects to the original purchaser for three years.

### What is Not Covered

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact Customer Care at 1-855-HD-HAMPTON or visit [www.HamptonBay.com](http://www.HamptonBay.com).

# Pre-Assembly


## PLANNING ASSEMBLY

Identify all parts packed in the carton against the parts list. Remove all protective materials. Place parts on a non-abrasive surface to avoid scratching. If you are missing any parts or are unsure how to proceed with the assembly, call our Customer Service Team at 1-855-HD-HAMPTON. Do not attempt assembly if any parts are missing or damaged.

Two people may be required to assemble the table.

Damage to welds or frames resulting from over tightened bolts or improper assembly is not covered under our warranty. Please read all instructions carefully before assembly. If you have any questions regarding your assembly, call our Customer Service Team at 1-855-HD-HAMPTON.

## HARDWARE INCLUDED



 
NOTE: Hardware not shown to actual size.



Part	Description	Order Part #	Quantity
AA	1/4 in. x 18 mm Bolt	HW0035	4
BB	1/4 in. x 28 mm Bolt	HW0084	8
CC	Ø6.5 x 1.0 mm Washer	HW0004	12
DD	Bolt Cover	HW0105	12
EE	Hex Bolt Driver	HW0006	1
FF	Foot Cap (Preassembled)	FC0614	4

# Pre-Assembly (continued)

## PACKAGE CONTENTS

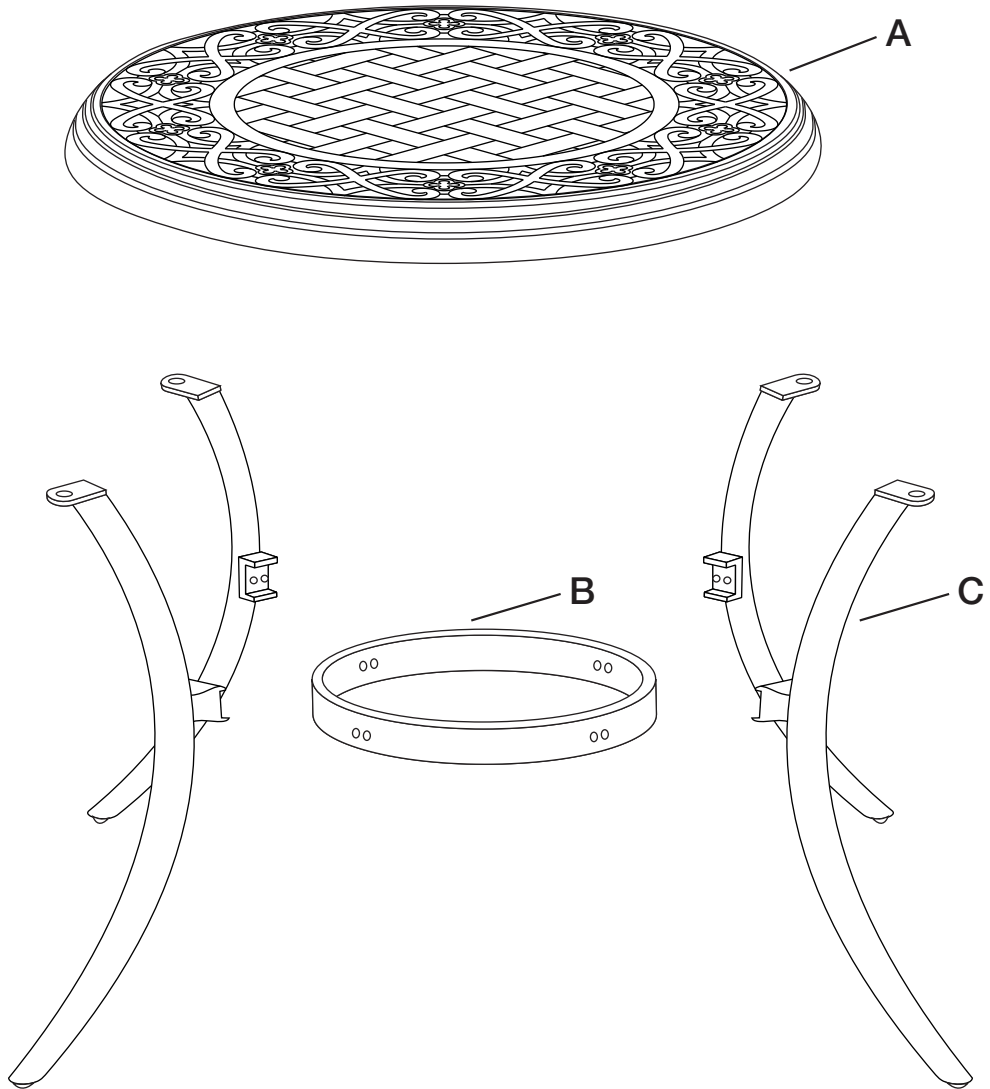


Part	Description	Order Part #	Quantity
A	Tabletop	AT71905	1
B	Leg Connector Bracket	AT71906	1
C	Table Leg	AT71907	4

# Assembly

 
## 1 Attaching the table legs

- Place the tabletop (A) up-side down on a flat, solid surface.
- Attach a table leg (C) to the tabletop (A) using a 1/4 in. x 18 mm bolt (AA) and washer (CC) as shown in the diagram.
- Guide the 1/4 in. x 18 mm bolt (AA) through the hole in the table leg (C), and into the pre-drilled hole in the tabletop (A).
- Hand tighten three to four turns only. (Do not tighten completely. Some adjustments may be necessary to ensure proper alignment of the table legs.)
- Repeat for the other three legs.

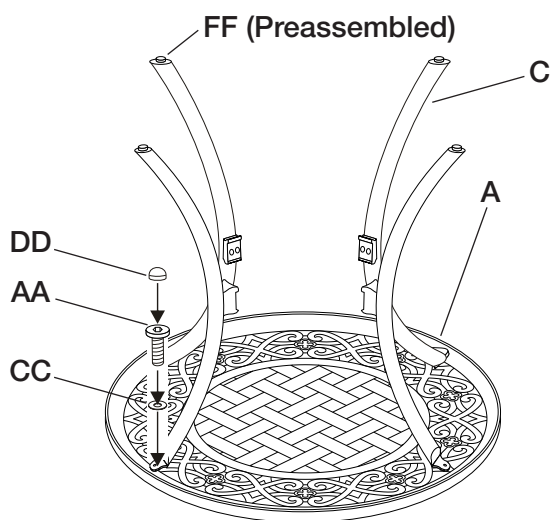

## 2 Attaching the leg connector bracket

 - Attach a leg (C) to the leg connector bracket (B) using two 1/4 in. x 28 mm bolts (BB) and washers (CC) as shown in the diagram.
- Guide two 1/4 in. x 28 mm bolts (BB) through the holes in the leg connector bracket (B) into the pre-drilled holes in the legs (C).
- Hand tighten only.
- Repeat for the other three legs.

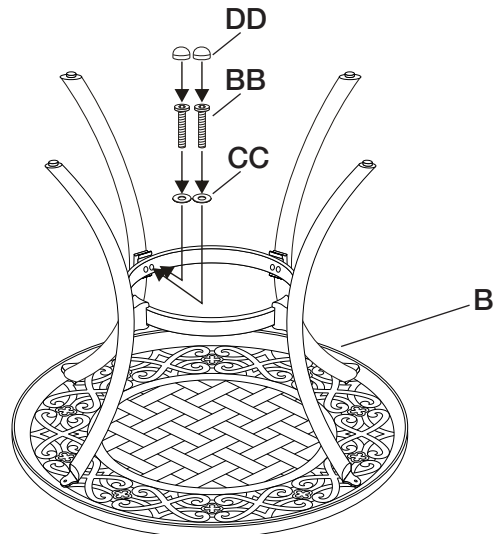

## 3 Tightening the nuts to the bolts

- Use the hex bolt driver (EE) to tighten all bolts (AA) and (BB).
- Do not over tighten. Over tightening may strip bolts.
- Cover all bolts (AA) and (BB) with covers (DD).

## Maintenance

---

Periodically clean and dry thoroughly. Be sure to drain any water accumulated inside the frame. To thoroughly drain the frame, remove the foot caps and tilt the frame, if necessary, to remove all water. This is critical. Water allowed to accumulate inside the frame and then exposed to sub-freezing temperatures can cause damage to the frame tubing. Such damage is not covered under the warranty. Always clean, drain, and dry thoroughly before storing for the winter. For best results, always store or cover your furniture when not in use. We recommend commercially available outdoor furniture covers. Any small nicks or scratches can be covered with a light application of touch-up paint.

## Care and Cleaning

---

Use mild soap and warm water. Do not use abrasive materials, cleansers, or bleach products. Rinse with clean water and dry thoroughly.



Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. - 6 p.m., EST, Monday - Friday

**1-855-HD-HAMPTON**

**HAMPTONBAY.COM**

Retain this manual for future use.