

KESNOS

Home Dehumidifier

Please read the manual carefully
before using the unit

PD253D

USER MANUAL

FOR CUSTOMERS

Thank you for purchasing our dehumidifier.

Kesnos wishes that our products and services can bring convenience to your work and life. We highly recommend that you keep the manual for reference if you encounter unexpected events using the unit.

Please read the manual carefully to ensure proper use of the dehumidifier. Our dehumidifiers are widely used in family bedrooms, bathrooms, basements, offices and storage rooms, etc.

The dehumidifiers from **Kesnos** provide quick and efficient operation to reduce room's humidity and bring you a healthy and comfortable life.

TO ACCESS CUSTOMER SUPPORT FASTER

If there is any problem of the product, please contact Kesnos Customer Service at support@kesnos.com with your Purchase Order ID to help you address the problem more effectively.

BEFORE FIRST USE:

To prevent any internal damage, it is very important to keep the unit (like this one) upright throughout its journey.

Please leave it standing as the picture shown below and outside the box for **24 HOURS** before plugging it in.

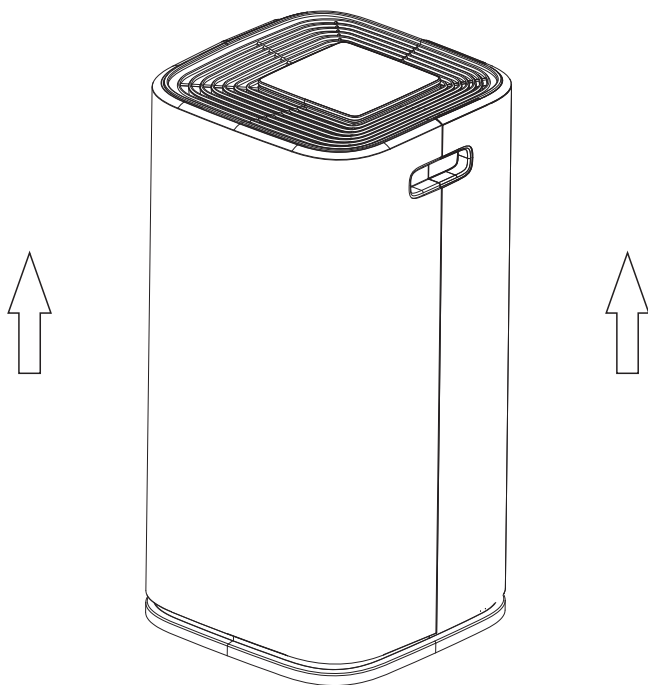 


TABLE OF CONTENTS

Safety Instructions.....	01
Parts Description	02
Control Interface.....	03
Operation Instructions.....	04
Cleaning & Maintenance.....	10
Troubleshooting.....	13
Special Notes.....	16
Technical Parameters.....	17
Warranty & Contact Us.....	18

Statement

The graphics and functions provided in this manual may not be the same as the actual product. Please always refer to the actual product.

The model of the machine on the manual is for reference only, please check the corresponding content and operate the machine based on the actual product.

 
The right to interpret the relevant terms belongs to the company.

SAFETY INSTRUCTIONS

Safety Notes:


For your safety, please read the manual carefully and keep the manual for future reference. Please use this product according to the instructions of installation and operation of this manual.

- Before cleaning the dehumidifier, turn off the power and unplug it from the power outlet.
- Please do not place the machine near heat or flammable dangerous goods.
- Do not insert your fingers or sticks into the air inlet or outlet.
- Always keep the machine on even surfaces, avoid placing the machine on uneven or sloping ground.
- Do not spray water, pesticides or liquids on the unit.
- This machine should not be placed in a confined and narrow space.
- When the power cord is damaged, it must be replaced by a technician approved by the company.
- When using the dry clothes function, the clothes should be kept at least 15.7inches away from the air outlet to prevent water from entering the machine and damaging the machine.
- Machine power supply wiring must be in accordance with national wiring rules, and, the power line need to be connected with the external grounding line.
- Model Specification of Safety Tube: 3.15A
- This appliance can not be used by children aged under 8 years old and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- This dehumidifier is designed to operate in a working environment between 41°F (5°C) and 95°F (35°C).
- When using the dehumidifier, other objects surrounding the machine need to be kept at least a distance of 7.9 inches (20cm) as shown in the picture on the right:

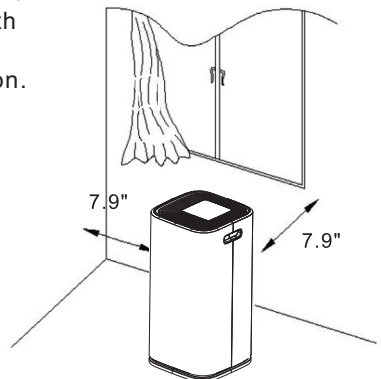


PARTS DESCRIPTION

  Front

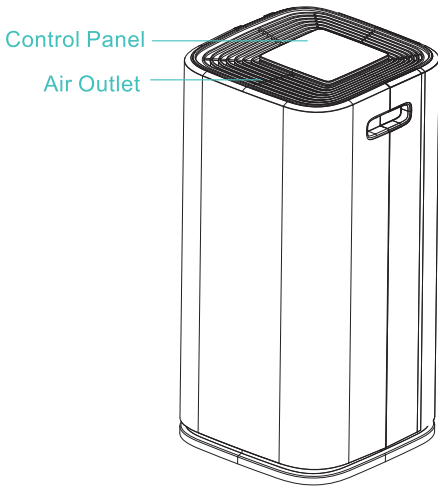

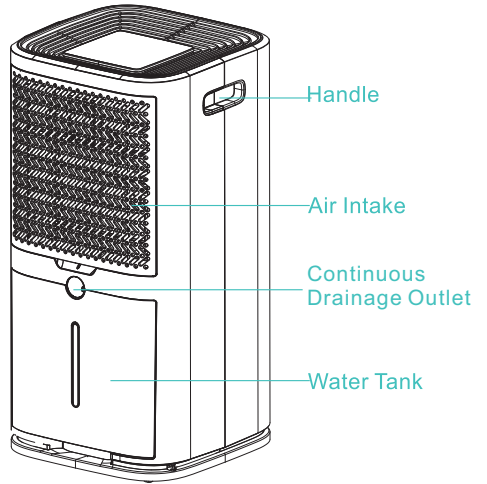

Rear





1. Control Panel





 **Child Lock**
Press the button and hold for 2 seconds, the control panel will be locked.


 **Timer Button**
Press to initiate the auto-start or auto-stop feature.

 **Mode Button**
Press mode button to choose "DRY CLOTHES" function.

 **Lighting Button**
Control the LED panel's light on/off.

 **Speed Button**
Control the fan speed.

 **Dehumidify Button**
Press to set up/down the humidity value.

 **Power Button**
Press to turn the dehumidifier on and off

2.Setting

Setting Humidity

The humidity level can be set within a range of 30%RH to 80%RH in 5% increments.

- When it starts to work, it will first automatically detect and show the room's humidity.

In dehumidification mode (other modes are invalid), press the "DEHUMIDIFY" button, you can change the humidity selection.

After no operation for 5S, "88" will show the actual room humidity.

- When the humidity level is higher or drops to the level you have set, the dehumidifier will automatically begin to work or stop.
- When the humidity level is set at 30%RH, the dehumidifier will be work at continuous dehumidifying mode.

TIMER Setting

This TIMER setting function is designed for you to set a time to turn off (when the machine is on) or turn on (when the machine is off) the machine, automatically by the timer.

1. Press the "TIMER" button select the timer by 1-hour increment. You can set the timer up to 24 hours which can be reset after invalid. It will start to do the countdown when you start the timer.
2. Press and hold the "TIMER" button for several seconds to make the timer selection faster.
3. If the time is set to 00, this is called the invalid time. If you successfully set the timer, the timer indicator " — " will light up. Press the "TIMER" icon, the LED screen will display the remaining setting time, and return to the current humidity after seconds.

OPERATION INSTRUCTIONS

Speed Button

Control the fan speed. Press to select either High or Normal fan speed. Higher fan speed will result in quicker moisture removal. Set the speed high for maximum moisture removal. When the humidity has been reduced and quiet operation is more preferred, set the fan speed back to Normal.

Light Function Settings

1. In power-on status, press the "LIGHTNING" button to turn on or turn off the backlight;
2. When the light function is powered on, except the "Power" button and the "Lighting" button is on, other backlight indicators will be off.



LOCK(2S)

When the unit is turned on, press "LOCK" and hold on for 2 seconds, the control panel will be locked together with the other buttons. To unlock the control panel, press and hold the "LOCK" button again for 2 seconds.

Power Off Memory Function

- The device automatically restores the working state after power on.
- If the device is turned on and a power interruption occurs, after starting the unit again, it will keep the previous parameters or settings that were set up.
- If the device is turned off and power interruption occurs, the device will still be in a power off status when turned on.

Overflow Protection

When the water tank is full of water, the machine will turn off automatically. The indicator light  will flash. After you empty the water from the tank the indicator light  will turn off. The machine will restart to work.

Caution:

Water tank must be placed in right position, otherwise will cause the water full alarm.








Auto Defrost Feature

When the dehumidifier is running at a lower temperature, the system will automatically determine whether there is a presence of frost. If any frost exists, it will defrost automatically.

Defrost Action

The fan runs at high wind speed when the compressor stops, and the LED screen displays the defrosting symbol.

3.Display Status Description

- When the device is currently powered on, before any operation, only the "POWER" light will be up indicating the device is in "Standby" status.
- Timing indicator " — " : If the timer is set up properly, the indicator light will be up, flash if press TIMER button again to check and reset, and go out if non-successful setup.
- Lighting indicator "  " : If the lighting function is powered on, the light button will be on, but other backlight indicators will be off.
- High-speed icon "  " : If you set the unit to high speed fan mode, this icon will light up.
- Low-speed icon "  " : If you set the unit to low speed fan mode, this icon will light up.
- Dehumidification indicator "  DEHUMIDIFY " : When the machine starts to dehumidify, this icon will light up.
- Dry clothes icon "  DRY CLOTHES " : When the machine is selected to work in dry clothes mode, this icon will light up.
- Water full alarm "  " : When the water tank is full, this icon will flash.
- LOCK indicator "  " : this indicator will light up when the control panel is locked successfully, otherwise it will be off.
- When the dehumidifier normally works, " 88 " will display the current humidity.

4. Instructions for Drying Clothes

The dehumidifier can be used for drying clothes in rainy weather.

Step 1.

Hang the washed clothes in a small space such as cloakroom, bathroom, or storage room.

Note: Keep away the unit from the water drips of the washed clothes.

Step 2.

Open the dehumidifier and set the humidity level at 30%RH. It's the best if you let the air outlet of the dehumidifier to blow air to the clothes directly.

1. The drying effect will vary from the thickness of clothes, the number of clothes and the size of the drying space. Theoretically, the effect will be better when clothes are few, thin and space is small.

2. The drying process would take 3-8 hours, and we suggest that continuous drainage mode would be more suitable when drying clothes.

5. Fault & Processing Methods

Fault Phenomenon	Analysis of Causes	Processing Method
Humidity always shows "25% RH" — but there is a big difference from the actual humidity.	Humidity sensor failure?	Set the humidity to 30%RH,the dehumidifier can still continue to work, and can be used normally. Repair and replace the humidity sensor.
Humidity always shows "99% RH" — but there is a big difference from the actual humidity.	Water on the surface of humidity sensor?	The dehumidifier is not affected and can continue to work, and can be used normally. Please let the dehumidifier keep working for a period of time, after the water on the surface of humidity sensor is removed, it will return to normal. Repair and replace the humidity sensor.

If the malfunction is still present, please don't hesitate to contact Kesnos Customer Service email: support@kesnos.com for help.

Note:

Before starting the machine, please ensure that the air outlet has been opened, otherwise the machine will overheat. Do not pull out the power cord directly to stop the machine.

CLEANING AND MAINTENANCE

 
 
 
 
 
6. Empty The Water Tank

Two ways are available to remove the collected water.

Use the Water Tank

When the water tank is already full, the Full Tank Alert indicator will light up, the dehumidifier will automatically shut down until the tank has been emptied and placed back to the unit.


Ways to Empty the Water Tank

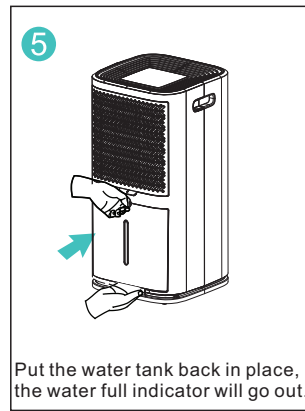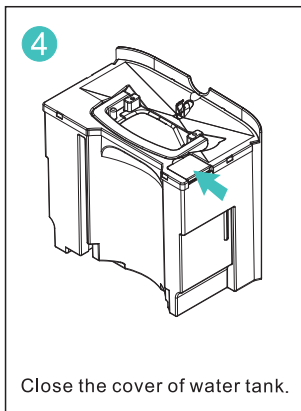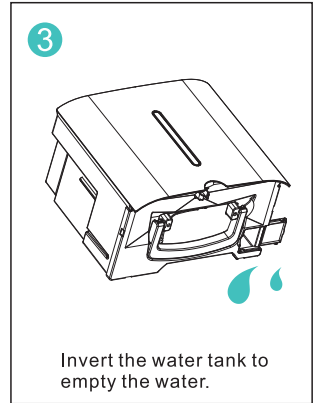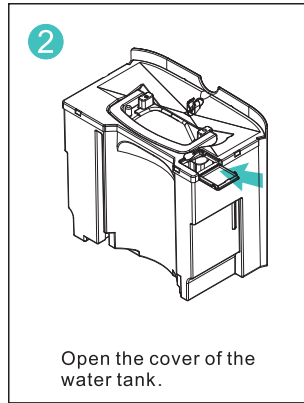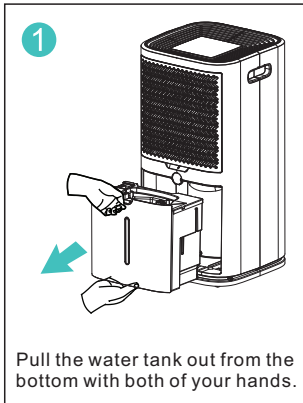

CLEANING AND MAINTENANCE

Note:

 - Do not remove the float from the water tank. If the float in the water tank is removed, the sensor may not be able to determine the water level stored in the tank properly that may lead to water overflow leak from the water tank.
- If the water tank is dirty, just use cold water or warm water to clean it. Do not use detergent, steel wool, chemically treated dust cloth, gasoline, benzene, thinner or other solvents. Otherwise, it may damage the water tank and cause it to leak.
- When placing back the water tank, use your hands to press the tank back in its place. If the water tank is not placed properly, sensors or protections from water overflow may not operate as expected.

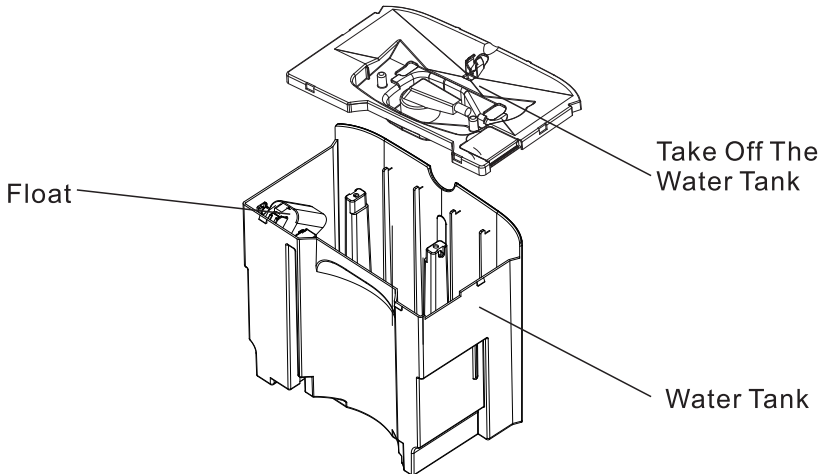


CLEANING AND MAINTENANCE

7. Continuous Drainage


Remove the power supply, take out the water tank, open the drainage cap, insert the water hose into the continuous drain drainage port and put back the water tank. Connect the power supply to start the operation. The outlet of the water hose should be lower than the continuous drainage port by more than 3.9 inches, and can not be bent. (Note: The diameter of continuous drainage port is 0.63 inches.)

 1

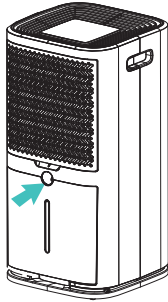


Open the drainage cap

 2

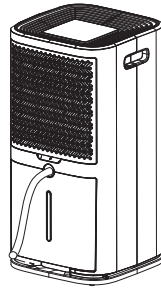

 Insert the water hose into the continuous drainage port

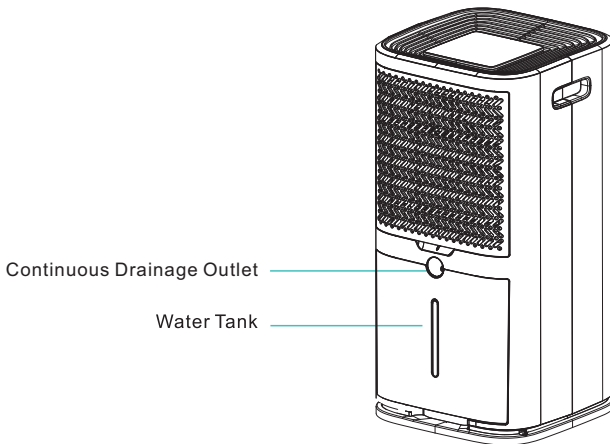

CLEANING AND MAINTENANCE

⚠ WARNING:

 
 
 
Turn the dehumidifier off and remove the plug from the wall outlet before cleaning.

A-Cleaning the dehumidifier body

Please use a soft and a slightly wet textile or cloth to clean it.

B-Cleaning filter

- 1 Pull out the filter.
- 2 Clean the filter: Use a vacuum cleaner to gently remove the dust from the surface of the filter. If the filter very dirty, clean it with warm water and mild detergent and dry it completely.
- 3 Slowly insert the filter back into the machine body.

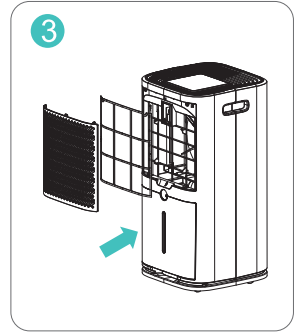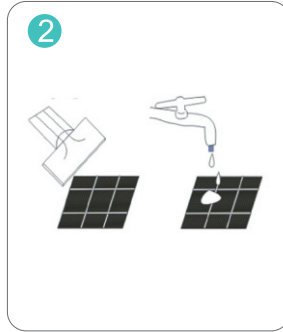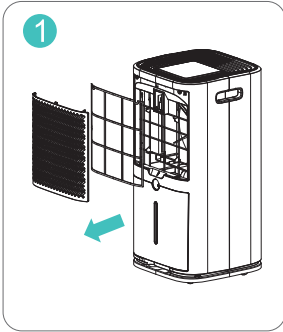

C-Dehumidifier storage

When you want to store the dehumidifier because you don't use it for a long time. Please pay attention to the following steps:

1. Empty the water in the water tank.
2. Roll up the power cord and tie it up.
3. Clean the filter.
4. Place the machine in a cool and dry environment.

TROUBLESHOOTING

Check the information below for troubleshooting steps, it will save you time to resolve issues that may happen with the unit. The list includes most of the common cases, but not the results of defective unit, crafts or materials in the unit. If all troubleshooting steps have been exhausted and the issue is still occurring, please feel free to reach out to Kesnos Customer Service to get further assistance.

Problem	Cause	Solution
Dehumidifier does not work	The power cord is unplugged.	Make sure that the unit's plug is inserted properly into the power outlet.
	Is the Full Tank indicator blinking? (The tank is full or in a wrong position.)	Empty the water in the water tank and then reposition the tank.
	Is the room temperature above 95°F (35°C) or below 41°F (5°C) ?	This product does not apply to over hot or cold environment, the machine will automatically enter the protection mode. It is a normal phenomenon.
	Is the room temperature between 41°F(5°C) and 68°F(20°C) ?	When running under lower ambient temperature, the machine will automatically defrost, which is a normal phenomenon. It will restart dehumidification again until the defrosting process finished.
	The dehumidifier is in the defrosting process.	It is normal the compressor ceases while defrosting process. Wait until the process finished, it will restart dehumidification again.
	Is the room humidity lower or reaching the preset humidity level?(When the room humidity has reached the preset level, the dehumidifier will enter Standby Mode and the indicator on LCD will flash.)	Please set the humidity decrease by 5% than the room humidity or set the humidity to 30%.

TROUBLESHOOTING

	This is to prevent the frequent start of the machine. Does the machine stop working just now?	Please wait for more than 3 minutes.
	Room humidity is low.	The dehumidifier is designed to work in the humidity range of 30%-80%. Above or below this range, it will not work.
Dehumidifier does not dry the air as it should	The air filter is dirty.	Clean the air filter.
	Is the air inlet or air outlet obstructed?	Remove the obstruction from the air inlet or outlet.
	The dehumidifier size is too small for application.	Increase the quantity of dehumidifier. Or change a higher capacity dehumidifier.
	Poor air circulation.	Please leave about 7.9 inch(20cm) around the product.
	Did not allow enough time to remove the moisture.	Allow enough time to remove the moisture. When first installed, allow at least 3-4 days to maintain the desired RH.
	The room has not been sealed properly.	Check that all doors, windows and other openings are securely closed.
	The air filter is clogged.	Wash the filter.
	Room temperature is too low, or below 41°F (5°C): The machine will not work or undergo poor dehumidifying efficiency in low temperature.	Please wait until the temperature rises to above 5°C or higher.

TROUBLESHOOTING

The dehumidifier makes loud noise when operating	The dehumidifier is not positioned levelly.	Move the machine to a horizontal position.
	Is there blocking around the air inlet? The air filter is clogged.	Clean up the dirt or lint on the air outlet and intake.
	Is the filter installed correctly?	Please check whether the packing bag of the filter had been removed and the filter has been installed correctly.
Dehumidifier operates continuously	Check if the dehumidifier is in Continuous Mode.	Do Not set the humidity too low. Typically, 40-50% are good for use.
	Room humidity is too high.	Change humidity setting. Or change to a higher capacity dehumidifier.
	Doors and windows are open.	Ensure that all doors, windows and other openings are closed.
Overflow of water on floor	The float of water tank has been stuck.	Move the float and let it swing freely.
	The magnet on the float has come off.	Put the magnet in right position.
	Hose to connector or hose connection may be loose.	Connect the hose with the drainage port tightly.
	The water tank has not been installed properly.	Re-install the water tank properly.

If the dehumidifier is still not working properly as expected and the troubleshooting steps or solutions above may not resolve the issue.

Please unplug the power and shut down the dehumidifier, then contact Kesnos Customer Service at support@kesnos.com.

 
⚠ WARNING:

This product can expose you to chemicals including Styrene and its compounds, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov


SPECIAL NOTES



1. When using, please do not put the machine at the soft and uneven ground, avoid vibration and movement.

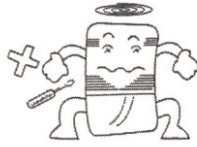

 
2. Do not insert thin rods and hard objects into the machine body to avoid malfunction and danger.

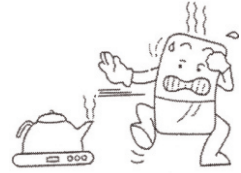

3. When using, please keep the machine away from heating furnace, electric kettle and other heat sources.



 4. When using, make sure doors and windows are closed to get the best humidity removal effect.

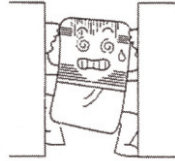

5. Please do not put objects around the body. If the ventilation is blocked, the dehumidification effect will be affected.



6. If do not use the product for a long time, please unplug the power cord.



7. When cleaning the dehumidifier, please use the wet textile to wipe gently, do not shoot the water directly.



8. Please do not put any object on the dehumidifier.



9. Please clean the filter every two weeks (do not use hot water above 104°F, alcohol, gasoline or toluene.).



10. When continuous drainage, the drainage hose must be placed horizontally, without unevenness and winding.



11. After cleaning the filter, please do not dry it under direct sunlight, in case deformation.



12. Before moving and carrying the machine, please first pour out the water in the tank.

TECHNICAL PARAMETERS

MODEL	PD253D
POWER SOURCE	110-120V ~ 60Hz
RATED POWER(95°F,85%RH)	470W
RATED CURRENT(95°F,85%RH)	4.2A
RATED POWER(93.2°F,80%RH)	400W
RATED CURRENT(93.2°F,80%RH)	3.6A
MOISTURE REMOVAL(65°F,60%RH)	17.3 Pints/Day(8.2L/Day)
MOISTURE REMOVAL(80 °F,60%RH)	30 Pints/Day(14.2L/Day)
MOISTURE REMOVAL(86 °F,80%RH)	52 Pints/Day(24.7L/Day)
MOISTURE REMOVAL(93.2°F,80%RH)	60 Pints/Day(28.4L/Day)
MOISTURE REMOVAL(95 °F,85%RH)	70 Pints/Day(33.1L/Day)
INPUT POWER(65°F,60%RH)	255W
INPUT CURRENT(65°F,60%RH)	2.3A
IEF(65°F,60%RH)	1.30 liters/kWh
MOTOR FLA	0.30A
MOTOR COMPRESSOR	RLA:5.0A LRA:14.6A
REFRIGERANT	R134a/8.11ozs(230g)
MAXIMUM ALLOWABLE PRESSURE	363PSIG(2.5MPa)
HIGH PRESSURE	232PSIG(1.6MPa)
LOW PRESSURE	90PSIG(0.6MPa)
Water Tank Capacity	1.18gal
Dimensions	11.41*11.41*23.81 inches
Weight	30.2LB

WARRANTY AND CONTACT US

Warranty

Kesnos offers a 12-month warranty to all of our products together with the original proof of purchase when a defect occurred, including those newly purchased and unused, from Kesnos or through an authorized reseller, wholly or substantially, or as a result of faulty manufacturing parts, or workmanship during the Warranty Period.

The warranty does not apply if damage is caused by other factors, including but without limitation of:

- (a) Normal wear and tear;
- (b) Abuse, mishandling, accident or failure to follow operating instructions;
- (c) Exposure to liquid or infiltration of foreign particles;
- (d) Servicing or modification of the product other than by Kesnos.

There are our general terms for the warranty service, but we always encourage our customers to contact us if any issues, regardless of warranty terms. If you are experiencing an issue with Kesnos product, you can reach out to us at support@kesnos.com, we will dedicate our efforts to resolve it for you.

Extend Your Warranty by 1 Year

Register your product at www.kesnos.com to extend your 1-year warranty by an additional year.

*Please fill out all required fields and include your Order ID, Date of Purchased if applicable.

Customer Support

If you have any questions or concerns about your product, please feel free to contact our expert support team. Kesnos customer service is here to help.

Kesnos Office

13211, Spring Street Baldwin Park, CA, US

Email: support@kesnos.com

Live Chat: www.kesnos.com

Support Hours

24 Hours available

*Please have your Order Number ready before contacting customer support.

KESNOS

For FAQs and more information please visit:

www.kenos.com



@Kesos



@Kesos



@Kesos



@Kesos



(Scan the QR Code for Live Chat)

We are expecting to see our products fulfill your life and hear your voice.

Your satisfaction means a lot to us.

Please tag us if you share a snap on your social media.

www.kenos.com