



Pre-Installation


PLACEMENT

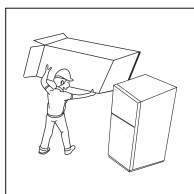


- Before use, remove all packing materials, including bottom cushions, foam pads and tapes inside of the refrigerator; tear off the protective film on the doors and the refrigerator body.

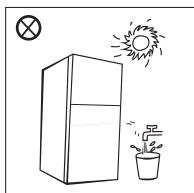


- Keep away from heat and avoid direct sunlight. Do not place the freezer in moist or watery places to prevent rust or reduction of insulating effect.
- Do not spray or wash the refrigerator; do not put the refrigerator in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the refrigerator.

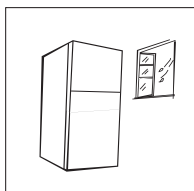

- The refrigerator is placed in a well-ventilated indoor place; the ground shall be flat, and sturdy (rotate left or right to adjust the wheel for levelling if unstable).

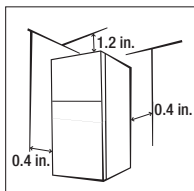

- The top space of the refrigerator shall be greater than 1.2 in, and The refrigerator should be placed against a wall with a free distance more than 0.4 in to facilitate heat dissipation.

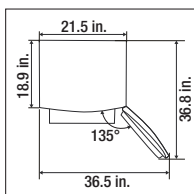

- Spare enough space for convenient opening of the doors and drawers or statement by the distributor.




WARNING: Information in the Instruction Manual is only for reference. The physical product may differ. Before installation and adjusting of accessories, it shall be ensured that the refrigerator is disconnected from power.

Pre-Installation

LEVELLING FEET

Schematic diagram of the levelling feet.

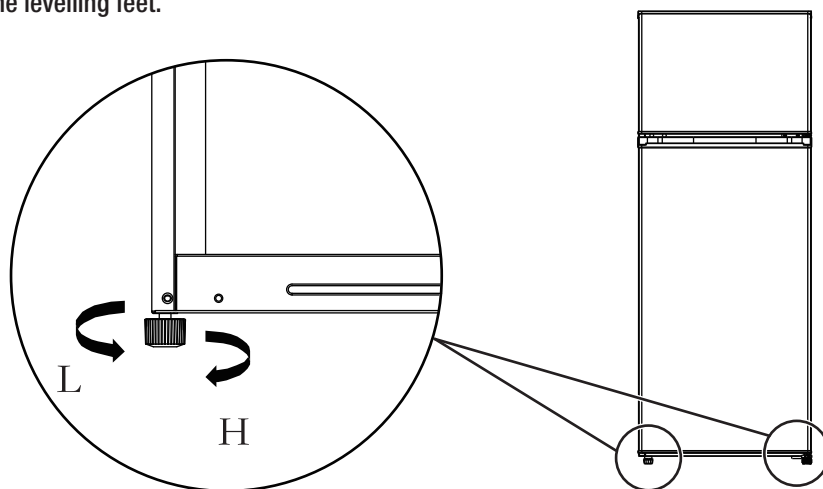

Adjusting procedures:

- Turn the feet clockwise to raise the refrigerator;
- Turn the feet counterclockwise to lower the refrigerator;
- Adjust the right and left feet based on the procedures above to a horizontal level.

REVERSE THE DOOR SWING



WARNING: Follow all steps when reversing the door swing. Failure to follow these instructions, leaving off parts, or overtightening screws, can lead to the door falling off and result in injury and property damage.



NOTE:

When reversing the door swing.

- Read the instructions all the way through before starting.
- Handle parts carefully to avoid scratching paint.
- Set screws down by their related parts to avoid using them in the wrong places.
- Provide a non-scratching work surface for the doors.
- It is recommended that 2 people perform this task.

IMPORTANT: Once you begin, do not move the cabinet until door-swing reversal is completed.

These instructions are for changing the hinges from the right side to the left side—if you ever want to change the hinges back to the right side, follow these same instructions and reverse all references to left and right.

Tools Required



$\frac{5}{16}$ in. Socket driver



Phillips screwdriver



Putty knife or thin-blade screwdriver


Pre-Installation

1




WARNING: Unplug the refrigerator from its electrical outlet. Empty all door shelves.

- Take off top hinge cover, top hinge ,the sleeve pipe of freezer door and hole cap on the other side.

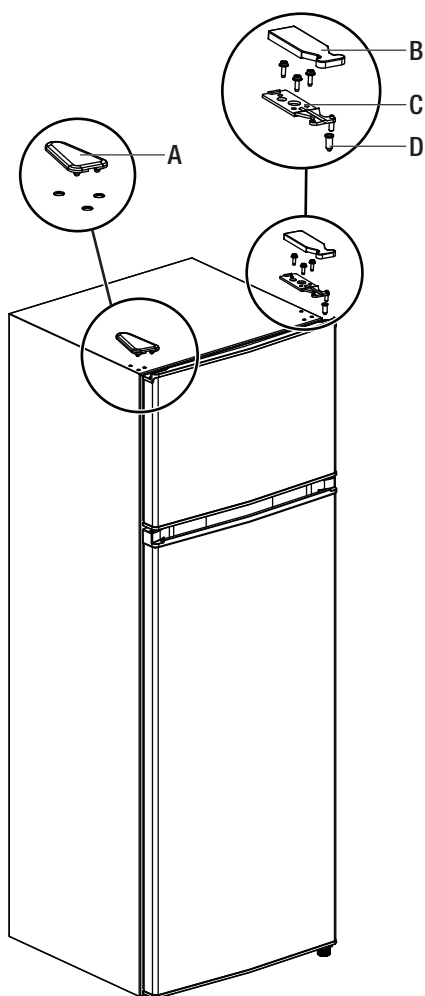

2

- Take off freezer chamber door, middle hinge, the sleeve pipe of refrigerating door and hole caps on the other side.

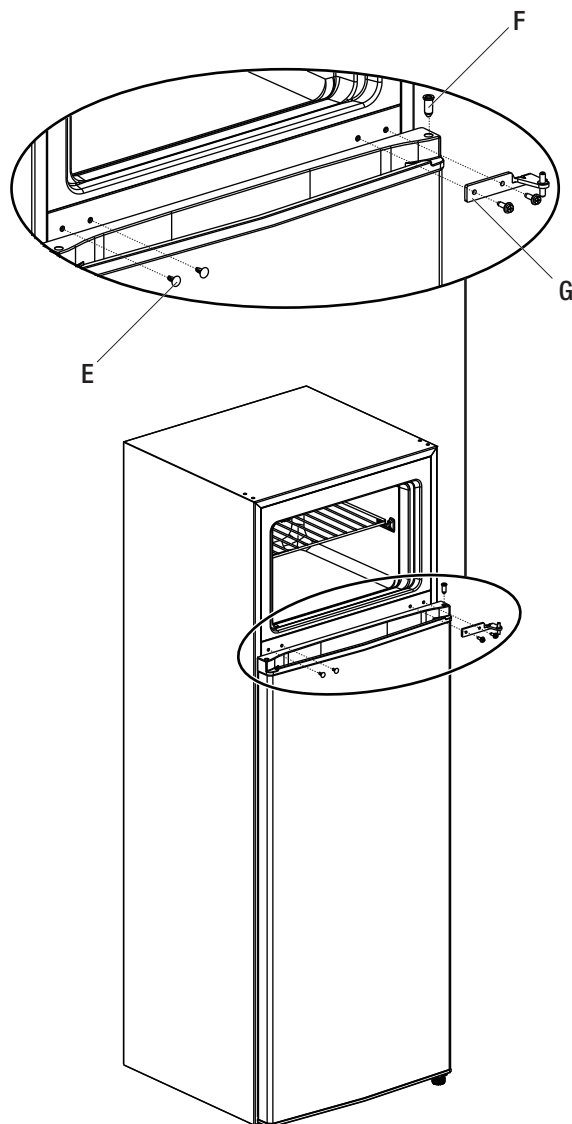


Part	Description	Quantity
A	Hole cap	1
B	Hinge cover	1
C	Top hinge	1
D	Sleeve pipe	1
E	Hole caps	2
F	Sleeve pipe	1
G	Middle hinge	1

Pre-Installation


3

- Remove the refrigerating door.
- Remove the bottom hinge and adjustable foot on the other side.
- Assemble the bottom hinge assembly and adjustable foot on other side.

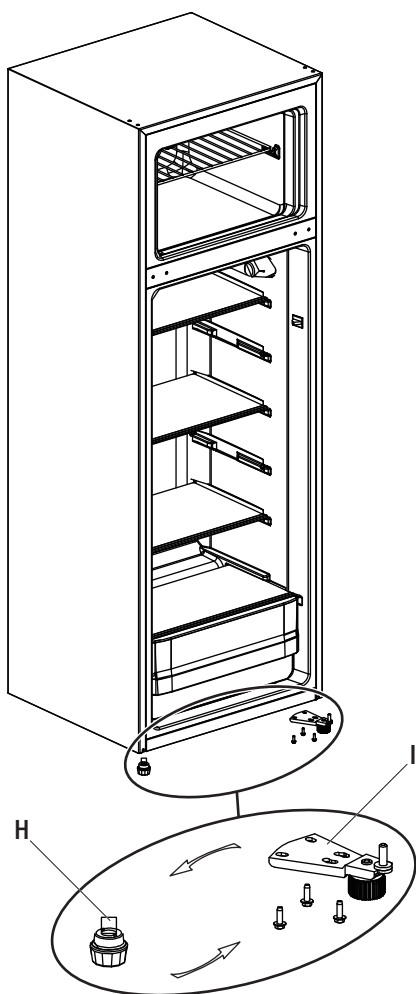

4

- Assemble the stopper of the freezer door on the other side.
- Assemble the stopper of the refrigerating door on the other side.

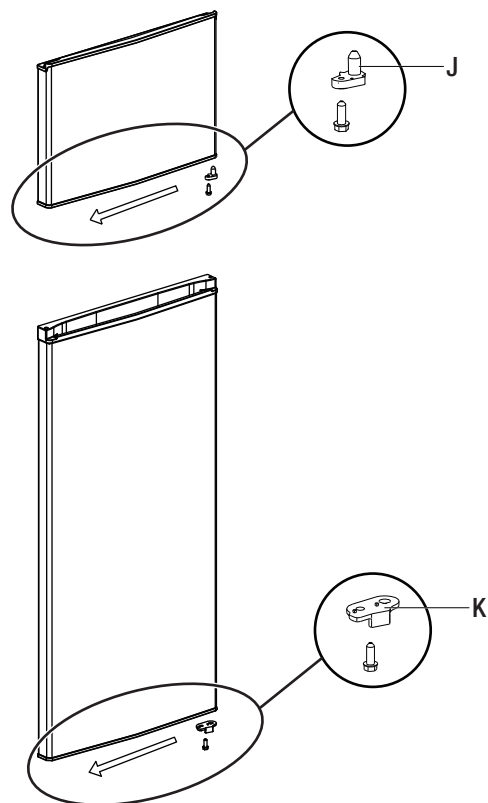


Part	Description	Quantity
H	Adjustable foot	1
I	Bottom hinge	1
J	Freezer door stopper	1
K	Refrigerator door stopper	1

Pre-Installation


5

- Put the refrigerating door on bottom hinge, assemble the middle hinge, hole caps and the sleeve pipe of refrigerating door.

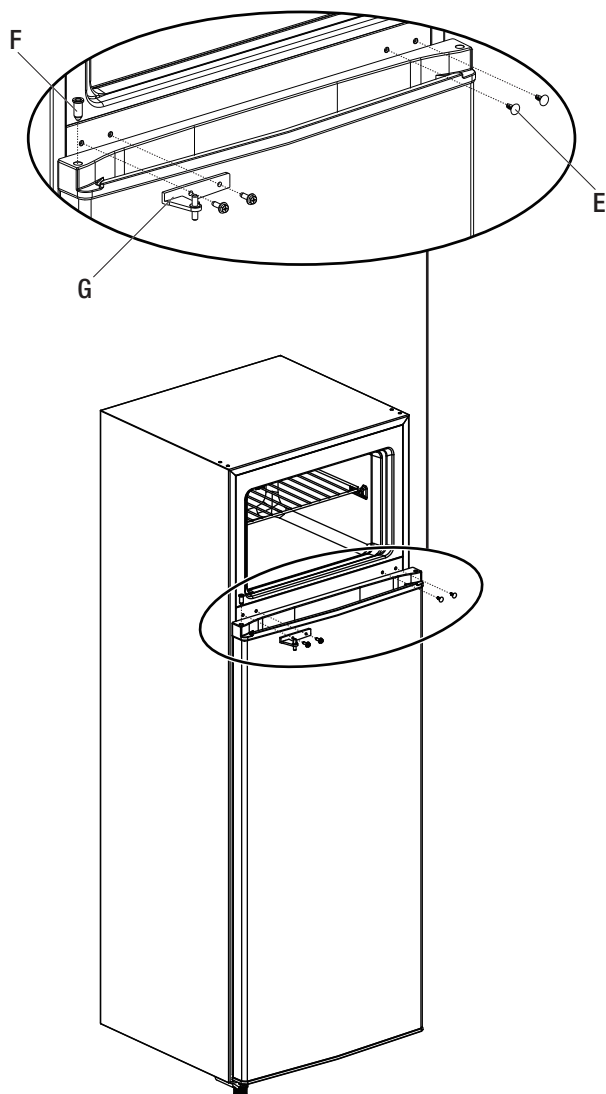

6

- Put the freezer door on the middle hinge, assemble the top hinge, the top hinge cover assemble the sleeve pipe of the freezer door and hole cap on the other side.

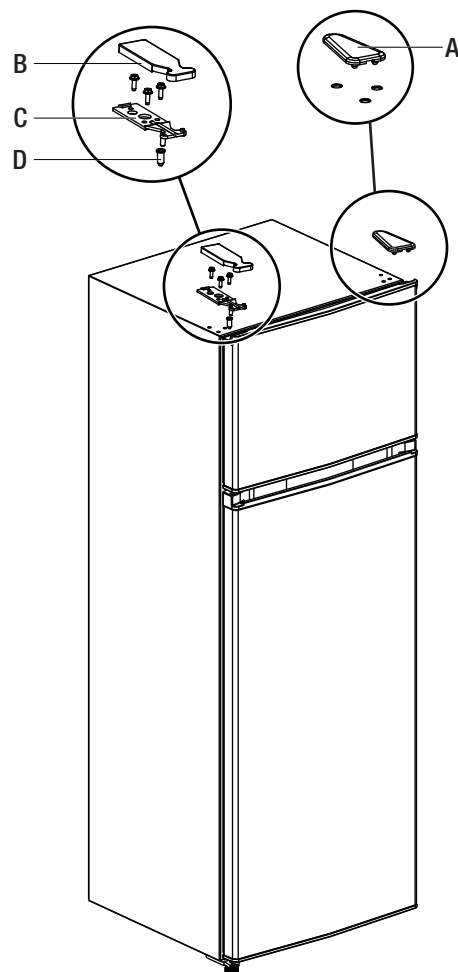

Part	Description	Quantity
A	Hole cap	1
B	Hinge cover	1
C	Top hinge	1
D	Sleeve pipe	1
E	Hole caps	2
F	Sleeve pipe	1
G	Middle hinge	1

Pre-Installation

STARTING


- Before initial start, keep the refrigerator still for half an hour before connecting it to power supply.
- Before putting any fresh or frozen foods, the refrigerator shall have run for 2-3 hours, or for above 4 hours in summer when the ambient temperature is high.

ENERGY SAVING TIPS

- The appliance should be located in the coolest area of the room, away from heat producing appliances or heating ducts, and out of the direct sunlight.
- Let hot foods cool to room temperature before placing in the appliance. Overloading the appliance forces the compressor to run longer. Foods that freeze too slowly may lose quality, or spoil.
- Be sure to wrap foods properly, and wipe containers dry before placing them in the appliance. This cuts down on frost build-up inside the appliance.
- Appliance storage bin should not be lined with aluminum foil, wax paper, or paper toweling. Liners interfere with cold air circulation, making the appliance less efficient.
- Organize and label food to reduce door openings and extended searches. Remove as many items as needed at one time, and close the door as soon as possible.

Assembly

KEY COMPONENTS

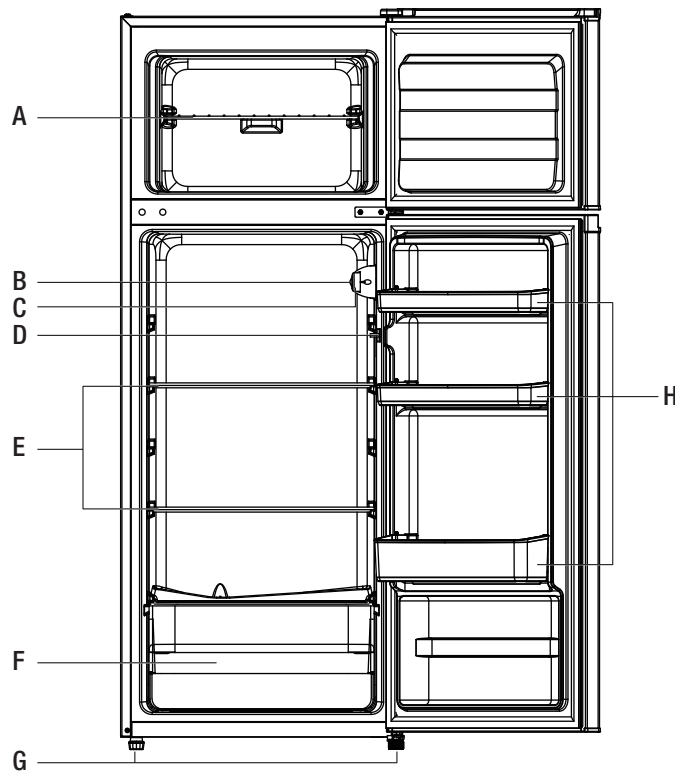

Part	Description	Quantity
A	Freezer shelf	1
B	Lamp	1
C	Temperature control knob	1
D	Lamp switch	1
E	Fresh food shelves	2
F	Vegetable crisper with glass cover	1
G	Leveling legs	2
H	Door tray	3

Refrigerating chamber


- The refrigerating chamber is suitable for storage of a variety of fruits, vegetables, beverages and other food consumed in the short term.
- Cooking foods shall not be put in the refrigerating chamber until cooled to room temperature.
- Foods are recommended to be sealed up before putting into the refrigerator.
- The shelves can be adjusted up or down for a reasonable amount of storage space and easy use.

Freezing chamber

- The low temperature freezing chamber may keep food fresh for a long time and it is mainly used to store frozen foods and making ice.
- The freezing chamber is suitable for storage of meat, fish, rice balls and other foods not to be consumed in short term.
- Chunks of meat are preferably to be divided into small pieces for easy access. Please be noted food shall be consumed within the shelf time.

NOTICE: Storage of too much food during operation after the initial connection to power may adversely affect the freezing effect of the refrigerator.

FUNCTIONS

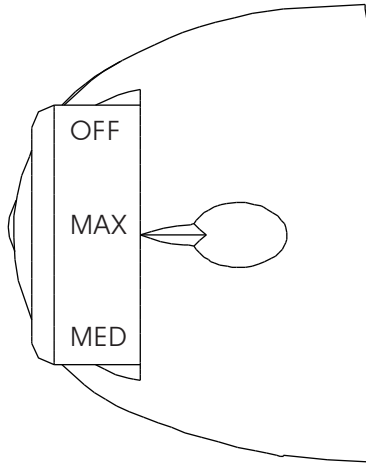

- Turn the temperature control knob to MAX, the internal temperature of the refrigerator becomes lower.
- Turn the temperature control knob to MIN, the internal temperature of the refrigerator becomes higher.
- The letter on the knob only represents the level, but does not mean the specific temperature, the "OFF" means stop working.

NOTICE: Please adjusting and using between "MAX" and "MIN".