



## 3 TON LIGHT DUTY TRUCK JACK KIT

### Care and Cleaning

---

#### INSPECTION

The product shall be maintained according to these instructions. You may not alter this product in any way.

1. Before using, a thorough inspection shall be made on the jack. Look for cracks in the weld, bent, damaged, loose, worn or missing parts.
2. Inspect according to this manual ONLY.
3. If the jack has been subjected to abnormal load or shock (abuse), perform an immediate inspection. Take the product to a local customer service representative for an authorized inspection before use.

### Maintenance

---



#### ADDING HYDRAULIC JACK OIL TO THE JACK



**IMPORTANT:** When adding or replacing oil, ALWAYS use a good grade of (SAE 5W) hydraulic jack oil. NEVER use brake fluid, alcohol, glycerin, detergent, motor oil or dirty oil of any kind. Improper oil usage will cause serious internal damage to jack.

#### 1 Removing the plug

With the saddle fully lowered and the jack on level ground, unscrew and remove the oil fill plug.

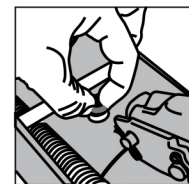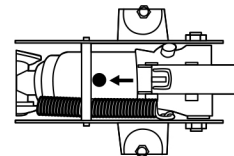

#### 2 Filling the oil reservoir

Using a good grade of SAE 5W hydraulic jack oil, fill the oil reservoir to the bottom of the threads in the oil filler hole.

Replace and tighten the oil fill plug.  
Do not allow dirt or debris to enter the system.

