








Assembly Instruction

Furinno Econ TV Stand Entertainment Center

MODEL: 14055

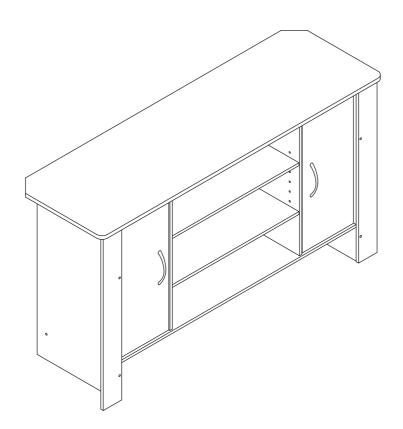



Customer Support

NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!

www.furinno.com













No	Hardware List		Qty
1	C/B Screw M4x32mm	3	14pcs
2	Dowel M5x20mm		10pcs
3	Magnectic Catches		2pcs
4	Tapping Screw M5x8mm		2pcs
5	Door Holder(Spring)	A	4pcs
6	Shelf Support	S	8pcs
7	Handle(Moon)		2pcs
8	P/H Screw M3.6x15mm	O	4pcs
9	Nail Leg	0	7pcs
10	Power Pin		16pcs
11	Glue		1pc


No	Parts List		Qty
Α	Top Panel		1pc
В	Side Panel		2pcs
С	Center Left Panel		1pc
D	Center Right Panel		1pc
Е	Shelf Panel	\Diamond	2pcs
F	Bottom Panel		1pc
G	Left Door Panel		1pc
Н	Right Door Panel		1pc
I	Left Front Panel		1pc
J	Right Front Panel		1pc
K	Leg Panel		1pc
L	Back Panel	\Diamond	2pcs

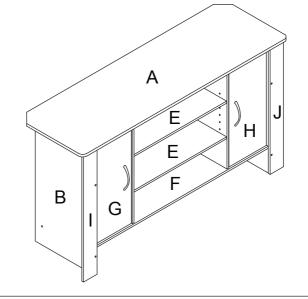


USEFUL HINTS BEFORE YOU START:

- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using uncompatible hardware might cause damage to product.

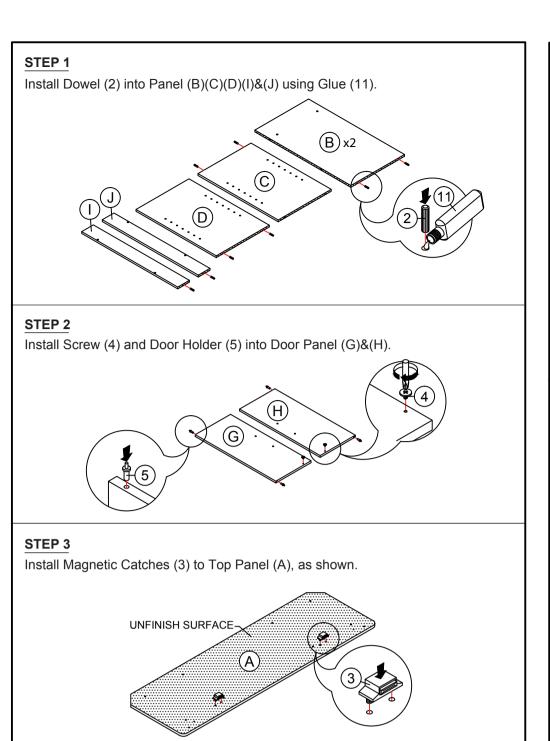

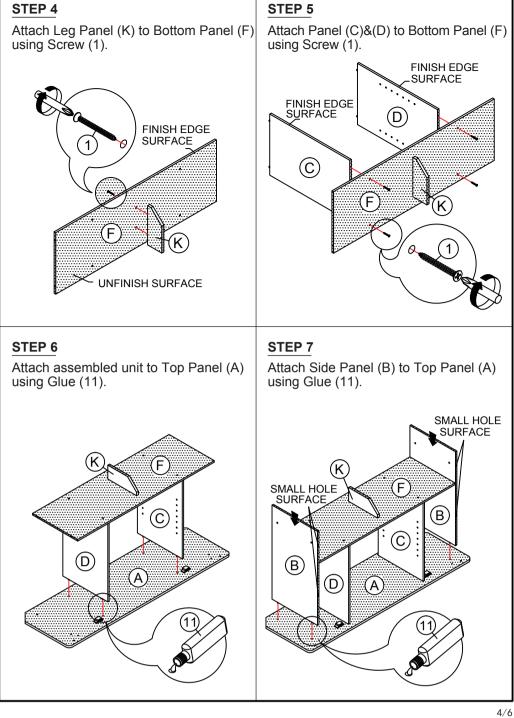

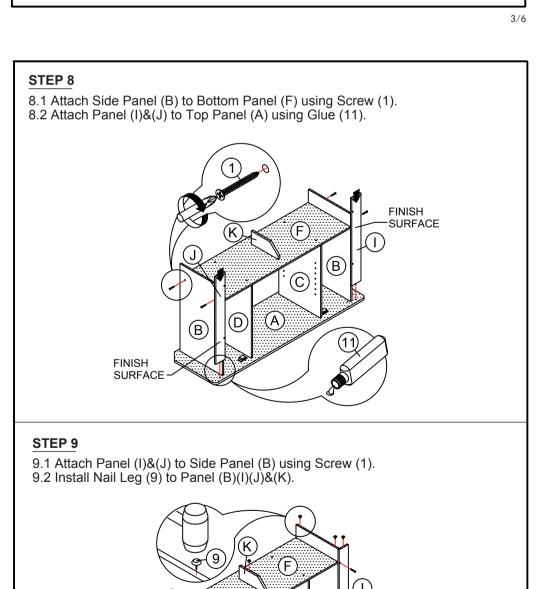


(C)

(A)

(D)

(B)

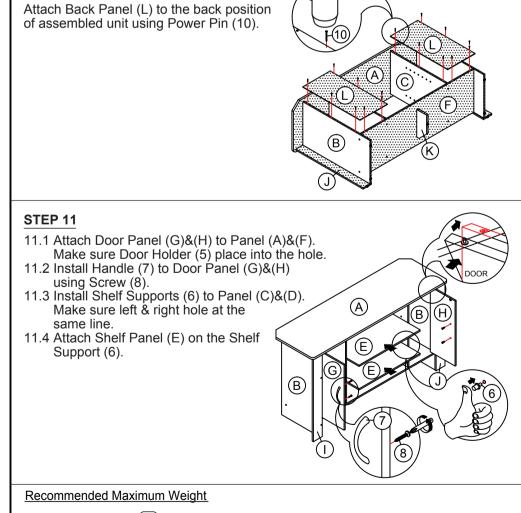

STEP 10

5/6