
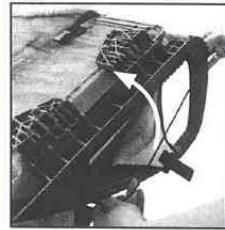


Instructions:

Seat bottom cover installation:

1. Place cover over one end of the seat bottom then pull the cover over the entire seat.



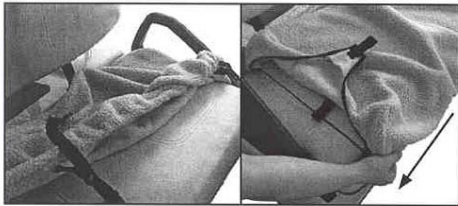


2. Pull the elastic hem over the seat.

On both ends of the seat, pull the exposed elastic hem cord over the end of the seat. In some cases, depending on the style of seat, you will have to pull it over the armrests as shown.



3. Thread the attachment flap over the end of the seat.

On both ends of the seat, pull the attachment flap over the end of the seat or under the armrest as shown. Your seat should now look like the photo below right with the attachment webbing, attachment flaps and elastic seat hem showing.

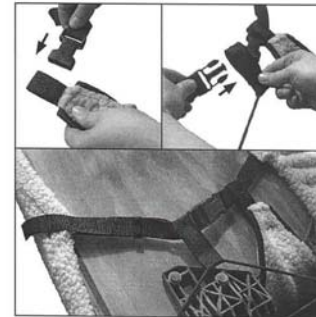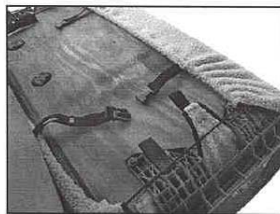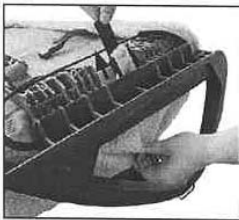

4. Thread the webbing attachment strap through the attachment flap hoop and hem hoop. Thread the webbing attachment straps with buckles through the hoops at the ends of both the attachment flaps and the elastic hem. Once both hoops are threaded with the webbing attachment straps, insert the side release buckles into one another. Proper assembly is shown in the drawing below.

5. On some models of golf cars it is necessary to keep the seat cover clear of any metal tab fittings that keep the seat in place. Failure to keep these attachment points clear will cause the seat to malfunction and could damage the cover. Correct installation of the seat bottom cover shown below.

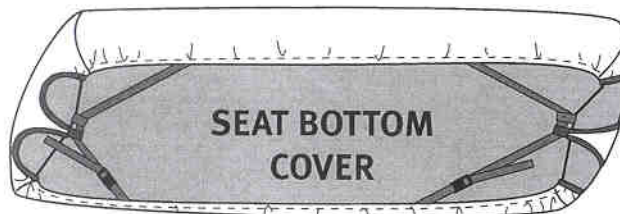
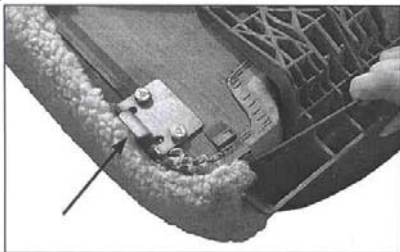


Seat back cover installation:

1. Place the cover over on end of the seat back and pull the cover over the entire seat.

2. Attach the hem clip one the back of the cover.

Hook the hem clip attached to the elastic hem to the opposite side of the seat hem. Enjoy your seat covers.

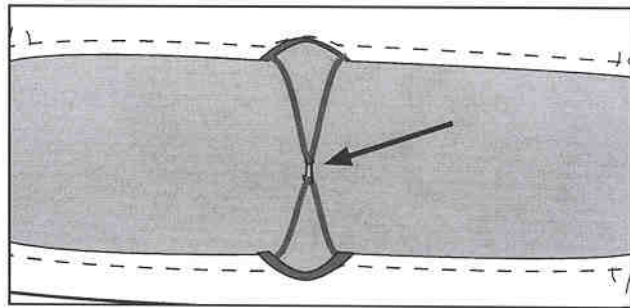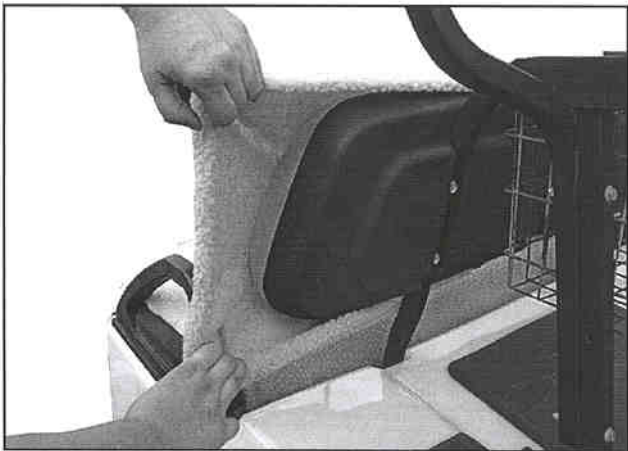

Seat Back Cover