

ELIMINATE BULB FLICKERING

Re-calibrate settings and change the minimum light level.

1. Disconnect power at the breaker box then remove wall plate.
2. Lower the slider to the minimum setting (as shown).
3. Use a small, insulated flat head screwdriver to move the calibration wheel all the way up towards the “-” sign.
4. Turn wheel down towards the “+” sign in small increments until the flickering is gone.

