


Model 25392 Parts Diagram

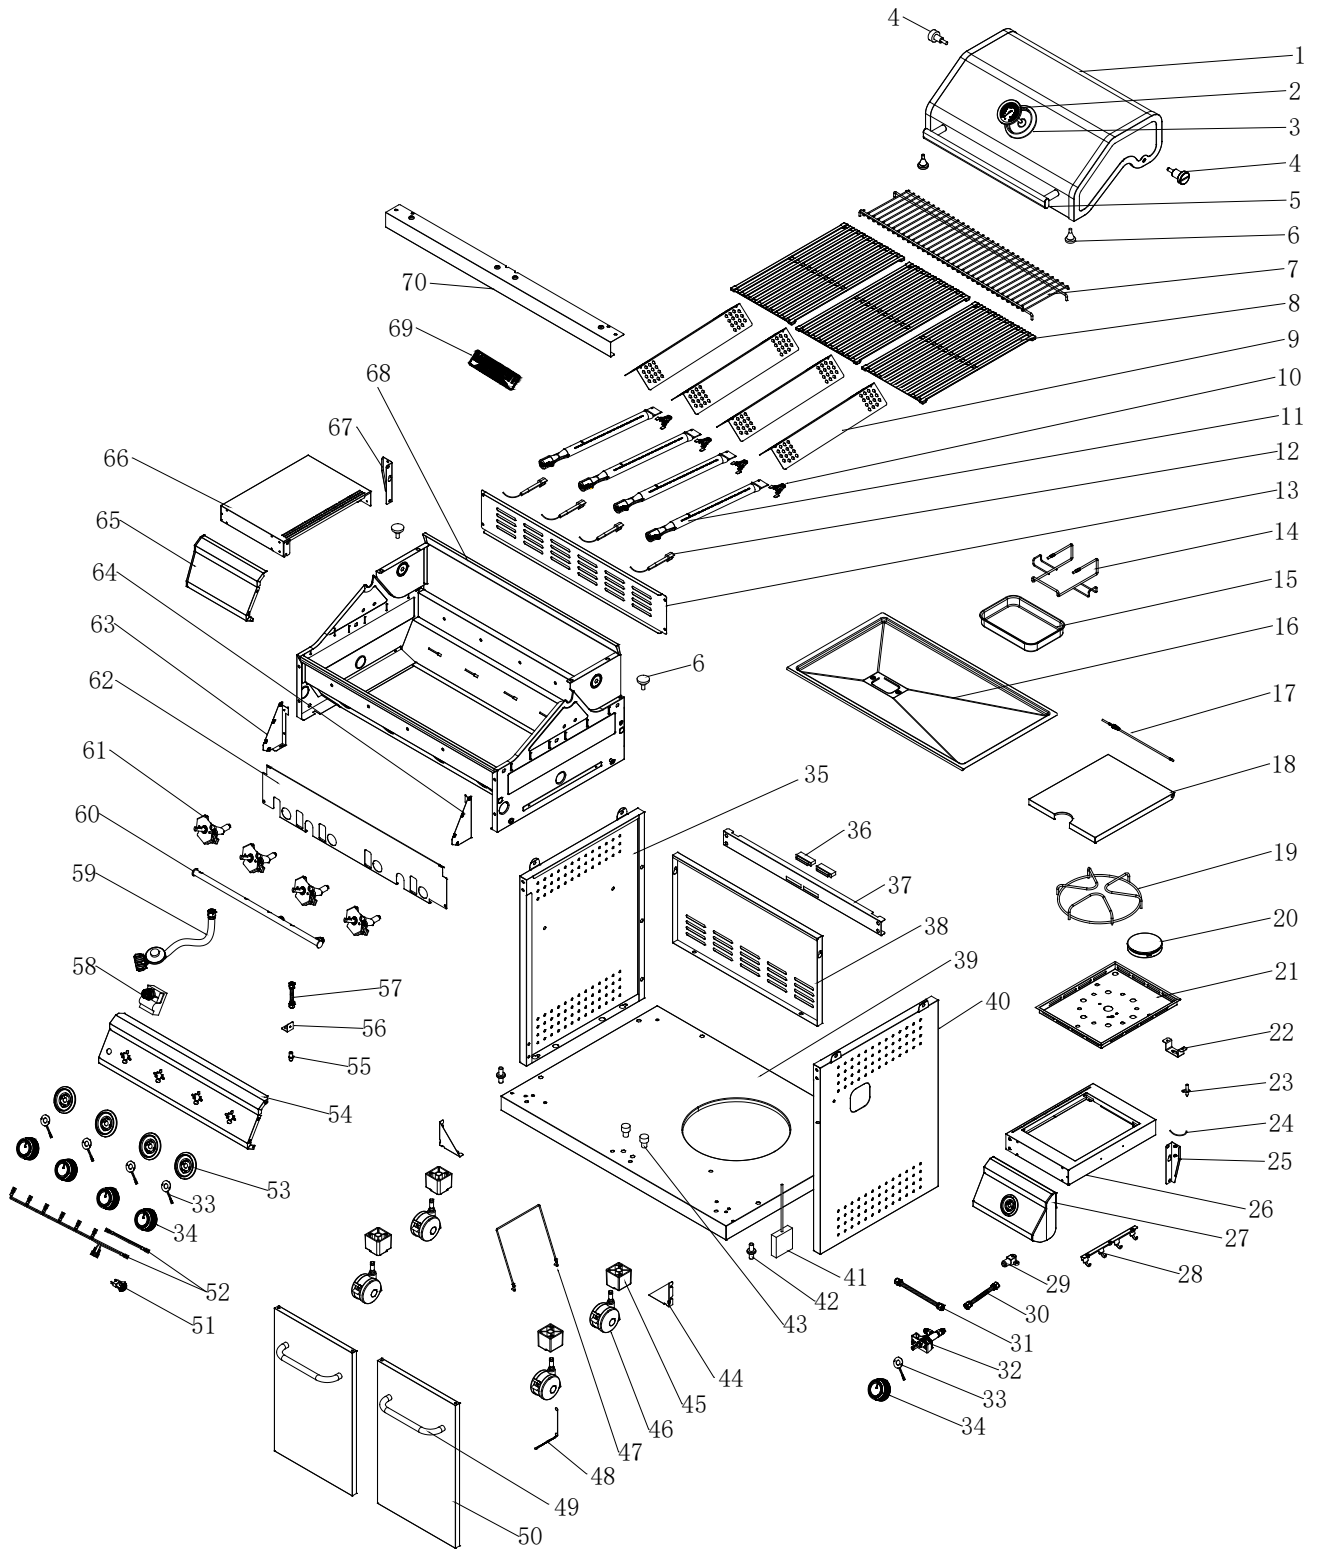

Model 25392 Parts List

seq. NO.	appellation	qty	Material code	seq. NO.	appellation	qty	Material code
1	Main Lid	1	D30X000034	37	Cart Frame, Front	1	D010012721
2	Temperature Gauge	1	A0212824	38	Back Panel, Bottom	1	D010012748
3	Temperature Gauge Seat	1	A0212967	39	Bottom Panel	1	D30P000018
4	Main Lid Screw	2	A0407131	40	Side Panel, Right	1	D010015041
5	Main Lid Handle	1	D010010251	41	Battery Box	1	A0212663
6	Hood Buffer	4	A0201340	42	Spindle Below Door Panel	2	A0212557
7	Warming Rack	1	A0212856	43	Spacing Screw Below Door Panel	2	A02120079
8	Cooking Grid With Hole	3	A0212904	44	Triangle Bracket, Left	2	D010012745
9	Flame Tamer	4	D010012589	45	Swivel Caster Fixing Plug	4	A0212805
10	Clamp Spring	4	A0212873	46	Swivel Caster	4	A0211004
11	Main Burner	4	A0212926	47	Gas-jar Fixing Line	1	A0212837
12	Main Burner Igniter Wire	4	D010012900	48	Lighting Rod	1	A02121323
13	Back Panel, Top	1	D010012737	49	Door Handle	2	D010012747
14	Grease Box Bracket	1	A0212838	50	Front Door	2	D010012094
15	Grease Box	1	D010012705	51	LED Lamp Switch	1	A0212627
16	Grease Tray	1	D010021002	52	LED Lamp Circuit	1	D010013690
17	Side Burner Lid Hinge Rod	1	A0212534	53	Control Knob Base	4	D010012905
18	Side Burner Lid	1	D010007598	54	Main Control Panel	1	D010026386
19	Side Burner Cooking Grid, Right	1	A0212248	55	Gas Connector	1	A0212830
20	Side Burner, Right	1	A0212533	56	Gas Connector Fixing Panel	1	D010012298
21	Side Burner Tray	1	D010018008	57	Main Burner Flex Gas Line	1	A0212829
22	Side Burner Orifice Bracket	1	D019706920	58	Pulse Igniter Module	1	A0212934
23	Side Burner Igniter, Right	1	A0212436	59	Regulator, LP	1	A0212831
24	Side Burner Igniter Wire, Right	1	A0212869	60	Main Manifold	1	A02120087
25	Side Shelf Bracket, Right	1	D010019690	61	Main Gas Valve	4	A0212862
26	Side Shelf, Right	1	D010018495	62	Front Baffle	1	D010012503
27	Side Shelf Panel , Right	1	D30X000068	63	Control Panel Fixing Panel, Left	1	D010019727
28	Hook	1	D010018023	64	Control Panel Fixing Panel, Right	1	D010019728
29	Side Burner Orifice	1	A0212828	65	Side Shelf Panel , Left	1	D30X000064
30	Side Burner Flex Gas Line, 250	1	A020021	66	Side Shelf, Left	1	D010018557
31	Side Burner Flex Gas Line, 480	1	A02120090	67	Side Shelf Bracket, Left	1	D010019689
32	Side Burner Gas Valve, Right	1	A02120088	68	Firebox	1	D30H000009
33	LED Lamp Panel	5	A02120213	69	Logo	1	A0212808
34	Control Knob	5	A02120817	70	Cart Bottom Panel Front Cumberbund Strip	1	D010012063
35	Side Panel, Left	1	D010015039		Manual	1	C043788
36	Door Magnet	2	A0201249		Hardware Pack	1	D30X000367

For assembly questions, call:
1-888-980-4933

To make sure you obtain the correct replacement parts for your gas grill, please refer to the part numbers on this page.

Important: Keep this Owner's Manual for convenient reference and for part replacement.

Important: Use only parts listed above. When ordering parts, providing the following information:

1. Model #
2. Part Number (see PART# in chart)
3. Part Description
4. Quantity of parts needed