

Oscillating Tower Fan

Model: FTQ29B-M 120V~ 60Hz 40W

READ AND SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

WARNING: To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

WARNING: This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

RULES FOR SAFE OPERATION:

- Use this fan only as described in this manual. Improper usage may cause fire, electric shock or personal injury.
- To protect against electric shock, do not place fan on windowsills, immerse unit, plug or cord in water. Do not spray with liquid or use near water sources.
- This product is intended for residential use ONLY. DO NOT use outdoors.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of shock, this plug is intended to fit in a polarized outlet one way only. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this safety feature.
- **WARNING:** To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit

situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

- Close supervision is necessary when any appliance is used by or near children.
- Turn the fan OFF and unplug from the outlet when not in use, before moving and before cleaning.
- To unplug the fan, first turn the unit OFF, grip the plug and pull from outlet. Never pull or tug by the cord to remove from the outlet.
- DO NOT operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
- DO NOT run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- DO NOT operate the fan if fan housing is damaged.
- Always use the fan on a dry leveled surface.
- DO NOT operate the fan in the presence of explosive and/or flammable fumes.
- DO NOT place or operate the fan near open flame or sources of heat (stove, fireplace, etc.).
- The use of unauthorized attachments is not recommended. This may cause fire, electrical shock, or injury.
- This unit is designed for use on a 120V/60Hz outlet only.
- DO NOT insert fingers or any objects through the grill during use. Avoid contact with moving parts.
- A loose fit between the AC outlet and plug may cause overheating and distortion of the plug. If it occurs, contact a qualified electrician to replace worn outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
- The plastic feet on this product may interact with wood and cause damage to furniture. DO NOT place on fine wood furniture.

WARNING:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- **Children should be supervised to ensure that they do not play with the appliance.**

 
FUSED PLUG:

This plug is a safety feature. It contains a safety device (fuse) that should not be removed. Discard the product if the attachment plug is damaged. To reduce the risk of fire, electric shock and personal injury, DO NOT remove, replace, repair or tamper with the originally supplied plug. If the fan does not function properly, it may be due to the safety device incorporated in this plug.


If the fuse fails, it is generally due to a short circuit or circuit overload. Replace the fuse as per the instructions below. If the replacement fuse fails, immediately unplug the unit and contact our technical support department for assistance.

Fuse Replacement:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord. Locate the door on top of the plug.

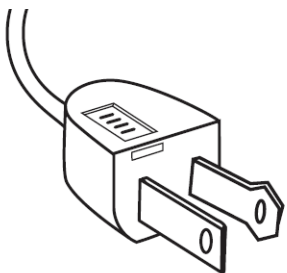


 2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.

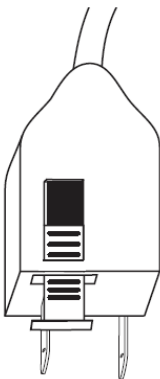

3. Turn fuse holder over to remove fuse. Remove fuse carefully.

 Warning! Electrical Hazard! Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse. If the product fails a second time, immediately unplug it and contact our technical support at 1-888-880-3267.

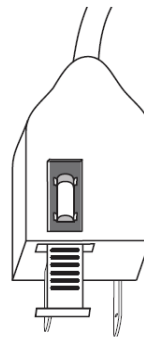

4. Gently push the fuse back into the pins that will hold it in place.

Note: If the fuse is not seated properly, the unit will not function.

5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

 
 
6. Plug the fan back in and resume use. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

ASSEMBLY INSTRUCTIONS:

1. Unscrew three (3) Locking Screws from the bottom of the Fan Body.
2. Pass the Power Cord through the center hole of the Fan Base, and firmly snap the two halves of the Fan Base together.
3. Secure the Fan Base to the Fan Body with the Locking Screws from Step 1. Tighten the Locking Screws firmly.
4. Place the Power Cord through the cut out on the bottom of the Fan Base.

OPERATING INSTRUCTIONS:

1. Set the Fan Base on a dry, level surface.
2. Plug cord into any standard 120 volt AC outlet. Make sure the Speed Control Switch is in the '0' (Off) position.
3. The SPEED is adjusted by turning the Speed Control Switch to 1, 2 or 3.
4. This fan has OSCILLATION function. Turn the Speed Control Switch to the left side for oscillating function.

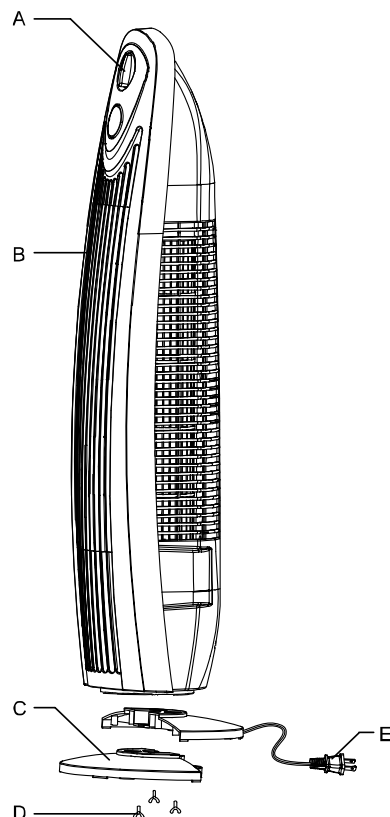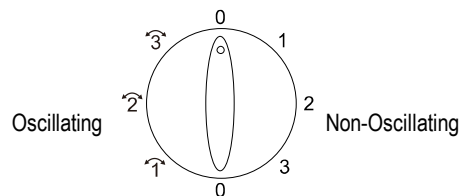

Fan Parts:

- A. Speed Control Switch
- B. Fan Body
- C. Fan Base
- D. Locking Screw
- E. Power Cord

Cleaning

Plastic parts shall be cleaned with mild soap and a soft, moist cloth or sponge. Thoroughly remove soap film with clean water.

User Maintenance

This fan is permanently lubricated and will not require additional lubrication (oil) for the life of the fan. This fan requires little maintenance and contains no user serviceable parts. Do not attempt to repair or adjust any electrical or mechanical functions on this unit.

USER SERVICING INSTRUCTIONS:

If the fuse blows, replace it as follows:

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
3. Remove fuse carefully. Push the fuse from the other side or turn fuseholder over to remove fuse.
4. Risk of fire. Replace fuse only with 2.5 Amp, 125 Volt fuse (provided with product).
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug.

CLEANING AND MAINTENANCE INSTRUCTIONS:

WARNING:

- Always unplug from electrical supply source before cleaning.
- Do not allow water to drip on or into the fan motor housing.
- Be sure to use a soft cloth moistened with mild soap solution. Do not use harmful cleaners.