

OVENTE®

MULTI-FUNCTION

AIR FRYER ROTISSERIE OVEN

OFM2025 SERIES



Before using, please read the instruction manual and keep it for future use.

ovente.com

OVENTE®

MULTI-FUNCTION

AIR FRYER ROTISSERIE OVEN

OFM2025 SERIES



MULTI-FUNCTION AIR FRYER ROTISSERIE OVEN

OFM2025 SERIES

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	• • • • • • • • • •	4
PARTS & FEATURES	• • • • • • • • • •	6
USING YOUR AIR FRYER OVEN	• • • • • • • • • •	7
CARE & MAINTENANCE	• • • • • • • • • •	10



IMPORTANT SAFEGUARDS

When using your air fryer oven, basic safety precautions should always be followed, including:

- ❗ Read all of these instructions carefully before using or cleaning your air fryer oven.
- ❗ On first use, the oven may smoke for 5-15 minutes. This is normal.
- ❗ This oven is for household use only. Do not use outdoors or for other than its intended use.
- ❗ Close supervision is necessary when any appliance is used near children.
- ❗ Do not immerse cord, plug, or any part of the oven in water or other liquids.
- ❗ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ❗ Do not operate oven with a damaged cord or plug or after the oven malfunctions, or has been damaged in any manner. If the oven is damaged or broken, do not attempt to repair it yourself. Please contact Customer Support on **1-855-926-2626** for assistance.
- ❗ When operating the oven, keep at least four inches of space on all sides to allow for adequate air circulation.
- ❗ To disconnect, turn the control to the off position before removing the plug.
- ❗ Unplug from outlet when not in use and before cleaning. Always hold the plug; never pull the cord.
- ❗ Allow the oven to completely cool down before adding or removing accessories, and before cleaning.
- ❗ Extreme caution must be used when moving an appliance containing hot oil or hot food.
- ❗ Do not cover any part of the oven with metal or fabric; it may cause the oven to overheat.
- ❗ Never leave the oven unattended while in use.
- ❗ Oversized food or metal utensils cannot be put into the oven as they may cause fire or risk of electric shock.



 
IMPORTANT SAFEGUARDS

When using your air fryer oven, basic safety precautions should always be followed, including:

- ❗ Do not place any of the following materials in the oven: plastic, paper, or anything similar.
- ❗ Do not use any accessories other than manufacturer-recommended accessories in this oven.
- ❗ Always wear protective, insulated oven gloves when transporting food to or from the hot oven.
- ❗ The glass door is heavy; hold the handle until the door is completely open. Do not let the door fall by itself.
- ❗ This oven is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the oven by a person responsible for their safety.
- ❗ The temperature on the surface of this oven is high during and after use; do not touch!
- ❗ Do not attempt to control this oven via a remote control or timer.

PARTS & FEATURES

1. Power switch
2. Timer
3. Function control
4. Airfryer temp control
5. Oven temp control
6. Lamp switch
7. Removable drip tray
8. Rotisserie spit
9. Rotisserie spit handle
10. Air fryer basket
11. Wire rack
12. Baking pan

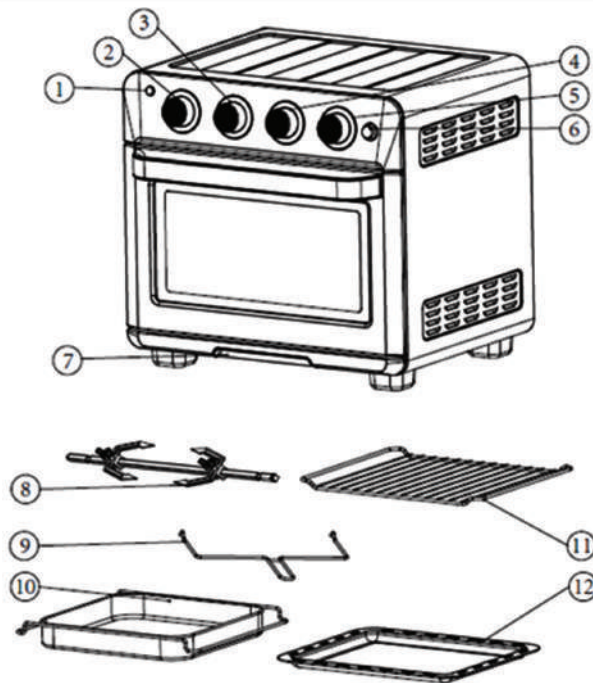



USING YOUR AIR FRYER OVEN

- 1 Place the oven on a heat-resistant, level surface and plug it in.
- 2 Set your desired function, time and temperature, and preheat for 10-15 minutes. Then insert the rotisserie spit, wire rack, air fryer basket or baking pan depending on the type of food you are cooking.
- 3 During cooking, you can check the status of your food through the large viewing window. You can also use the lamp switch to turn on the lamp. For larger, denser foods, turning will ensure your food cooks better and more evenly. To prevent risk of accidents, shut the door immediately afterwards.
- 4 Once cooking is finished, the timer will shut off automatically and the bell will ring. If your food is cooked before the set time, turn the timer to the off position to power off the oven.
- 5 Exercise caution when removing your food from the hot oven.

HOW TO USE THE ROTISSERIE FUNCTION

- 1 Insert one skewer through the pointed end of the spit, making sure the points of the skewer are facing the spit's pointed end. Slide the skewer toward the square end of the spit.
- 2 Insert the spit directly through the center of the food you want to roast.
- 3 Put the other skewer through the pointed end of the spit, making sure the points of the skewer face the spit's square end.
- 4 Put the two skewers into the food, then secure both skewers with the thumbscrews.
- 5 Make sure the food is centered on the spit.
- 6 Insert the pointed end of the spit into the drive socket; make sure the square end of the spit rests on the spit support.



USING YOUR AIR FRYER OVEN

7 Plug in the oven.

8 Set the air fryer temperature to maximum.

9 To begin cooking, turn the timer to your desired cooking time. It takes around 30 minutes to roast a 4.5lb chicken.

 
10 When you turn the dial to ROTISSERIE, the rotisserie spit will begin rotating.

11 Once cooking is finished, the timer will shut off automatically and the bell will ring. If your food is cooked before the set time, turn the timer to the off position to power off the oven.

12 After the oven has completely cooled down, put the hooks of the rotisserie spit handle under the grooves on both sides of the spit. Lift the right side of the spit first and move it toward the right side a bit, so that the left side of the spit pops out of the drive socket. Then carefully remove the spit from the oven.

13 Take the food off the spit.

 °F AIRFRYER TEMP

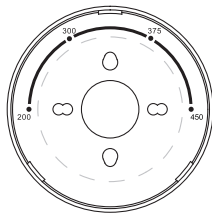

HOW TO USE THE DEHYDRATOR

Once you turn the function switch to DEHYDRATE and adjust the timer knob to choose your desired time, the dehydrator will begin working. There is no need to adjust the temperature when using the dehydrator, as there is a fixed thermostat that controls the temperature of the dehydrator. Use this function to make dried fruit or jerky.

 
HOW TO USE THE AIRFRYER

-  Broil - heat comes from above (browning a casserole or melting cheese)
-  Bake - heat comes from below (making fries, chicken nuggets or baked goods)
-  Toast - heat comes from above and below (make toast or warm up leftovers)



USING YOUR AIR FRYER OVEN

To start the oven, turn the function knob to BAKE or BROIL, adjust the oven temp knob, and then set your desired temperature.

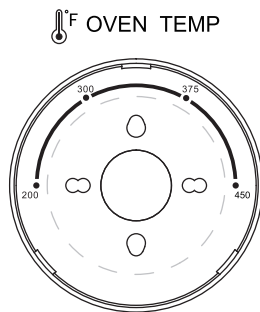

HOW TO USE THE INNER LAMP

Press the lamp switch to turn on the lamp, so you can check the status of your food.

COOKING TIPS

- 1 Ensure that there is enough ventilation around the oven.
- 2 Ensure that the oven is completely dry before use.
- 3 Do not place the oven on an untreated wooden surface.
- 4 For maximum performance, preheat the oven for 10-15 minutes.
- 5 Oil the baking tray or rack before putting food on it to provide stickiness.
- 6 Place the removable drip tray under the rack to avoid oil dripping to the oven's bottom and causing greasy build-up.



CARE & MAINTENANCE

- Unplug the oven and allow it to cool completely before cleaning.
- Do not immerse the oven in water. All surfaces can be cleaned with a clean, damp cloth.
- For stubborn grease, use a clean cloth with a mild soap solution.
- Do not use abrasive cleaners or sharp utensils to clean the oven as they may cause damage.
- Clean the interior of the oven with a clean, damp cloth.



ELECTRICAL REQUIREMENTS

Voltage: 120V

Wattage: 1700W

Hertz: 60Hz



OVENTE WARRANTY

LIMITED ONE (1) YEAR WARRANTY

At Ovente, we aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, and we back all our air fryer ovens with a one-(1) year warranty from the date of purchase from an authorized retailer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fees may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

For product support email support@ovente.com or call **1-855-926-2626**.
Visit us at ovente.com



Facebook.com/ovente



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



youtube.com/ovente

ovente.com

OVENTE®

Defining Housewares