

Manual Book

Ceiling Fan with Lights




Installation Video Applicable



APP Control Applicable

Packing List

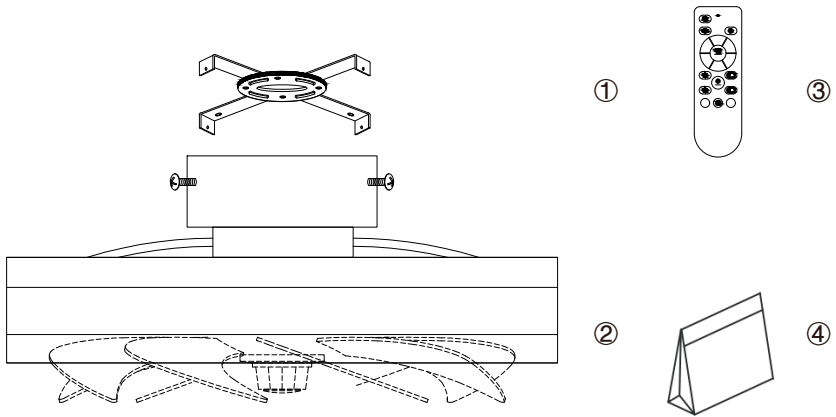

Name	QTY	Name	QTY
① Mounting Bracket	1	③ Remote Controller	1
② Ceiling Fan	1	④ Hardware Bag	1

NOTE:

1. Ceiling fan ② style may be different from the diagram.
2. Remote control requires AAA 1.5V battery x 2pcs (not included).

Safety Rules

1. Be sure the power to the wires you are working on is disconnected, either the fuse is removed or the circuit breaker is turned off. Turning the power off using the light switch is not sufficient to prevent electrical shock.
2. A qualified licensed electrician is required for the installation.
3. The outlet box and support structure must be securely mounted and capable of reliably supporting a minimum of 50 pounds. Use only UL (cUL for Canadian Installation) listed mounting boxes marked "FOR FAN SUPPORT".
4. The fan must be mounted with a minimum of 7 feet clearance from the trailing edge of the blades to the floor.
5. Do not operate reversing switch while fan blades are in motion (if applicable). Fan must be turned off and blades stopped before reversing blade direction.
6. Do not place any objects in the path of the blades.
7. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
8. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened soft cloth will be suitable for the cleaning.
9. After marking electrical connections, spliced conductors should be turned upward and pushed carefully up into outlet box. The wires should be spread apart with the grounded conductor on one side of the outlet box.
10. Electrical diagrams are reference only, different fan light may have different light shade and bulbs.
11. Use only our replacement parts. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions may cause harmful interference to radio communications.

Warning:

To reduce the risk of personal injury, use only the two steel screws and washers provided with the outlet box for mounting to the outlet box. Most outlet boxes commonly used for the support of lighting fixtures are not acceptable for fan support and need to be replaced, consult a qualified electrician if in doubt.


To reduce the risk of fire, electric shock or person injury, mount fan to outlet box marked "acceptable for fan support".

To reduce the risk of personal injury, do not bend the blade brackets (also referred to as flanges) during assembly or after installation. Do not insert objects in the path of the blades.

Installation Video

Scan for online installation video

Note: Product in the video may be different from this one.

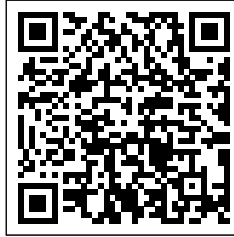


1. Installation Preparation


Tools You Need




Ladder

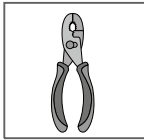


Pliers

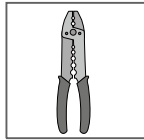

Wire Strippers

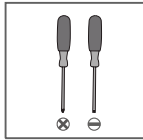

Screwdrivers

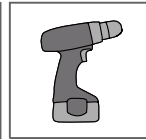


Power Drill (optional)




Drill Bit (optional)

If mounting to a support structure, you will also need the optional tools.

What to Expect with Your Installation

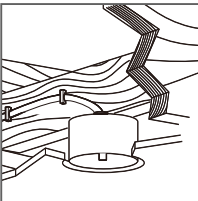

Must be able to secure the fan to building structure or fan-rated outlet box

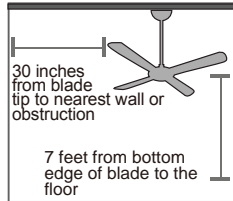

Assess location



Check box to see fan weight



Angled Ceiling not supported.

2. Installing the Fan

NOTE: THIS FAN ONLY NEEDS ONE SET OF INPUT WIRES (black, white and ground wire). Both of the fan and lights will be controlled by the remote controller. The wall switch is not able to control the fixture full functionally.

THIS FAN CAN ONLY BE CONNECTED ONTO ON/OFF SWITCH IF YOU HAVE ONE, NOT SUITABLE FOR DIMMAER SWITCH.

Step 1. Install the Bracket

Secure the mounting bracket to the ceiling outlet box with the screws and washers provided with your outlet box (Fig. 1).

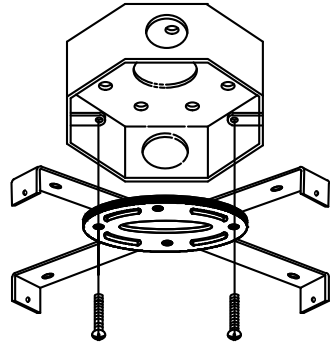


Fig. 1

Step 2. Connect the wires

Connect the black wire from the remote receiver to your house live wire, white wire to your neutral wire, bare copper/ green/ yellow and green wire to your ground wire. Spread the wires apart so that the live wires are on one side of the outlet box and the neutral wires are on the other side (Fig. 2).

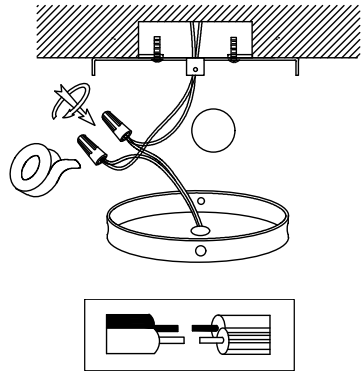


Fig. 2

Step 3. Attach the ceiling fan

Attach the ceiling fan to the mounting bracket on the side of canopy with screws provided (Fig. 3).


 


Fig. 3

Remote Control Instructions

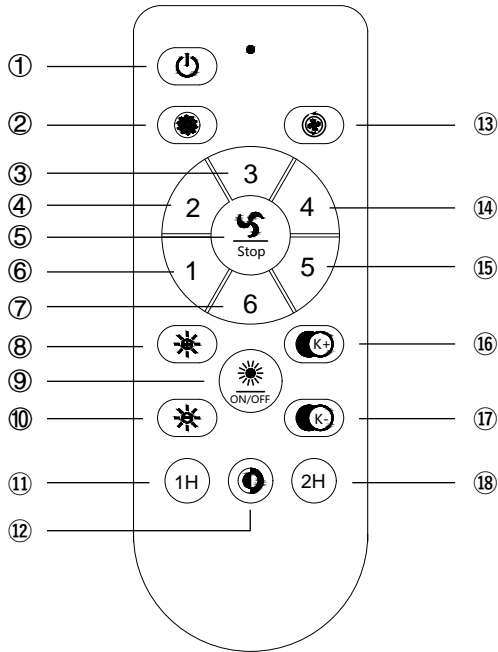

NOTE:

Please insert 2 batteries before using.

AAA 1.5V battery x 2pcs (not included)

①: Turn off the light / fan

②: Turn on the wind guide wheel (not applicable for this fan).

③④⑥⑦⑭⑮: Turn on the fan / fan speed

⑤: Turn off the fan

⑧⑩: Adjust the brightness of the light

⑨: Turn on / off the light

⑪⑱: Timing the fan.

⑫: Quick switch of the light color: warm white→cool white→daylight white

⑬: Fan moves forwards or reversely.

⑯⑰: Adjust the light color temperature.



REMOTE SIGNAL PAIRING: If the remote control loses signal of the fan, press and hold the button ⑨ at the very beginning after it's turned on from wall switch. After the fan light flashes or beeps, it's done.


APP Control Instructions




NOTE: Scan the QR code and install the APP in your phone, or search and install "FanLamp Pro" from Google Play, Apple App and other APP stores.


Make sure your phone is connected to the internet and bluetooth enabled.

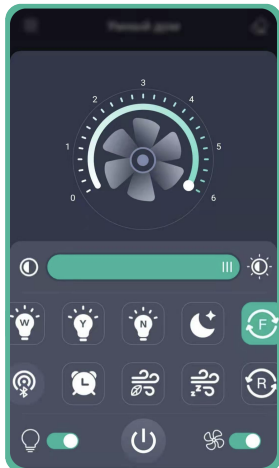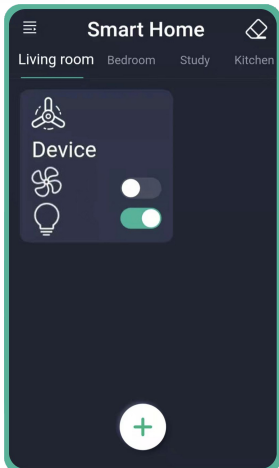


 Pair button. Click it within 5 seconds after the fan is powered on from wall switch. After the fan flashes or beeps, it has been successfully paired with the phone, it can be controlled through it.


 Slide to change the fan speed.

 Slide to change the brightness of the light.

 Quick switch for "White" light color.

 Quick switch for "Yellow" light color.


 Quick switch for "Natural" light color.

 Night mode, dim the lights.

 Fan moves forwards.

 Change the direction of the wind.

 Timing the fan.


 Natural wind: fan speed will change automatically when use this function.

 Sleeping wind.

 Fan moves reversely.

 Turn on/off the light.

 Turn on/off the fan.

 Unpair button. Click it within 5 seconds after the fan is powered on. After the fan flashes or beeps, it has been successfully unpaired with the phone.

NOTE: This is an universal APP, some functions are not applicable on this fan. Please refer to the functions of the fan.

Trouble Shooting

1. Fan Does Not Work

- Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.
- Check the remote control battery (not included in this package).
- Check the circuit breaker to ensure the power is on.
- Turn off power from the circuit breaker, then loosen the canopy and check all the connections according to the wiring diagram.

2. Lights Do Not Light Up / Flicker / Noisy Operation

- Make sure the fixture is connected to an ON/OFF wall switch, not a dimmer switch.
- Check your power and switch to make sure it's power on.

3. Fan Noisy Operation

- Re-tighten all screws on the bracket.
- Check to see if any of the blades are cracked. If so, replace the blades.

4. Remote Does Not work

- Make sure the battery is installed correctly.
- Pair the remote control again (See page 5).
- Install 2 new batteries.

Clean And Care

To clean, wipe the fixture with a soft cloth. Spray from chemical cleaners can discolor the finish of the fixture. Do not use scouring pads, powders, steel wool or abrasive paper to clean this fixture.

Contact Information

Please contact us with following information:

1. Screen shot of your order page, including product picture, name and order ID number.
2. Problem details with pictures / short video if possible.