Chill 'N Swing with Glider Brackets (04-0031)

1. The Chill 'N Swing comes with a two ropes on each side fastened to steel rings. The steel ring is approximately 2" in diameter on the outside and is approximately 1/4" thick. The distance from the bottom of the swing to the top of the ring is approximately 71". This distance may be adjusted by tying knots in the ropes underneath the swing seat.

The Chill 'N Swing seat is approximately 43-1/2" L x 21-1/2" W. The seat has a metal perimeter frame with foam padding on the outside perimeter. The frame is wrapped in nylon strapping. The seat surface is made of nylon web strap material which is wrapped around the frame and then stitched to itself. Individual web straps are woven and sewn together.

2.See page 3 for instructions to install the Glider Brackets and hang the Chill 'N Swing.

3. A distance of 8" should exist between the outside surface of the Chill 'N Swing seat and any adjacent swing or swing structure. Also, a minimum of 8" should exist between the bottom of the Chill 'N Swing Seat and the protective surfacing on the ground.

4. Safety comes first when swinging. Always obey the safety rules when swinging and when walking around a swing set. We have included a Safety Tips Guide on page 2.

5. Chill 'N Swing Weight Limit: 220 lbs. Also, do not exceed the weight limit of the swing hangers or swing beam.



SAFETY TIPS FOR SWINGS

• On-site adult supervision is required.

• Teach children not to walk close to, in front of, behind, or between **moving swings** or other moving playground equipment.

• Teach children to sit in and never stand on swings. (Exception to this rule is a product called "Stand -N- Swing")

• Teach children not to twist the chains and ropes and not to loop them over the swing beam, since this may reduce the strength of the chain or rope.

- Teach children not to jump from swings that are in motion.
- Teach children not to push empty seats. The seat may hit them and cause injury.
- Teach children to sit in the center of swings with their full weight on the seats.
- Teach children not to use the equipment in a manner other than intended.

• Parents should have the children dress appropriately with well-fitting shoes. Loose clothing such as scarves and ponchos should not be worn. Always take off, tie up or tuck in cords and drawstrings on children's clothing. These things can get caught on playground equipment and strangle a child.

• Teach children not to climb when the equipment is wet.

• Teach children not to attach items to the playground equipment that are not specifically designed for use with the equipment, such as, but not limited to, jump ropes, clothesline, pet leashes, cables and chains, as they may cause a strangulation hazard.

- Teach children to never wrap their legs around swing chain.
- Teach children to never slide down the swing chain.

Protective surfacing under swings is recommended. "To and Fro" swings should have a fall zone extending a minimum of 6' from the outer edge of the support structure on each side. The "fall zone" in front and back of the swing should extend out a minimum distance of twice the height of the swing as measured from the ground to the top of the swing support structure. Swings should have a minimum of 8 inches between them. (ASTM F-1148-09) The bottom of a swing should not be less than 8 inches above the protective surfacing material. (ASTM F-1148-09) Home Playground Safety Specification ASTM F-1148-09 may be purchased online. A guide for Public Playground Safety from the U.S. Consumer Product Safety Commission may be downloaded at: www.cpsc.gov/cpscpub/pubs/325.pdf
A fall zone for a "tire swing" capable of unlimited lateral motion will be equal to a minimum horizontal distance of Y + 72 in. in all directions from the pivot point of the swing. Y equals the vertical distance between the pivot point and the top of the tire swing. Protective surfacing is recommended in the fall zone for tire swings.

If any of the following conditions are noted they should be removed, corrected or repaired immediately to prevent injuries:

- Hardware that is loose, worn, or those that have protrusions or projections.
- Scattered debris, litter, rocks or tree roots.
- Missing or damaged equipment components, such as swing seats.
- Remove plastic swing seats and take indoors (or do not use) when the temperature drops below 32° F.
- Oil all metallic moving parts monthly during the usage period.
- Check swing seats, ropes, cables and chains monthly during usage season for evidence of deterioration.

Replacement should be made of any swing seat that has developed cracks in the plastic seats or has exposed metal in the edges of the swing seat. If there are already exposed metal inserts on the edge of the seat, immediately remove the seat and chains to prevent serious injury. Ropes, cables and chains should be removed and replaced if excessive wear is found.

GLIDER SWING BRACKET INSTALLATION

NOTE: THE GLIDER BRACKET DOES NOT COME WITH HEX LAG SCREWS AND WASHERS.

Assemble the Glider Brackets as shown in Detail A below.

Measure from the protective surfacing under your swing beam to the bottom of the swing beam. Use the chart below to find "Dimension A" that matches the measurement you just made.

1. Place the Glider Bracket over the top of the beam. Keep in mind when placing these brackets that the outside of the Chill 'N Swing must be located 8" away from any other swing or swing structure.

2. Fasten the top hole in the bracket to the beam with a 3/8" x 2-1/2" hex lag screw and a 3/8" washer.

3. Predrill 11/64" holes 1-1/2" deep into the beam through the holes in the flanges of the bracket.

4: Attach the flanges to the beam with 3/8" x 1-1/2" hex lag screws and 3/8" washers.

5: Space the second Glider Bracket away from the first bracket by the distance "A". Repeat 2-4.

