

 
# G

---

## GENESIS

### 42 Inch Oscillating Digital Tower Fan

Model: G5TOWERFAN

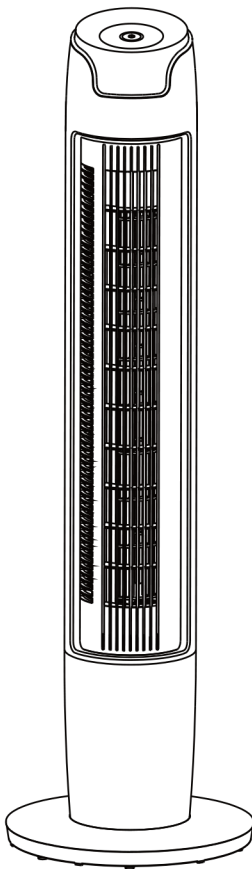


***READ AND SAVE THESE INSTRUCTIONS***

Attention: Pictures in the manual are for reference only.


# INSTALLATION INSTRUCTIONS

## ■ Components and Parts

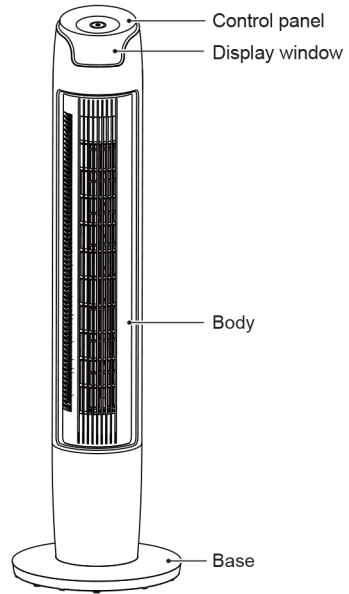


## ■ Base Assembly


- Align the column in middle of pedestal with the hole and revolve for fitting.

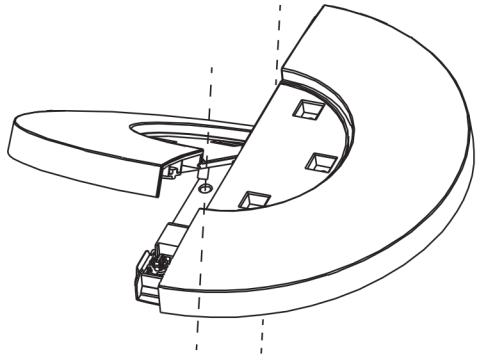

- Rotate the arrows of the two rotary knobs about 90°.

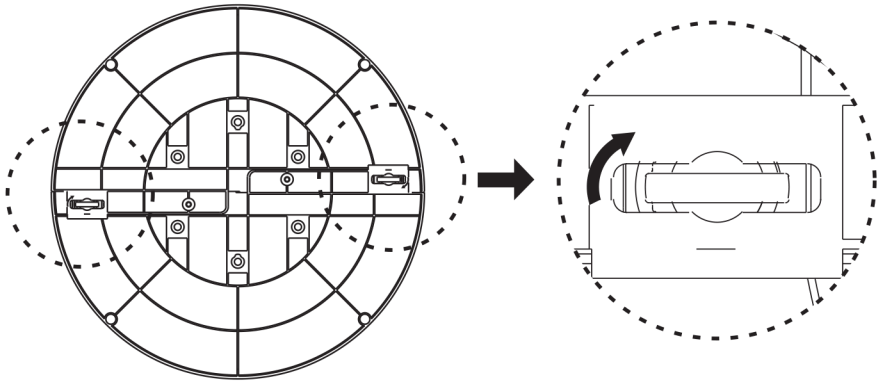


- Connect the pedestal and body.  
Align the three screws with the corresponding hole locations and screw tightly.

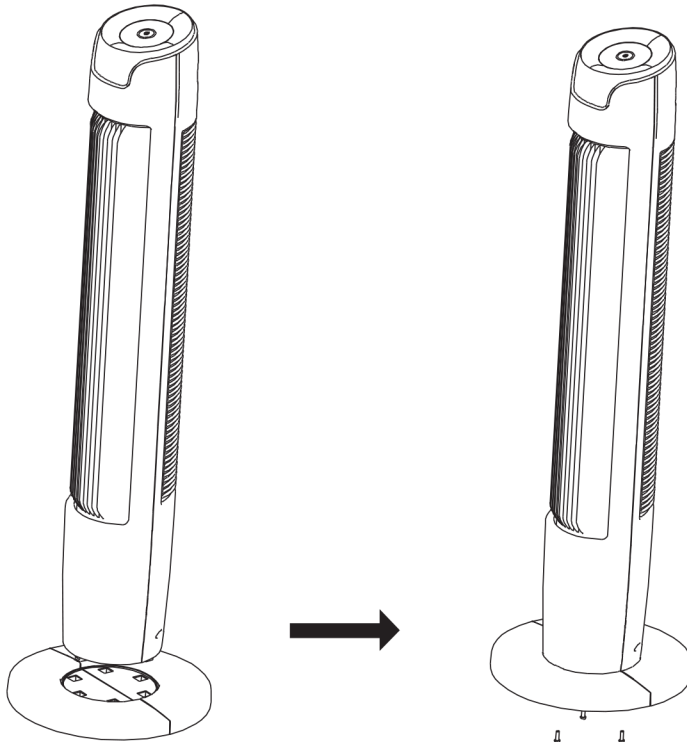

## ■ Instructions for Operation

- Press “+”、“-” buttons to adjust the 6 speeds of air flow.  
(Note: During “Sleep” and “Natural” wind modes, only 3 speeds will be functional.)
- Press “⌚” buttons and then the “+”, “-” buttons to adjust the timer.  
-When the fan is on, press the “⌚” button to set the timer for the fan to shutoff after 0.5-12 hours.  
-Use the “+”, “-” button to select the amount of time in half hour increments.
- Press “🌀” button to switch between Normal, Natural and Sleep Functions.
- Press “↔️” button to: to activate the oscillation feature.

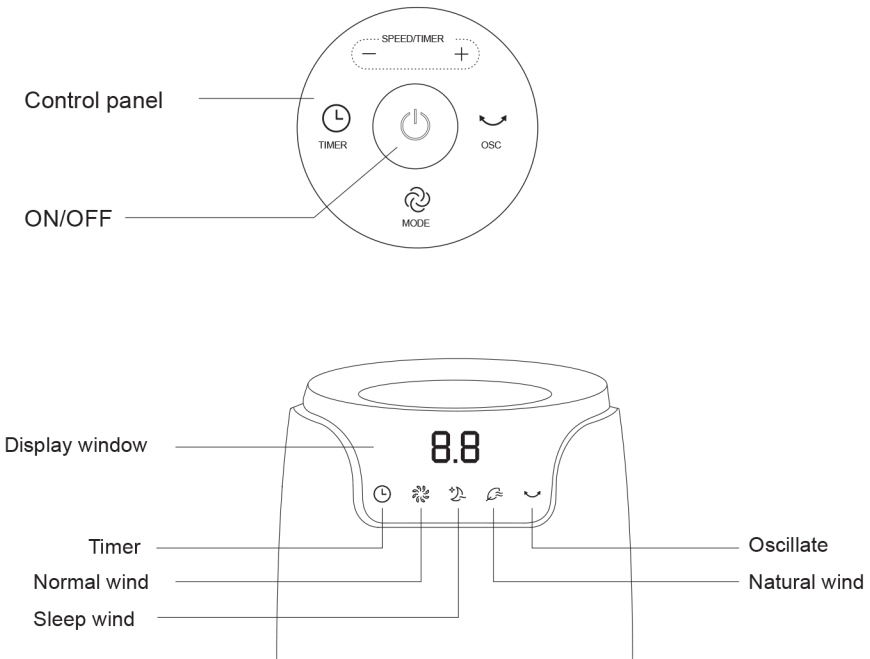



# OPERATING INSTRUCTION

## I. Remote Control

### a. **BUTTON INSTRUCTION**

#### 1. “” ON/OFF BUTTON

The “” button is for powering on the fan. The fan will default to natural wind mode.

Press the “” button to power off the fan.

#### 2. “” SPEED BUTTON

When the fan is on, you can press this button repeatedly to cycle through the 6 speeds.

#### 3. “” TIMER BUTTON

When the fan is on, you can press this button repeatedly to cycle through the timer settings in increments of half hours up to 12 hours.



#### 4. “” OSC BUTTON

When the fan is on, you can press this button to activate or deactivate the oscillation feature.



#### 5. “” MODE BUTTON

Press this button to select one of the 3 wind modes. The sequence will be; normal, natural, and sleep wind modes when pressed repeatedly.



##### Normal wind


Press the “” button to select normal wind, then press the “” button repeatedly to choose from the 6 speeds.

##### Natural wind

Press the “” button to select the natural wind, then press the “” button repeatedly to choose from 3 speeds.

##### Sleep wind

Press the “” button to select the sleep wind, then press the “” button repeatedly to choose from 3 speeds.

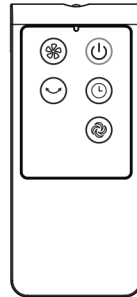


## **b. BATTERIES**

**(batteries are not included in the packing)**


1. Slide open the battery compartment cover.
2. Insert two AAA batteries making sure they are placed in the direction shown in the diagram here.
3. Slide the battery cover back on.

**NOTES:** Use size “AAA” manganese or alkaline batteries. Do not use rechargeable batteries.

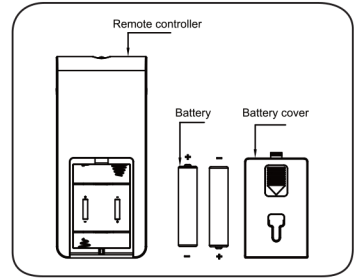


## **c. BATTERY WARNING**

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

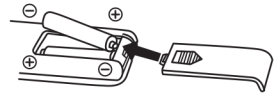

## **d. REMOTE CONTROL OPERATION**

Point the remote control at the front display of the fan and press the desired button. The remote control will work at distances of up to approximately five meters and an angle of 30 degrees from the right or left of the front display. The batteries must be removed from the remote control before it is discarded and dispose of them properly.

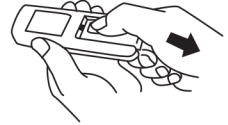

## **e. OVERHEAT PROTECTION OF THE MOTOR**

The windings of the motor have a thermal-fuse that if it burns out, it will turn off the fan to keep the temperature of the motor from overheating and damaging the plastic parts of the fan.

If you encounter any issues or have any concerns,  
please email us at [support@genesisco.com](mailto:support@genesisco.com)  
or call 1800-256-0695.

Please see our website to learn more about our products [www.genesisco.com](http://www.genesisco.com)

