

Instruction Manual

Wooden Porch Swing



1. Please find the assembly guidelines on Page 2 - 5.
2. Scan the QR code below to watch the assembly video on YouTube.



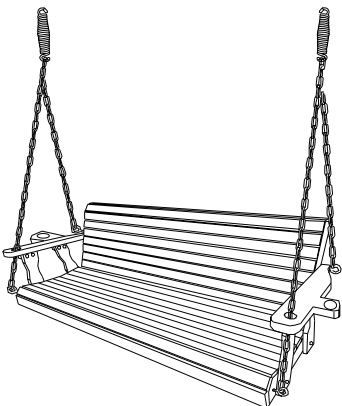
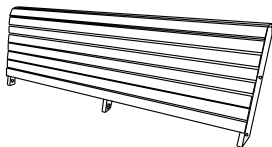
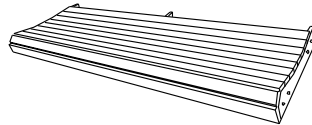
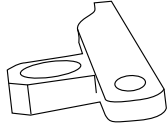
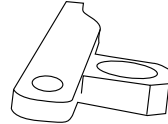
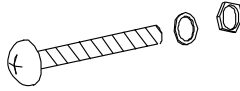
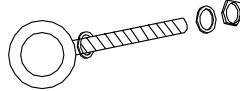
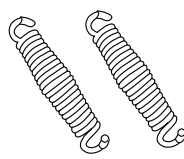
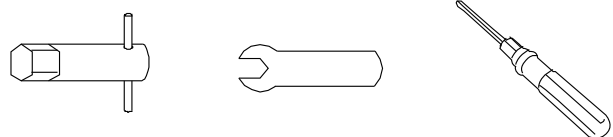
3. 2 year warranty.
4. There may be cracks or scratches due to violent impacts during the shipping process. If you find any defects, scratches, or missing parts, please feel free to contact us via email: cs@innovaze.com or any of the contact methods below. Please tell us your order number, shipping address, and which part is needed. We will respond within 24 hours and provide free replacement parts or other services you need.
5. Please check the nuts regularly for looseness and tighten them.

MEGA CASA INC. dba Innovaze USA

18003 Cortney Court, City of Industry, CA 91748


Phone Number: 1-888-810-6342

E-mail: cs@innovaze.com

			
	A × 1	B × 1	C × 2
			
	D × 2	E × 1	F × 1
			
	M6X50mm G × 18	M10X65mm H × 4	I × 2
			
K × 2		TOOLS INCLUDED	


* If any parts are scratched or damaged in transit (very low probability), please contact the seller or Innovaze customer service for partial refund and replacement parts.

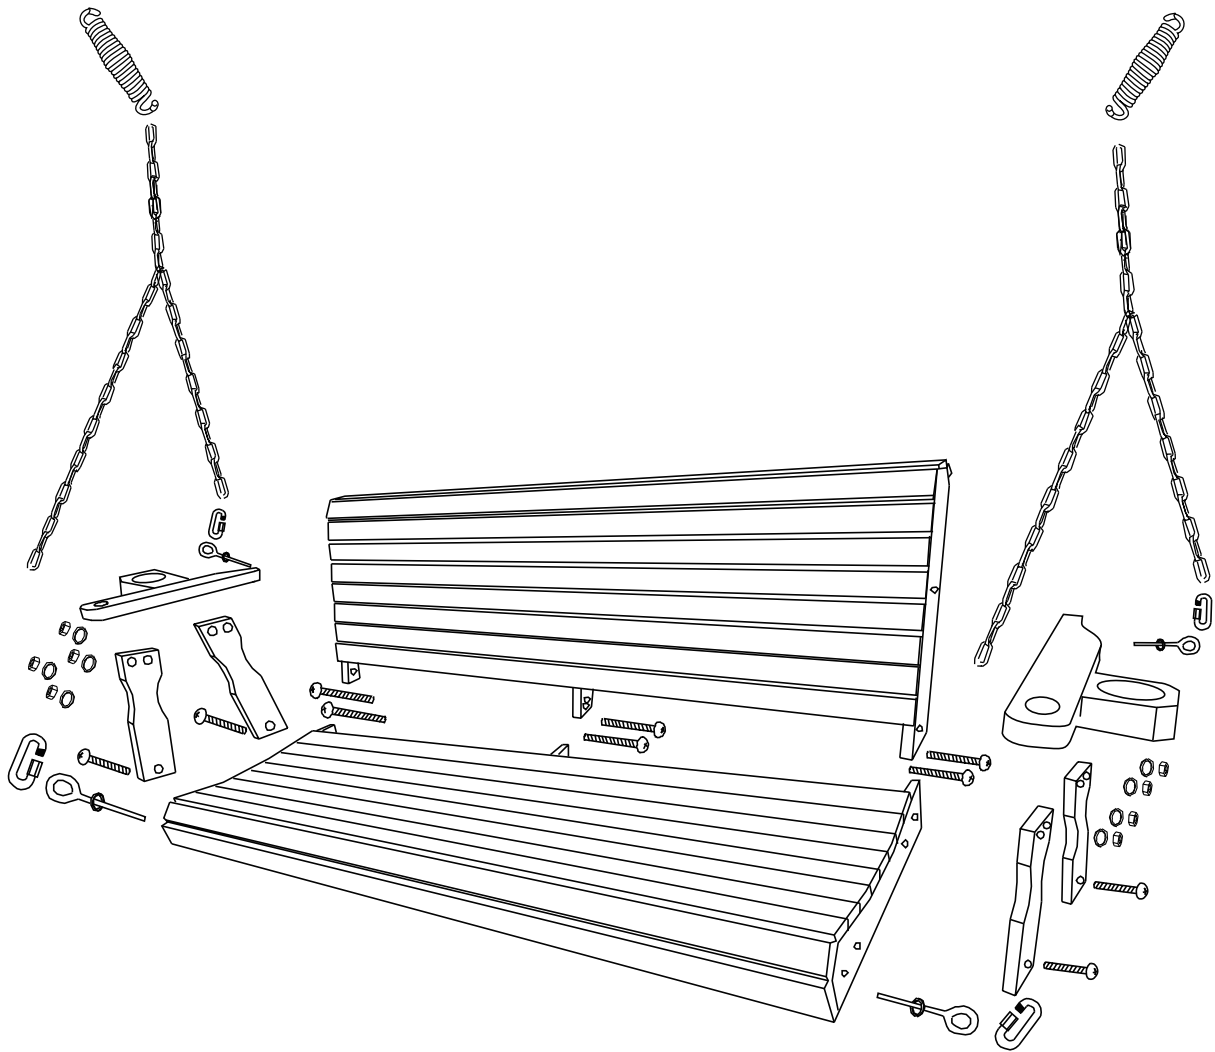We provide excellent after-sales service, which is appreciated by many buyers. Your satisfaction is our main goal.




Precautions before Assembly

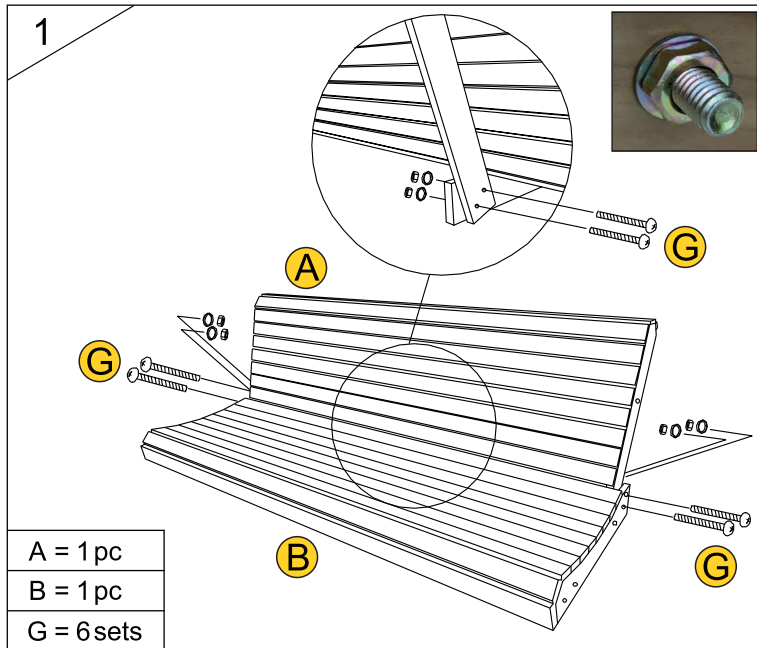1. The smell of PU wood paint will be greatly reduced after 1-3 days.
 2. Do not tighten all screws and nuts until last step. Fixing a single part too early may make other parts difficult to assemble. Do not overtighten it to avoid damaging the wood.
- * If you encounter any problems during the installation process, please feel free to contact us. We will be happy to help you solve the problem.




1. Note: Part A can be moved back and forth in a small amount to make the screw pass through the two holes smoothly.

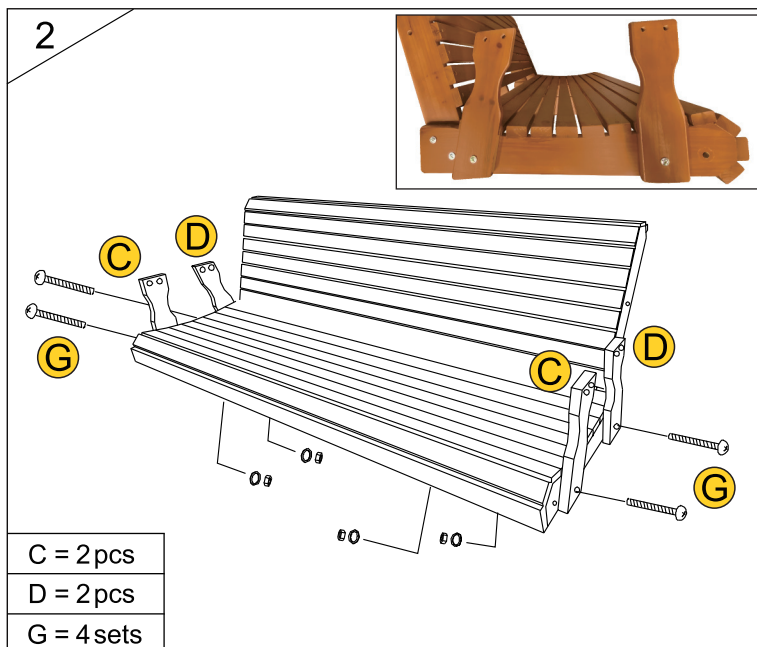Check after this step: The screws on both sides should pass from the outside to the inside, so as not to be hurt by the protruding screws. The washer should be installed on the same side as the nut. All screw nuts should not be tightened.




2. Note: Please distinguish between Part C and D.

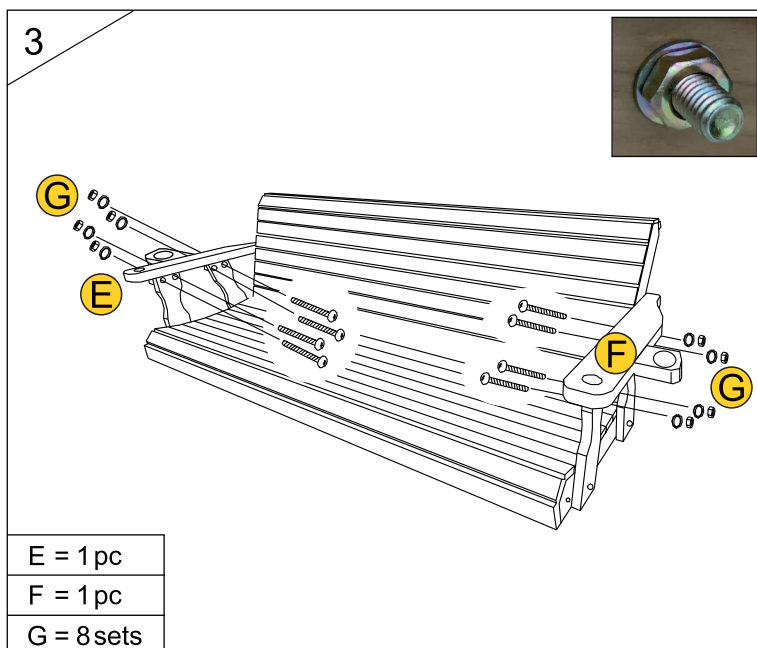Check after this step: All screw nuts should not be tightened.



3. Note: If the screw nuts are not tightened and the direction of Part D is correct, the armrest should be easy to install.

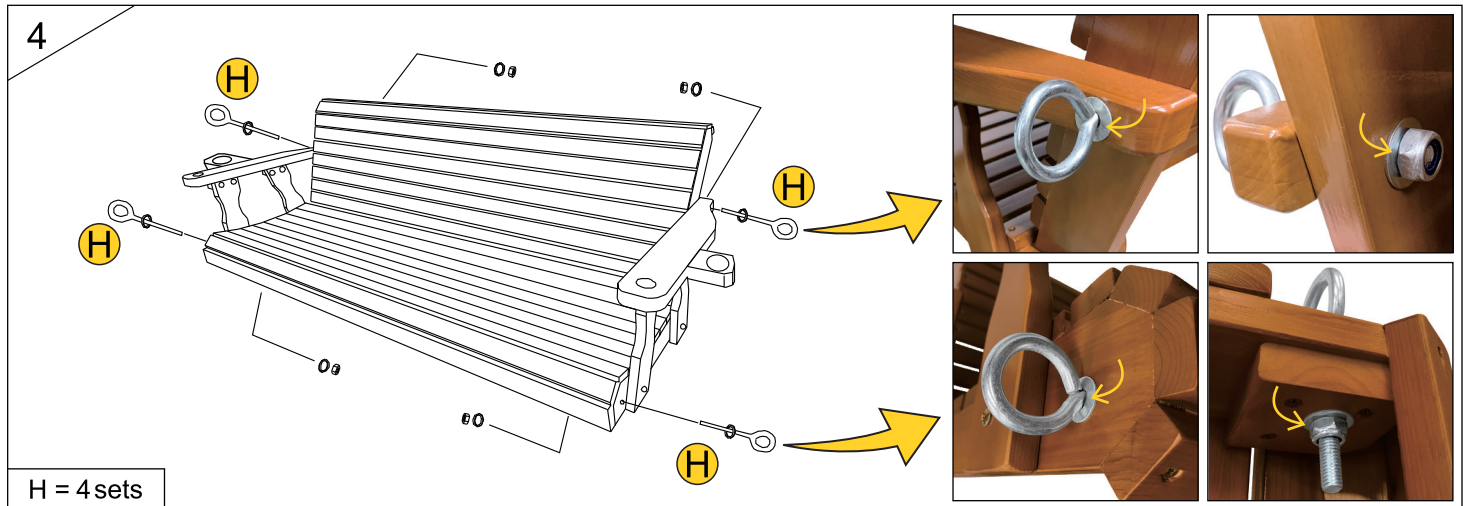Check after this step: The screws on both sides should pass from the inside to the outside, so as not to be hurt by the protruding screws. The washer should be installed on the same side as the nut. All screw nuts should not be tightened.




4. Note: After confirming that all wooden parts are assembled correctly, now we install the eyebolts and tighten all the screw nuts.

⚠ The following two points are the most important in the entire installation process:

- (1) Part H, the eyebolt, has two metal washers, one should be on the inside (next to the nut) and the other one on the outside (next to the ring).
- (2) The nut of the eyebolt is a lock nut with a layer of blue plastic inside. It takes more force to tighten it, and it is not easy to loosen after tightening. The nuts of the eyebolts should be tightened to the tightest that the rings will not turn. In this way the swing can hold 880 lbs.

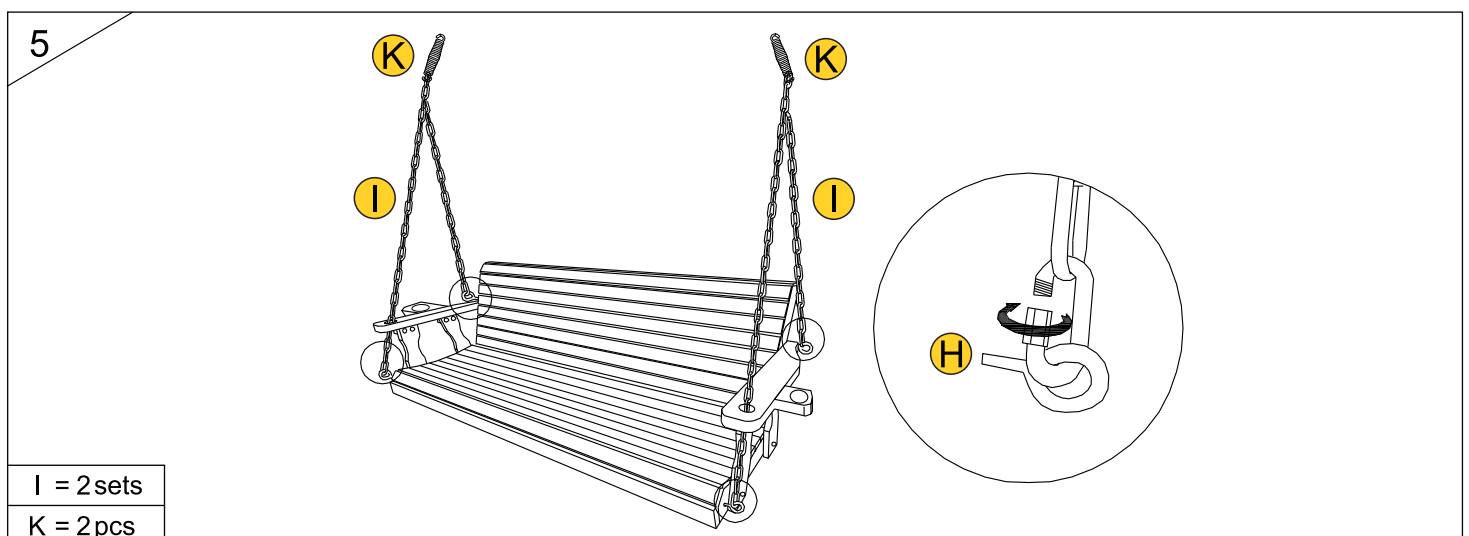⚠ Check after this step: All the washers of the eyebolts should be in the correct place and the nuts should be tightened to the tightest. We've had cases where buyers installed washers in the wrong place or didn't install washers, or didn't tighten the nuts, and as a result, the armrest or seat portion broke when the swing was in use. Although we will ship out new replacement parts, but this will take extra time to ship and reinstall.



5. Note: Please link the lock to the eyebolt and tighten it. You can adjust the backward tilt angle of the swing by adjusting the number of iron chain links.