

I. Installation Guide

Confirm Installation Environment: This metal arch backdrop stand is suitable for both indoor wedding venues and outdoor garden areas. For outdoor use, choose a flat, solid ground (avoid soft soil or sloped surfaces) to ensure the base stays stable. Clear the installation area of debris, sharp objects, or obstacles to prevent interference during assembly.

Tool & Part Preparation: Before starting, check that all parts (as listed in the Replacement Part List) are complete and free of damage. No additional tools are required for assembly—all connecting components are designed for manual installation. If assembling outdoors on windy days, prepare weights (such as sandbags) in advance to secure the base (weights not included with the product).

Safety Precautions: The arch stand has a maximum load capacity suitable for wedding decorations (e.g., balloons, flowers, lightweight fabrics) and climbing plants (for garden use). Do not hang heavy objects exceeding the stand's bearing capacity. During assembly, avoid pinching fingers when connecting metal parts; if parts are tight, gently adjust instead of forcing them to prevent deformation.

II. Instructions / Assembly

Assemble the Arch Frame: Take out the 4 main arch support rods (2 for the left side, 2 for the right side) and the top connecting rod. Align the threaded ends of the left support rods with the left ports of the top rod, and manually twist them clockwise until fully tightened. Repeat the same step for the right support rods and the right ports of the top rod—ensure the connections are firm to avoid wobbling.

Install the Base: Take the 2 base plates and the 4 base connecting rods. Screw one end of each base connecting rod into the bottom threaded holes of the left and right arch support rods (2 rods per side), then twist the other end of each rod into the corresponding holes on the base plates. Tighten all connections by hand to make sure the base is perpendicular to the arch frame.

Secure the Stand: Place the assembled arch stand in the desired location. For indoor use, ensure the base plates are flat on the ground; for outdoor use, if the ground is soft or windy, place sandbags (or other weights) on the base plates to enhance stability. Adjust the angle of the arch frame slightly if needed—ensure the entire stand is upright and does not lean to either side.

Add Decorations/Plants: Once the stand is stable, you can attach wedding decorations (e.g., balloon clusters, floral garlands, tulle) to the arch frame using zip ties or floral wire. For garden use, gently guide the plant vines around the arch rods—avoid wrapping vines too tightly to prevent damage to the stand or plants.

III. Replacement Part List

Main arch support rods: 4 pieces (2 left, 2 right)

Top connecting rod: 1 piece

Base plates: 2 pieces

Base connecting rods: 4 pieces

Threaded locking caps (for reinforcing connections): 6 pieces (2 for the top rod, 4 for the base rods)

IV. Use and Care Manual

(I) Usage Instructions

Decorative Use (Weddings): When using as a wedding balloon arch or backdrop stand, attach decorations evenly to the frame to distribute weight. Avoid concentrating all decorations on one part of the arch, as this may cause the stand to tilt. After the wedding, remove decorations gently to prevent pulling or damaging the arch rods.

Garden Climbing Use: For climbing plants (e.g., roses, jasmine, ivy), regularly check the growth of the vines—trim overlong or dense vines to reduce weight on the stand. Do not let vines cover the base plates completely, as this may make it difficult to check the stability of the base.

Environmental Limitations: The stand is designed for outdoor use but should be moved indoors or covered with a waterproof cloth during heavy rain or snow to avoid prolonged exposure to moisture. Do not use the stand in extreme weather (e.g., strong winds above level 5, thunderstorms) to prevent it from toppling.

(II) Care Tips

Daily Cleaning: After each use (especially outdoor use), wipe the metal surface with a dry soft cloth to remove dust, dirt, or plant sap. If there is stubborn dirt, dampen the cloth with a small amount of neutral detergent (e.g., mild dish soap diluted with water), wipe gently, then dry immediately to prevent water spots.

Rust Prevention: The metal stand has a basic anti-rust coating. Avoid scratching the coating with sharp objects (e.g., scissors, wire cutters) during use. If the coating is damaged and rust appears, lightly sand the rusted area with fine-grit sandpaper, then apply a thin layer of metal anti-rust paint to prevent further rusting.

Storage: When not in use for a long time, disassemble the stand in reverse order of assembly (first remove decorations/plants, then detach the base, top rod, and support rods). Store all parts in a dry, well-ventilated place (avoid damp basements or direct sunlight). Place small parts (e.g., locking caps) in a sealed bag to prevent loss. Do not stack heavy objects on top of the stored parts to avoid bending or deforming the metal rods.