 


# Assembly Instructions

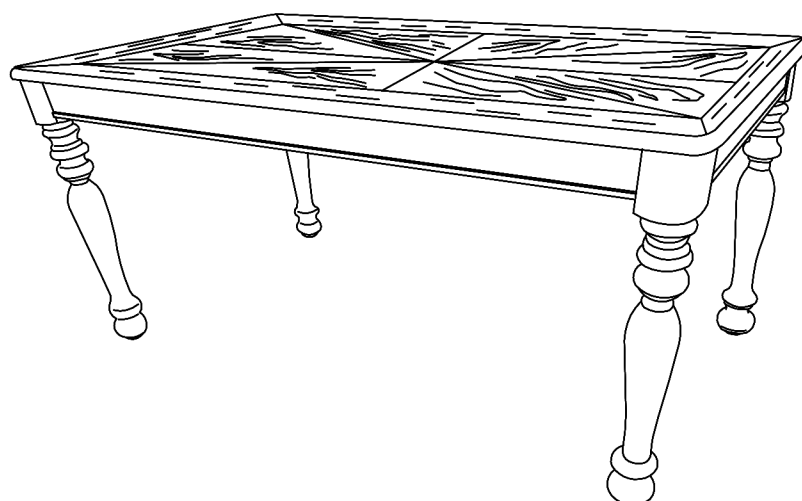

## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

## Tools Required For Assembly:

Allen Wrench



(Included)




2 PERSONS RECOMMENDED


# ASSEMBLY & CARE ADVICE

 FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

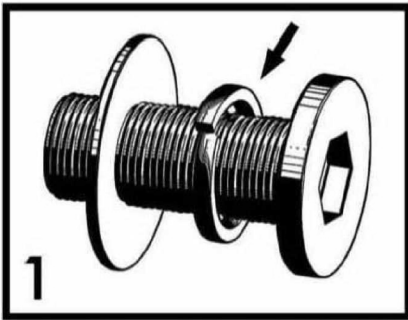

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

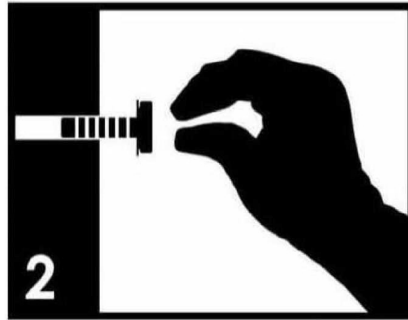

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

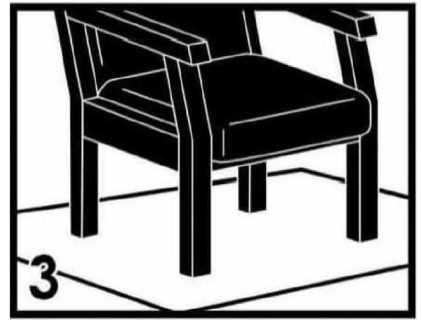

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

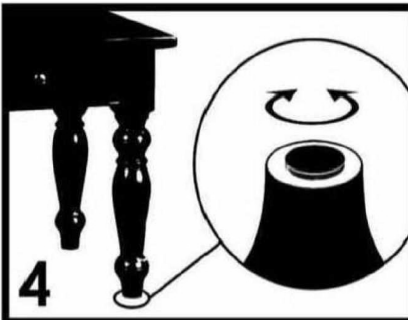

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

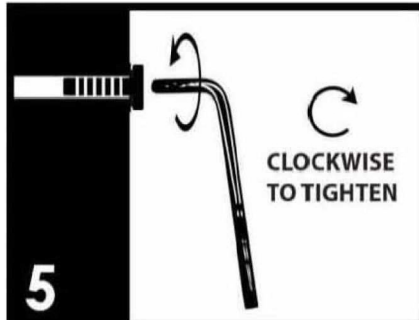

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

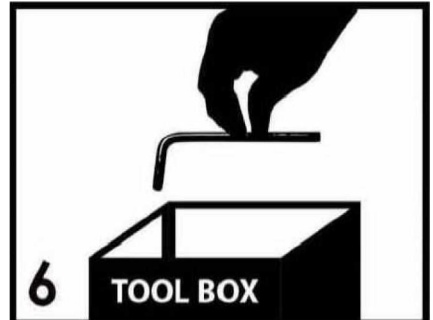


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

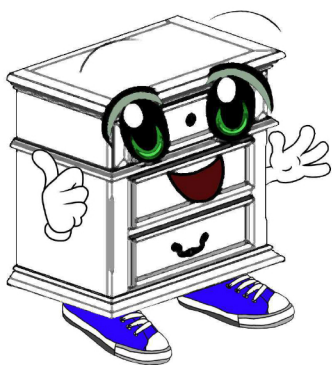 

Before you begin, please read Page 2 of "Assembly and Care Advice".


And remember, do not tighten until each step is completed or instructed.

## Parts List



#1 x 1pc

 Table Top



#2 x 4pcs

Table Leg

## Hardware List



#A x 8pcs

Bolt Ø5/16"X3"



#B x 8pcs

Lock Washer



#C x 8pcs

 
Flat Washer



#D x 1pc


Allen Wrench

# Exploded view

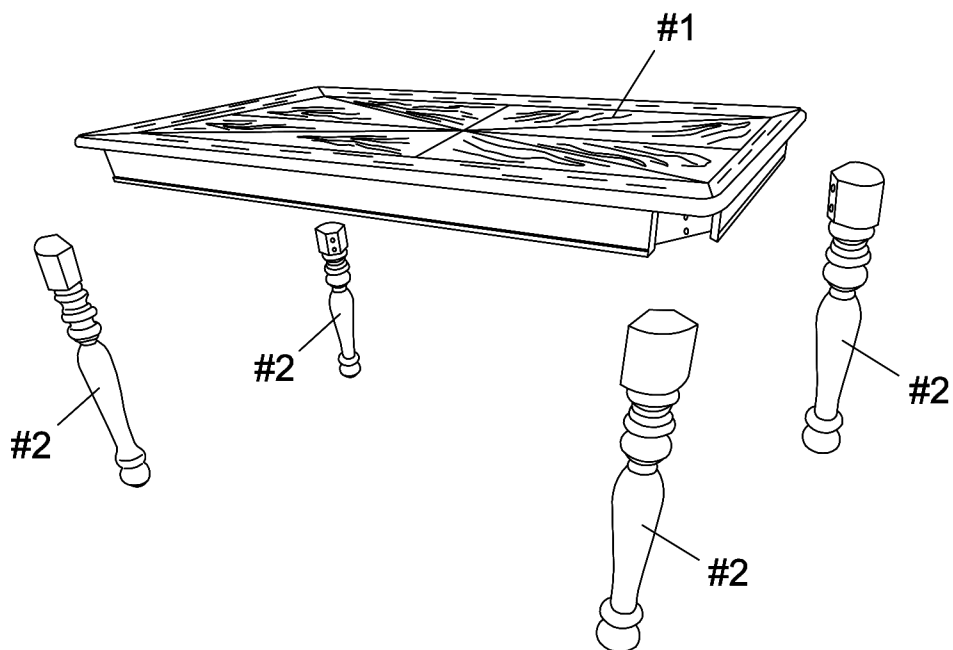


Prepare 8 bolts assembly by inserting lock washer (#B), then flat washer (#C) onto bolts (#A).  
Align table legs (#2) to the table top (#1), then secure with bolts (#A).

#A x 8pcs  
#B x 8pcs  
#C x 8pcs

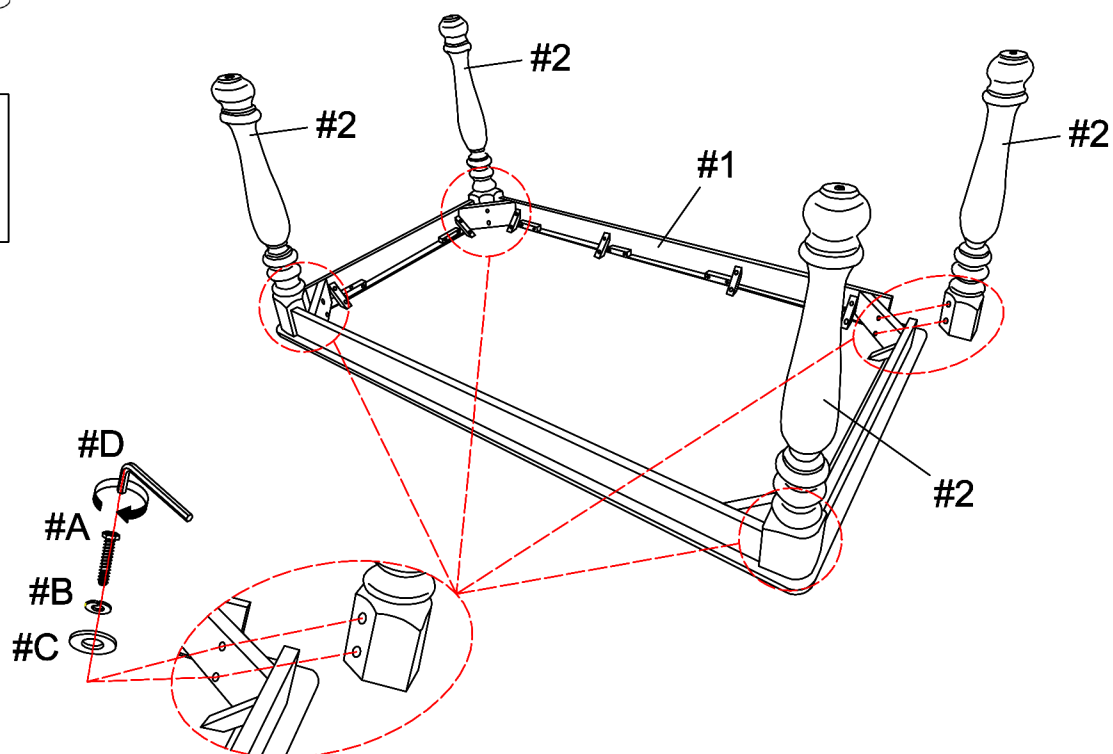 



# Assembly Instructions

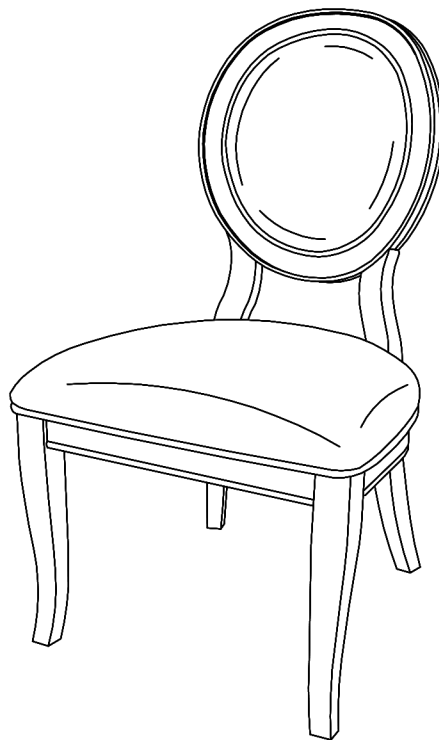 


## ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY  DIFFICULT

## Tools Required For Assembly:

 Allen Wrench




(Included)


# ASSEMBLY & CARE ADVICE

 FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


## BASIC ASSEMBLY TECHNIQUES

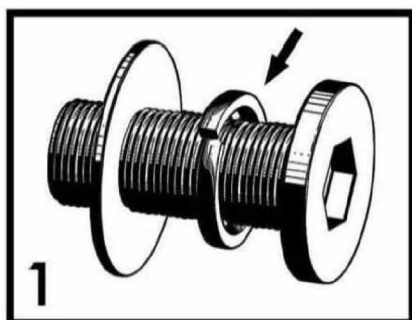

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

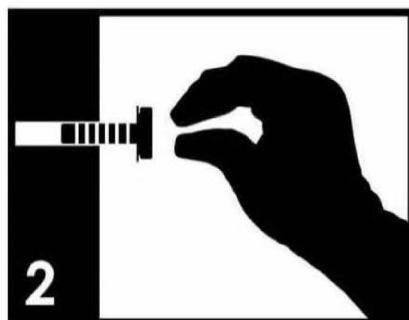

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

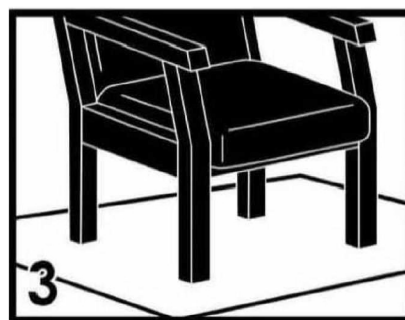

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

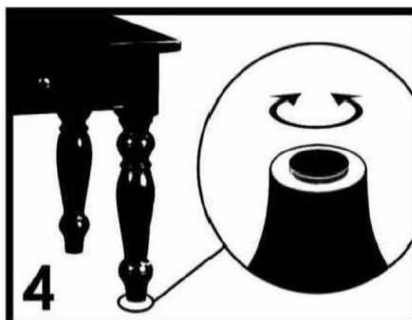

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

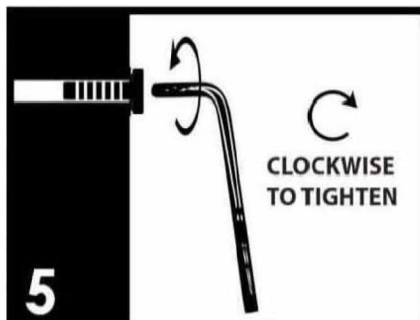

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

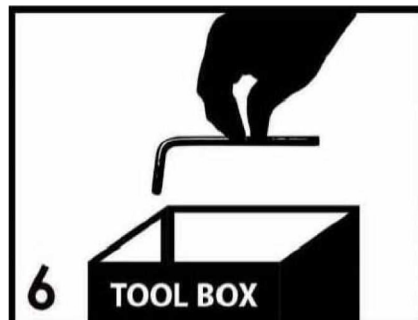


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.




**FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.**

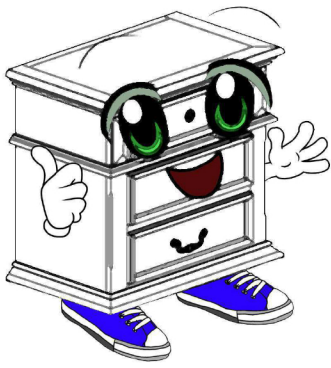 

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.


## Parts List

 


#1 x 1pc x 2  
Brackrest w/Legs


 
#2 x 1pc x 2  
Seat Cushion



#3 x 2pcs x 2  
Front Leg

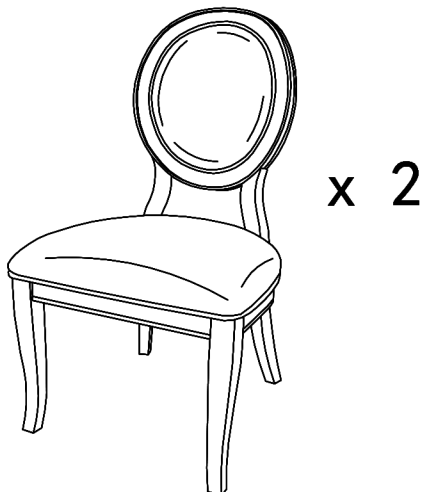 

## Hardware List



#A x 4pcs x 2  
Bolt Ø5/16"X3"



#B x 4pcs x 2  
Bolt Ø5/16"X2-1/2"



#C x 2pcs x 2  
Bolt Ø5/16"X1-3/4"



#D x 10pcs x 2  
Lock Washer

 


#E x 10pcs x 2  
Flat Washer




#F x 1pc  
Allen Wrench

# Exploded view

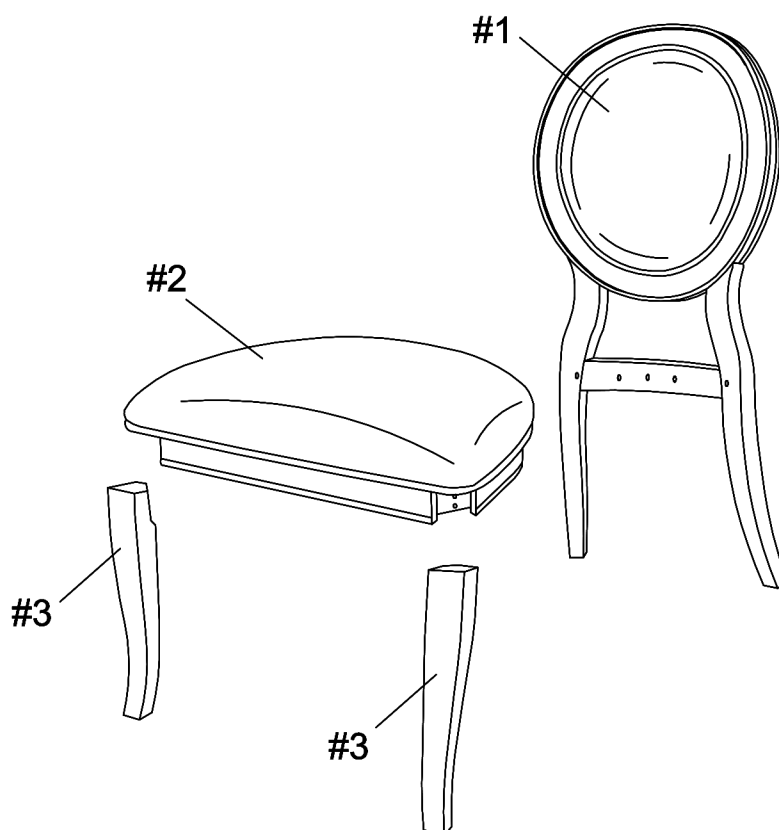

Prepare 2 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#C).  
Align chair seat (#2) to the holes of the chair back (#1). Secure with bolts (#C).


#C x 2pcs  
#D x 2pcs  
#E x 2pcs

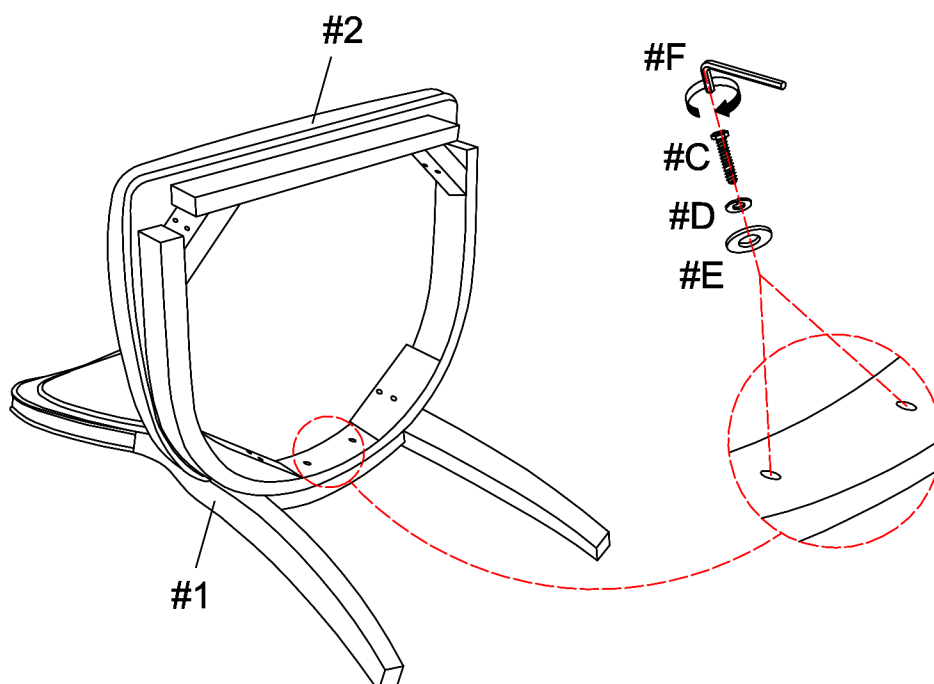 



Prepare 4 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#A).  
Secure corner holes of the chair seat (#2) to chair back (#1) by using bolts (#A).

#A x 4pcs  
#D x 4pcs  
#E x 4pcs

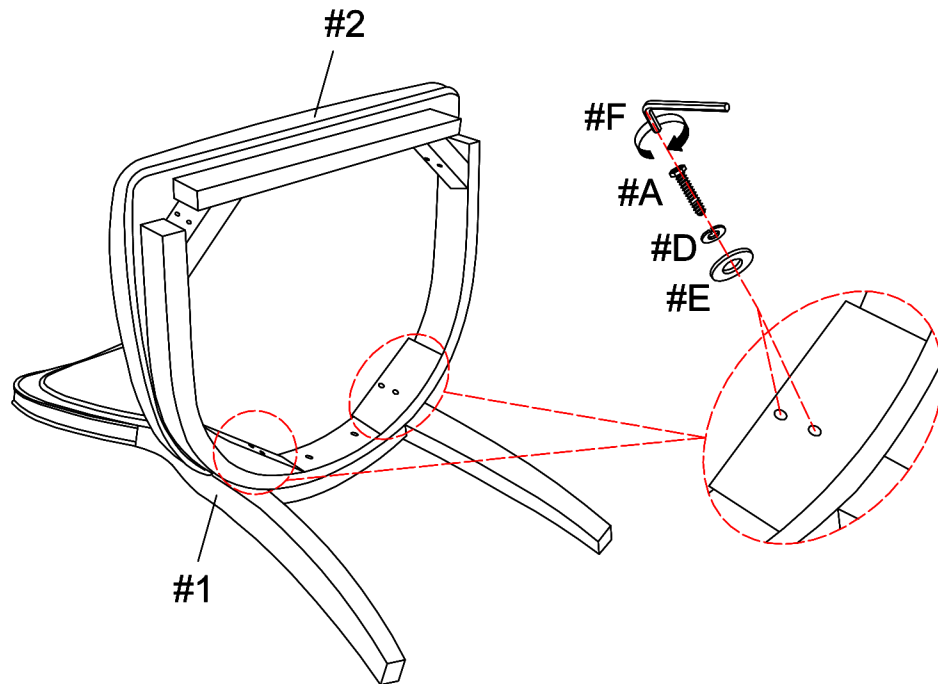 

Prepare 4 bolts assembly by inserting lock washer (#D), then flat washer (#E) onto bolts (#B).  
Align front legs (#3) to the holes of the chair seat (#2). Secure with bolts (#B).

#B x 4pcs  
#D x 4pcs  
#E x 4pcs

