



EN Quick Start Guide

CONGRATULATIONS!

You have finally got your hands on the CINEMOOD Storyteller — the first mini cinema projector for family entertainment. We have developed this product with inspiration and care so that you can enjoy more time with your family.

Thank you for having faith in our team. We have put our heart and soul into this project, but this is just the beginning of our long journey.

You are just one button away from bringing magic into your home.

To get the most out of CINEMOOD Storyteller, carefully read this Quick Start Guide.


See www.cinemood.com for more details.

If you have any questions, contact us at support@cinemood.com

WHAT'S IN THE BOX

1. CINEMOOD Storyteller
2. CINEMOOD Base
3. USB Power Adapter
4. USB Cable

CONTROLS

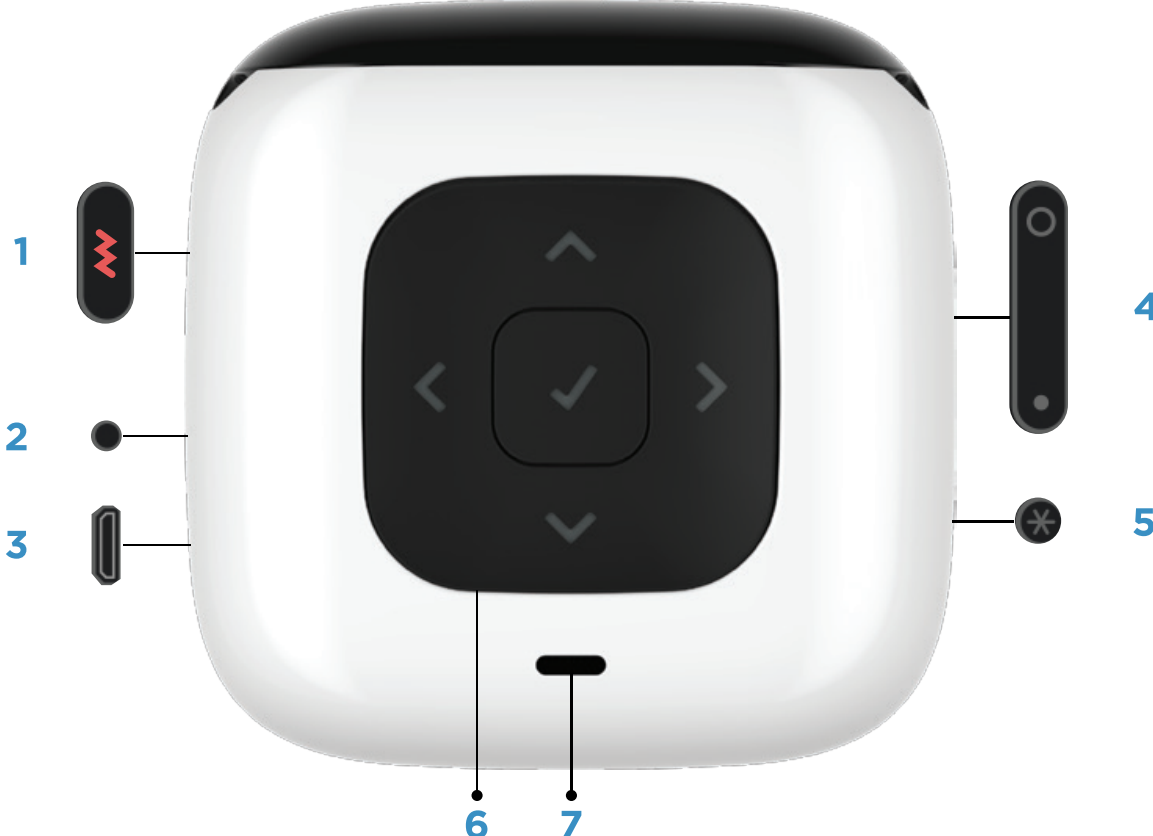

- | | |
|---------------------|-----------------------|
| 1. On/Off Button | 5. Flashlight Button |
| 2. Audio Output | 6. Navigation Buttons |
| 3. Micro-USB | 7. Microphone |
| 4. Focus adjustment | |

1. ON/OFF BUTTON

Hold the Zeus' Lightning Bolt button (1) for 5 seconds to turn the CINEMOOD Storyteller on/off.

2. AUDIO OUTPUT

This audio slot lets you connect headphones, or other audio devices to your CINEMOOD Storyteller.

3. MICRO-USB

Charge your CINEMOOD Storyteller by connecting the Power Adapter to the USB Power Cable. You can use the Micro-USB to connect to your computer, which let you upload your own files to the CINEMOOD Storyteller. With Windows computers, there is not extra software needed. However, with Mac OS, you must install the Android File Transfer app online at android.com/filetransfer.

4. FOCUS ADJUSTMENT

Press button (4), to adjust the focus until you have a clear picture. Keep in mind that the distance between the cinema projector and the screen will affect video resolution.

5. FLASHLIGHT

Press button (5) when the device is operating to turn the flashlight on/off.

6. CINEMOOD KEYBOARD

Press the buttons on top of the CINEMOOD Storyteller to navigate through the menu and select options you want. While the mini cinema projector plays, you can press following buttons:

⏮ ⏭ **Up/Down** — to adjust the audio volume

⏮ ⏭ **Left/Right** — to rewind or fast-forward

⏸ **OK** — to pause


7. MICROPHONE

Use the microphone to control the CINEMOOD Storyteller. This feature will be available following software update.


GETTING STARTED

1. Press and hold the Zeus' Lightning Bolt button (1) to switch the device on.
2. Turn off or dim your room's lights to get the best quality video resolution.
3. Note the navigation buttons on the top and side of the CINEMOOD Storyteller [pic. 1]
4. You can select preinstalled audio stories and cartoons, your own content, or content from online streaming services.
5. Direct the projector beam of the CINEMOOD Storyteller onto the surface you want to watch with, such as a wall or ceiling (4).
6. Mount the projector onto it's silicone base to get the best viewing angle [pic 2].

You are now ready to watch.

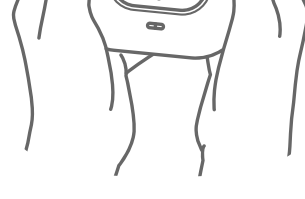

pic. 1

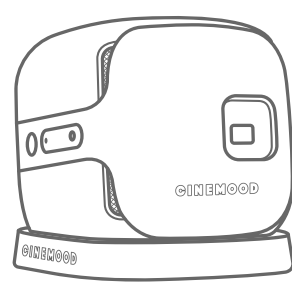

pic. 2

TURNING OFF

Press and hold the Zeus' Lightning Bolt button (1) until the device shuts down.

Remember to recharge your CINEMOOD Storyteller after using it so that you are ready for the next time.


BATTERY CHARGE

To recharge the CINEMOOD Storyteller's battery, you should:

1. Switch off the device.
2. Plug in the charging cable and the power adaptor supplied with the CINEMOOD Storyteller. A red light will appear on power indicator to confirm that your mini cinema projector is charging.
3. Wait until the power indicator light changes from red to green. This means that the CINEMOOD Storyteller is fully charged and ready for use.

The CINEMOOD Storyteller should be charged only when it is switched off.

SOFTWARE UPDATE AND MOBILE APP

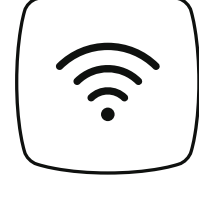

To download software updates and upload new content, connect the CINEMOOD Storyteller to your home Wi-Fi network and choose the correct menu option in the mini cinema projector's settings. You can check the latest software that your CINEMOOD Storyteller has installed by visiting Menu>Settings>About

Use **CINEMOOD App** to access your subscription information and transform your mobile phone into a remote control for your CINEMOOD Storyteller.



INSTRUCTIONS AND SAFETY RULES

1. Do not block the ventilation grids of your CINEMOOD Storyteller. This may cause overheating.
2. Do not expose your CINEMOOD Storyteller to direct sunlight for extended periods of time.
3. Keep your CINEMOOD Storyteller away from water, other liquids, and dust.
4. Do not disassemble your CINEMOOD Storyteller without professional assistance.
5. Be careful with your projector lens. Scratches are possible from excess force and may affect your overall viewing experience.
6. Store your CINEMOOD Storyteller in a room temperature, stable, and safe area.
7. Do not look directly into the beam.

TROUBLESHOOTING

LOW PICTURE BRIGHTNESS AND CONTRAST

For the best viewing experience, watch your content in a dark or dimmed room on a white reflective surface. Turn off or dim the lights and direct the beam onto white surface.

Adjust the picture using the focus buttons. If the picture is still blurred, the lens may need cleaning. Carefully clean the lens with a non-abrasive dry cloth.

CINEMOOD STORYTELLER DOES NOT TURN ON

Your device may have run out of battery; try charging the CINEMOOD Storyteller again. If your CINEMOOD Storyteller is still experiencing problems after being fully charged, Contact us at support@cinemood.com.

CAN'T CONNECT TO A USB HARD DISC

The CINEMOOD Storyteller can use external USB flash drives. External HDD and SSD disks support not guaranteed.

ADDITIONAL INFORMATION

ALL CINEMOOD PRODUCTS HAVE THE REQUIRED CERTIFICATES AND ARE FULLY COMPLIANT WITH THE RELEVANT NORMS AND STANDARDS.

CINEMOOD TRENDSETTERS CO. 2711 CENTERVILLE ROAD, SUITE 400, WILMINGTON, NEW CASTLE COUNTY, DELAWARE 19808.
SUPPORT@CINEMOOD.COM
ASSEMBLED IN CHINA.

FOR MORE DETAIL ON THE PRODUCT'S CERTIFICATES, SEE ON WWW.CINEMOOD.COM

DATE OF PRODUCTION IS THE FIRST FOUR CHARACTERS OF THE SERIAL NUMBER (YYMM).

CINEMOOD STORYTELLER

CNMD0016

FCC ID : 2AKIN-CNMD0016

Model : CNMD0016

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

TECHNICAL CHARACTERISTICS

Dimensions

Size: 3,14" x 3,14" x 3,14"
Weight: 300 gm

Performance

Diagonal: 70"
Up to 5 hours of battery life
Micro-USB support
Audio output 3.5 mm
Internal memory: 16/32/64/128 GB¹
Built-In 2.5W speaker
Wi-Fi 802.11 b/g/n 2,4 GHz
Bluetooth 4.0
Built-In Microphone
Max charging: 2 A

¹Depends on model

Supported file types:

Video:
mp4, 3gp, avi, mkv,
webm, mov, 3g2,
3gpp, asf, divx, f4v,
flv, h264, m2ts, m4v,
mod, mpeg, mpg, mts,
mxf, ogv, wmv
Audio:
mp3, aac, m4a
Picture:
png, jpg, bmp, jpeg, gif