


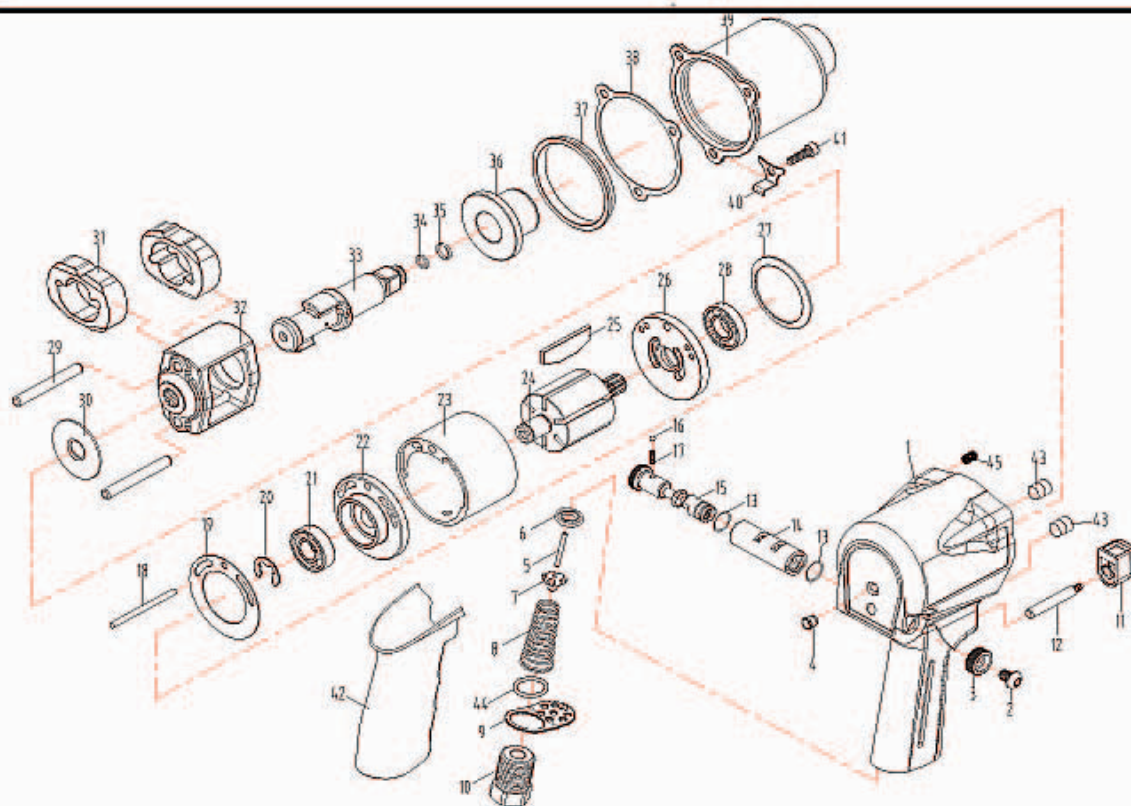

NO.	PART NO.	ASSY NO.	DESCRIPTION	Q'TY	NO.	PART NO.	ASSY NO.	DESCRIPTION	Q'TY
*1	1260-01A-AA	A	Housing	1	27	1260-27-A		Washer	1
2	1260-02-A		Screw	1	28	1163-22-A		Bearing	1
3	1260-03-A		Reverse Valve Knob	1	29	1060-39-A		Hammer Pin	2
*4	760-40-A	A	Oil Window	1	30	2060-41-A		Washer	1
*5	760-30-A	B	Valve Stem	1	31	1060-38-A		Hammer	2
6	460-04-A		Valve Seat	1	32	1060-37-A		Hammer Cage	1
*7	460-05-A	B	Throttle Valve	1	33	1060-40B-AA		Anvil	1
8	2360-07-A		Valve Spring	1	34	160-17-A		O-Ring	1
9	1260-09-A		Exhaust Deflector	1	35	160-16-A		Socket Retainer	1
10	460-08-B		Air Inlet	1	36	1260-36-A		Bushing	1
*11	1260-11-A1	C	Trigger	1	37	1260-37-A		Hammer Case Pilot	1
*12	1260-11-A2	C	Pin	1	38	1260-38-A		Gasket	1
13	1260-13-A		O-Ring	2	39	1260-39A-AA		Protector Cover	1
*14	1260-14-A	A	Reverse Valve Bushing	1	40	1260-40-A		Fixed Plate	1
15	1260-15-A		Reverse Valve	1	41	1260-41-A		Screw	3
16	151-28-A		Steel Ball	1	42	1260-42-B		Plastic Grip	1
17	1260-17-A		Spring	1	*43	1260-47-A	A	Plug	2
18	1260-18-A		Dowel Pin	1	44	220-04-A		O-Ring	1
19	1260-19-A		Gasket	1	*45	1260-46-A	A	Screw Sleeve	3
20	1260-20-A		Bead Flange	1	NS-A	A1260-01		Housing Assy A	1
21	160-23-A		Bearing	1	NS-B	B460-05		Throttle Valve Assy B	1
22	1260-22-A		Rear End Plate	1	NS-C	C1260-11		Trigger Assy B	1
23	1260-23-A		Cylinder	1					
24	1260-24-A		Rotor	1					
25	1260-25-A		Rotor Blade	6					
26	1260-26-A		Front End Plate	1					

The parts with " * " mark can not be ordered individually and need to be ordered based on the assembly number.