



SteadySteam™ 1650 W

LX1650C

Instruction Manual

Important safety instructions

- Please follow all the precautions listed below for safety and to reduce the risk of fire, injury or electrical shock.
- Read all the instructions before operating the iron and keep them for future reference. If you pass the product on to a third party, include these instructions. Unplug the iron from the mains supply when not in use, and before emptying, filling, or cleaning.
- Do not touch the soleplate of the iron if it is hot. Always hold the appliance by the handle.
- Keep the appliance well away from surfaces and objects that can be damaged by heat.
- Ensure there is adequate room to operate the iron. Ensure that the iron cannot fall into water.
- Do not immerse the connecting cord in any liquid.
- Do not let the connecting cord overhang the edge of the work surface or allow it to touch hot surfaces or sources of heat or flame.
- If any part of this appliance is damaged or malfunctions in any way, or the connecting cord or mains plug is broken do not continue to use it. Seek expert assistance.
- Do not use the iron if the cord insulation or conductors are visibly damaged. Do not use the iron if water is leaking from it.
- Do not use the appliance if the plug, power cord or the appliance itself shows visible damage, or if the appliance has been dropped or leaks.
- Do not leave the iron face down at any time. Stand it upright on its heel, on a level heatproof surface.
- Do not use outdoors or in damp or wet conditions.
- When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.
- Do NOT use this appliance for any purpose not covered by the instructions.
- Use caution when turning the iron upside down, there may be hot water in the water tank.
- Use only with a purpose-built ironing board.
- Observe all ironing instructions and ironing temperature dot settings given by the garment manufacturer. These are normally on a label or labels inside the garment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of this appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Parents must warn children not to touch hot appliance parts.

- The iron must not be left unattended while it is connected to the supply mains..
- Do not use this iron if it is dropped, has visible signs of damage or is not watertight.
- Burns can occur from touching hot metal parts, hot water or steam. Exercise care when handling this appliance!

Electrical Information

- Before using this appliance ensure that the voltage of your electricity supply is the same as that indicated on the appliance.
- The means of disconnecting this appliance from the mains supply is the mains plug.
- This should be unobstructed and readily operable at all times. This appliance must be earthed.

Main components and accessories



1. Water tank cover
2. Spray button
3. temperature up button
4. temperatur down button
5. Steam trigger
6. LCD screen
7. Spray nozzle
8. Ceramic soleplatee
9. Max level line

Using

- Before ironing your clothing or fabrics for the first time, it is recommended that you use the iron on a damp piece of cloth for a few minutes. This will ensure that any residue left over from the manufacturing process is burnt off the Ceramic soleplate and won't transfer to your clothes.
- You may notice a light odor and a small amount of smoke during this time, but this is perfectly normal and should disappear quickly.
- Each iron is checked at the factory so some water may remain in the tank. Please flush the system by filling the tank and setting the iron on the highest Temperature and turn on the steam button.
- Then allow the steam to flow, in a well-ventilated and safe environment, until the water tank is empty. Do this at least once before first use and also if you haven't used your iron for a long period.

Instruction Manual

LX1650C

Before use, please read the instruction carefully and store it properly.

Basic instructions

1. Fill the water to the "MAX" line and plug the iron into the mains.
2. There are total 4 temperature setting. Press Temperature up button or Temperature down button to select suitable temperature according to the fabric.

 - **MAX** - LINEN

 -  - COTTON

 -  - WOOL

 -  - NYLON

When the temperature is going up, the selected temperature on screen will be blinking until the soleplate temperature reached the selected temperature.

3. Then you can use it to iron your clothes with steam by pressing the steam activation trigger. The higher temperature setting, the larger steam output. The max steam output is about 40g/min

If the temperature has not reached the selected temperature, press the steam trigger will be no use, it can avoid the water drip.

4. Auto shut off function (if any)

It will switch the iron off automatically if it hasn't been used for a period of time - usually after 8 minutes idle in the upright position and 30 second when resting on the soleplate.

Move the iron slightly or press any button, it will return To the temperature that it had before being switched off.

Using vertically - for garment and fabric steaming

1. If using the Textile Brush attachment carefully slide it over the tip of iron before turning on.
 2. Once plugged in, set to a high temperature, either Cotton or Max settings.
 3. Wait for the blinking to turn off. Pick up the iron and hold vertically, with the tip tilted slightly forward.
 4. Press the steam trigger and move the iron up and down the garment or fabric you want to steam.
 5. If the steam output declines, simply tilt the iron forward into a horizontal position and then tilt back vertical to continue
- DO NOT tilt the iron upside down while using vertically.

After ironing

1. Allow to cool completely. Unplug and empty the Water Tank.
2. Clean the Ceramic Plate and the Cover Plate with a damp cloth, removing any residues.
3. Store vertically on a clean, dry, flat surface, with the cable wrapped around the Iron.

Technical Informations

Steam output	10-40g/min
Tank size	400ml
Power consumption	1650W
Model	LX1650C

After each use

1. Pour out the residual water inside the water tank, turn on the steam switch, and spray the water vapor inside the machine.
2. Turn off the steam switch and pull the power cord out of the outlet.
3. Place the machine on a flat desktop and wait for the product to be properly accepted after cooling.

Nursing, cleaning and storage

- (1) Do not use rough or corrosive detergents or solvents. (2) Please do not immerse the steam scalding machine in water or other liquids. (3) Don't drop, throw it or try to bend it. (4) Please do not attempt to disassemble the decomposition products. (5) Empty the water tank after each use. (6) Avoid storing products in damp places. (7) Do not close to the heat source or let the sun shine directly on the product. (8) Always ensure that the steam outlet hole is clean, scale-free and not blocked. (9) It is recommended to store the ironing machine in a flat position, such as in a drawer.

Warranty clause

When you need normal consultation, please contact us, and provide a warranty card or electronic order number, we will provide services free of charge; reflect the failure, tell the accurate fault phenomenon, we will serve you as soon as possible.

We offer a one-year warranty for our products. The warranty period is calculated from the date of purchase.

During the warranty period, we will replace the parts or the whole product according to the situation. The accessories of products, such as accessories, packaging, etc. are not covered by the warranty.

To apply for warranty, the product mainframe must be submitted to the designated maintenance point together with the certificates that can prove the purchase date (e.g. purchase certificate, invoice or network electronic order number, etc.).

The above warranty does not include the following:

- (1) Any damage caused by improper use (e.g. incorrect use of current, voltage, insertion of products into inappropriate sockets or man-made damage, etc.).
 - (2) Faults caused by natural disasters.
 - (3) Troubles caused by repairs by non-company maintenance personnel.
 - (4) The product aging and wear caused by normal use, but it has little effect on the use function of the product.
 - (5) The warranty service will be terminated immediately after the product has been repaired by unauthorized personnel or used parts not originally manufactured.
 - (6) Other non-product problems and faults caused by external factors.
- Within the scope of the law, the right of final interpretation of the above clauses belongs to our company.

Product warranty card

Product Model		Date of purchase	
Customer Name		Contact address	
Contact Number		Distributor name	
Maintenance records			
Maintenance Date	Troubleshooting	Location of maintenance	Result of maintenance
Please keep the warranty card properly in order to enjoy after-sales service.			

Main technical parameters

Product model: LX1650C Water tank capacity: 400 ml Steam volume: 10-40g/min

Quality + Sustainability

Your new Electrolux garment care supertool
is designed with sustainability in mind.



Concept

Our key design philosophy is to achieve top performance with the lowest energy demand.

Carefully calibrated power generates more steam with less electricity, which saves on runtime, yields smoother clothing in fewer passes, delivers a longer-lasting press, rejuvenates clothing to retain newness, and ultimately keeps energy and garments from waste.



Components

You only get out what you put in, so we insist on parts made with more sustainable materials and processes.

In line with the SDGs created by the UN, we use innovative materials that help both performance and planet, such as post-consumer rubber cords, repurposed plastics, and recyclable ceramicized soleplates that offer even edge-to-edge heating.



Package

This box is for keeps. Made of the finest recycled materials, it features an original, reusable design.

An exclusive, heat-resistant inner pad enables you to safely store your garment care tool even while it's hot. And the striking, inkless box turns into a valuable, décor-friendly storage container you will enjoy keeping in your home, and out of landfills.

Visit <https://www.electroluxgroup.com/en/> to learn more about our

Shape living for the better initiative



Questions comments?

Contact Smartekusa at 1-877-678-6232

**12 Hinsdale Street
Brooklyn NY 11207**

Electrolux is a registered trademark of AB Electrolux (publ.)

A box worth keeping in the family