 


# Multi-functional Cordless Telescoping Power Scrubber



 
- ※ Thank you for purchasing Multi-functional Cordless Telescoping Power Scrubber from our store.
- ※ please read this user manual carefully before operating this appliance.
- ※ Do not lose the warranty card that came with the user manual.
- ※ The contents of this product' s operating instructions are for the purpose of improving product performance without preamble.

# The advantages of the product

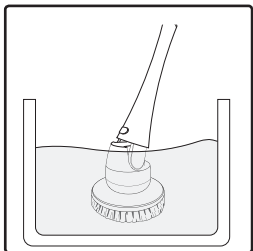

## The product is a waterproof power scrubber


The product is a waterproof Power Scrubber, generally used in water places frequently, so we get BATHWELL of Waterproof IPx7 functional testing certification, it also be safe to use in the water.

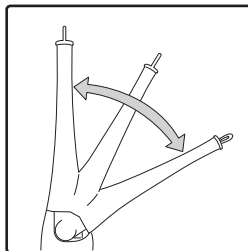

Foldable design, you can freely adjust the angle, it is more convenient to use.


According to the different cleaning areas, you can easily adjust the handle and rotate freely, more convenient to operate.

※Waterproof IPx7: It can continue to soak in the sink which is around 1 meter. The host can achieve waterproof level that is impervious to water.

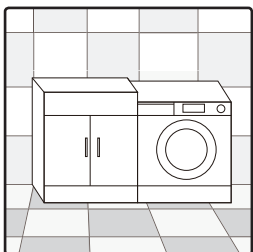


## The design of the replaceable brush, easily clean each corner of the room.


The brush is suitable for cleaning the bathroom, balcony, laundry room, the uneven tile surface and other water-damaged places.

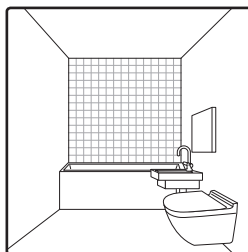


The ground or wash gargle, bathtub, ceramic and other smooth surface, use the cotton velvet brush which stick on the Velcro then cleaning.

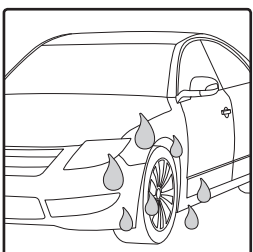

Long brush is for cleaning the toilet, car tires and other sunken place.

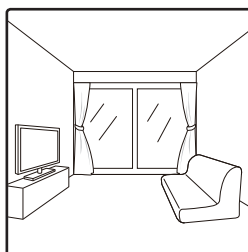

The scouring pad which sticks on the Velcro is suitable for the cleaning wood floor, etc.

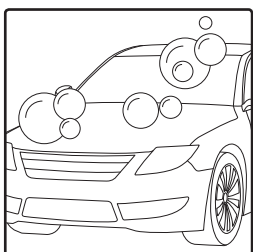


Sponge brush which sticks on the Velcro, can clean it after foaming, is especially useful for cleaning cars.



## The use of reducer has a super-rotating force, show the strong power.

In order to remove the stubborn stains that required for the super-strong rotating force and the strong power, we design this reducer about 170RPM which has successfully applied to small products.

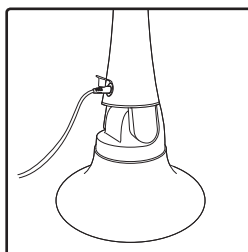

## Can plug-in when in use, plug and play.

Without the power, it will stop working during the cleaning, you can plug while charging.

# Safety Information

Please read this user manual carefully before operating this appliance.

Please use it in accordance with the intended use.

To avoid unnecessary damage caused by incorrect use because of ignoring this image, be sure to read the operating instructions carefully.

• The risk of death or serious injury will be caused if the instructions are not followed. Therefore, when the adapter, the cord, or the battery damaged, should immediately stop using and contact the customer service center.

 


**Warning:** Serious injury or death can occur if the instructions are not followed.



**Warning:** Serious injury or product damage can occur if the instructions are not followed.


## Caution of the battery

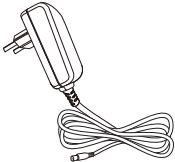

### Warning

Before using, be sure to check whether the AC adapter and the DC cord are damaged.

 
To avoid electrical shock and fire.

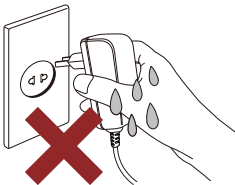

### Warning

Do not touch the AC adapter and pull out the DC cord with wet hand.

 
To avoid electrical shock and fire.

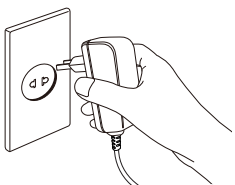

### Warning

Make sure that the specified voltage is used in the correct way before using the adapter. (100 V ~ 240V)

 To avoid abnormal heating and fire.



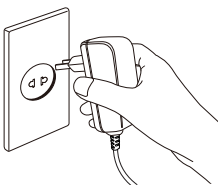



### Warning





The adapter must be original.

Avoid abnormal heating and fire.
   
# Safety Precautions

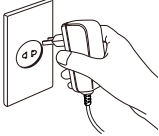
	<p><b>Warning</b></p> <p>The DC cable should not be crushed or hit by sharp objects Avoid the fire and electrical shock.</p>
	<p><b>Warning</b></p> <p>When the appliance is fully charged or not used, separate the adapter from the AC plug before storing. The power supply is easy to cause failure after inserting it too long. The power supply is easy to cause failure after inserting it too long.</p>
	<p><b>Warning</b></p> <p>When using the appliance, the power outlet should be used individually, do not use an outlet with too many heaters. Avoid abnormal heating and fire. Avoid abnormal heating and fire.</p>
	<p><b>Warning</b></p> <p>The red light is on during charging, the green light is on when full charged. If the green light is not on for a long time, don not charge it immediately. Avoid the risk of fire and explosion.</p>

## The matters need attention when using

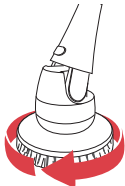    	<p><b>Notice</b></p> <p>This product has super-strong rotating force and the strong power, do not use if the children or the elderly are not familiar with the instructions. Avoid injury.</p>
	<p><b>Notice</b></p> <p>Scouring pad must stick on the brush with Velcro and only used in the specified purpose and place. Avoid damaging the surface of the object.</p>
	<p><b>Notice</b></p> <p>Cotton flannel pad must stick on the brush with Velcro and only used in the specified purpose and place. Avoid damaging the surface of the object.</p>
	<p><b>Notice</b></p> <p>Sponge brush must stick on the brush with Velcro and only used in the specified purpose and place. Avoid damaging the surface of the object.</p>



# Safety Precautions

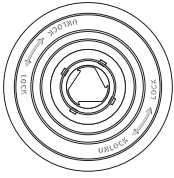 


## ! Notice

When replacing the brush, you must turn off the power, Rotate the brush, according to the direction marked on it, LOCK means close, UNLOCK means open. To avoid serious injury.



## ! Notice

 Do not touch the turntable when the product is in operation. To avoid serious injury.

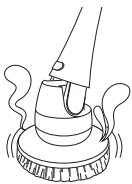


## ! Notice

If you find strange sound, smoke or scorched smell, please stop immediately and contact Seller Service Center.




## ! Notice

 When installing the telescopic handle, please be careful your fingers! To avoid serious injury.

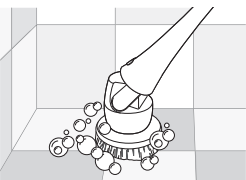


## ! Notice

 Don't put the floor brush head against the wall, to avoid any damage of the wall. Avoid damaging the wall.

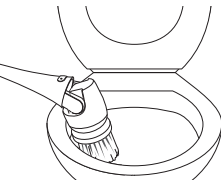

## ! Notice

 When using the long bristle brush, do not damage the object. Avoid damaging to the surface of the object.

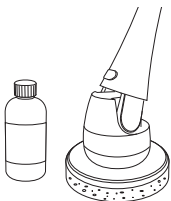


## ! Notice

When using whitening agents, you must read its usage carefully then use it. Avoid damaging to the surface of the object.

# Safety Precautions

 
## Precautions for the waterproof

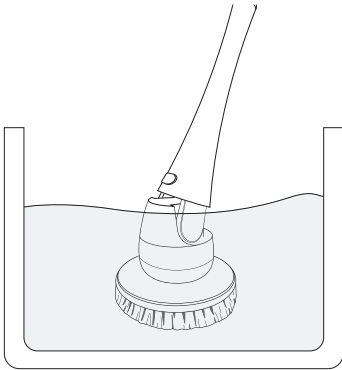

### ! Notice


The product is a waterproof Power Scrubber, generally used in water places frequently, so we get BATHWELL of Waterproof IPx7 functional testing certification, it also be safe to use in the water. Although it can sink in the water about 30 minutes around 1 meter, but try not to use so long. Do not use if more than 1 meter.kann sicher ins Wasser benutzt werden.

 ※ Waterproof IPx7: It can continue to soak in the sink which is around 1 meter. The host can achieve waterproof level that is impervious to water.

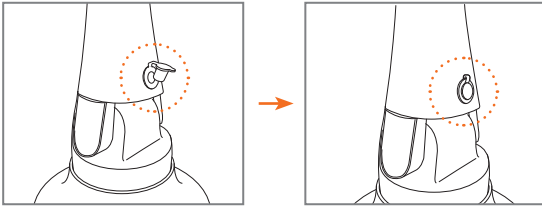

※ The DC plug lid must be covered after charging. If not, it can't be waterproof.

## Storage Precautions

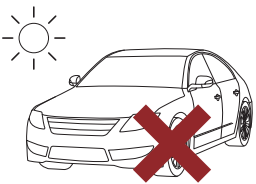 

### ! Notice

 
Do not store the product in high temperature areas. Avoid the risk of fire and explosion.



### ! Notice


After use, fully remove the water on the body and place in the base, store in a dry place. Avoid operating errors.

# Safety Precautions

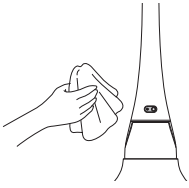

## ! Notice

 Use a soft cloth to clean this appliance.  
Avoid damage the appliance.

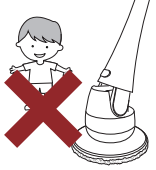


## ! Notice

Please keep off the baby and pet while using or storing.  
To avoid serious injury and danger.



## ! Notice

 After using, scouring pad, long bristle brush, cotton flannel pad, sponge brush and other accessories need be separated from the host and store in a dry place.  
To prevent mold or stains smell.

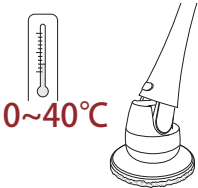

## ! Notice

When the product is not in use, store it in a well-ventilated place  
(0 to 40 degrees).  
To avoid shortening the service time.

# Components

## Components



Main body



The telescoping rod



The base



Adaptor



Hard floor brush



Long bristle brush



Magic stick brush head



Cotton flannel pad



Scouring pad



 
Sponge brush




User manual

※ Different models, different accessories.

## ■ The front of the product

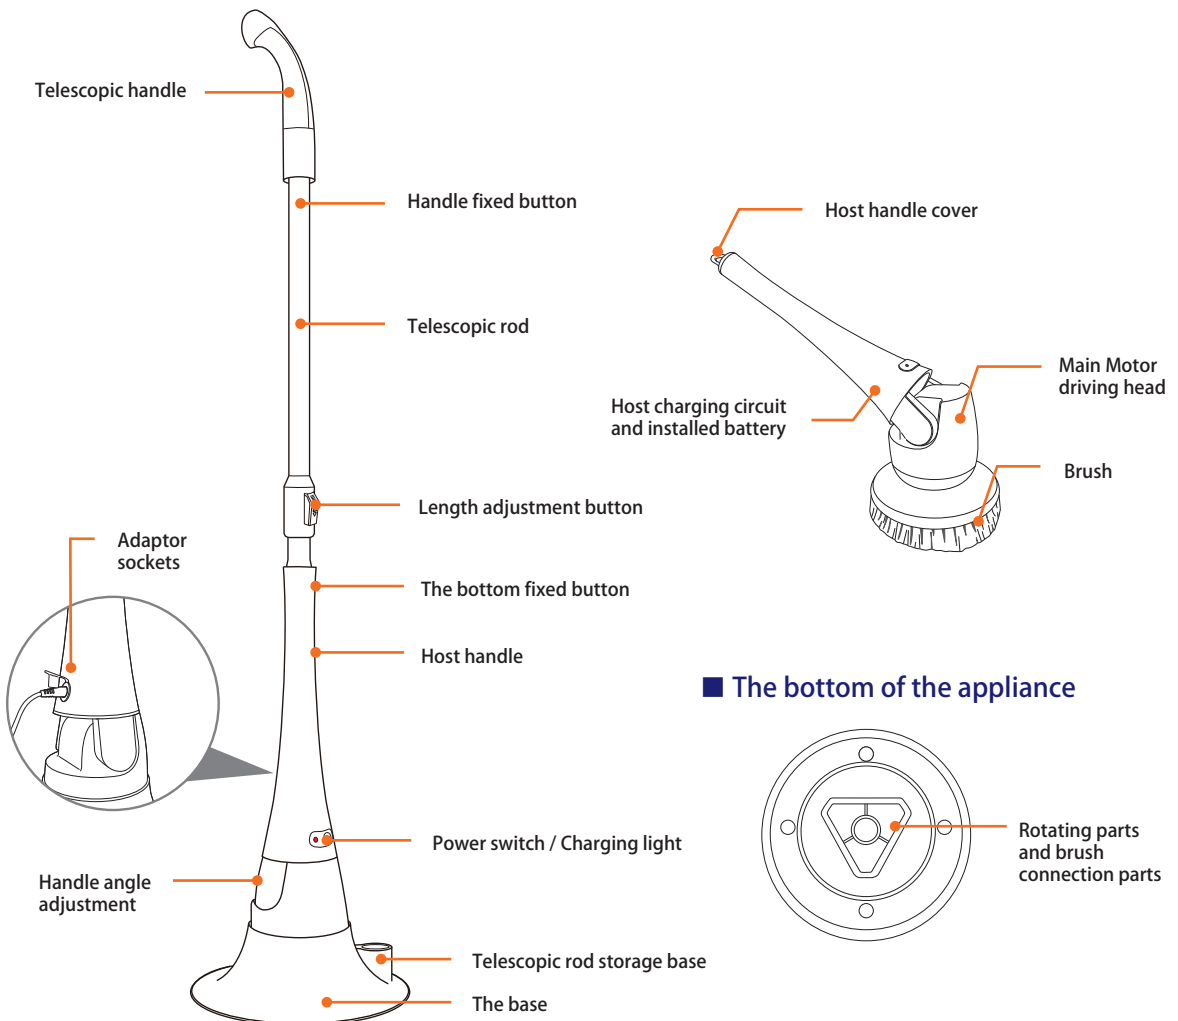


## ■ The bottom of the appliance

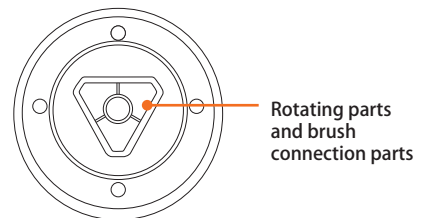 

# Product assembly methods



 
According to different purposes, you can remove the telescopic rod and use the button to adjust the length easily.

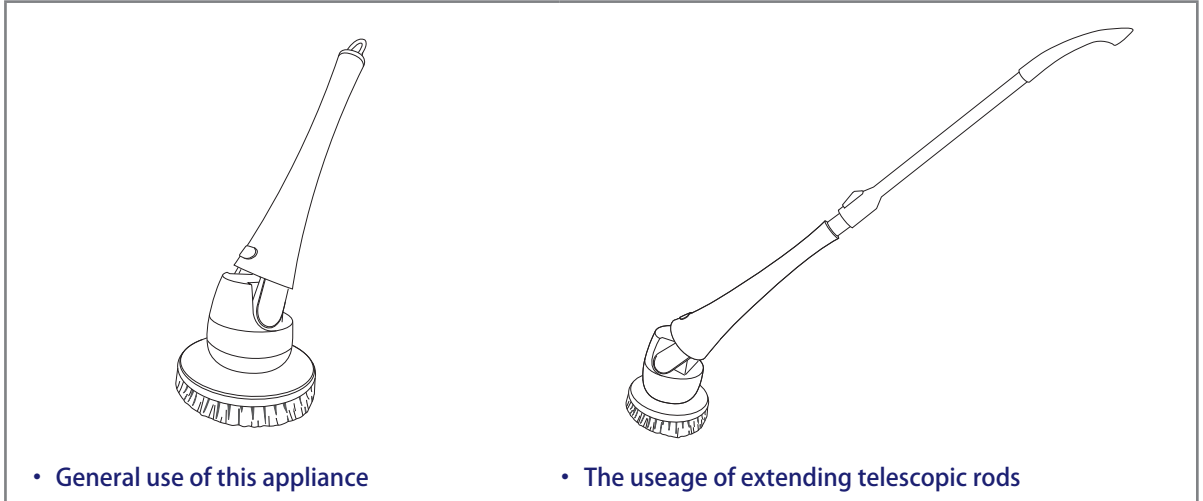

## The installation order of the appliance

### ■ Telescopic rod assembly sequence and method

   - Press the fixed button above the telescopic rod, and then assembled with the handle.
- Press the fixed button below the telescopic rod, and then assembled with the host handle.
- Press length adjustment button, you can adjust the length of the telescopic rod that you want.

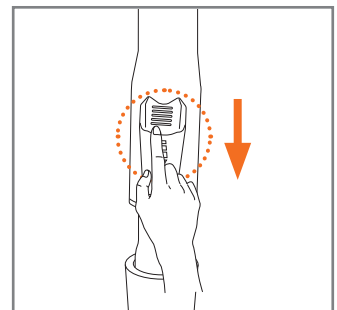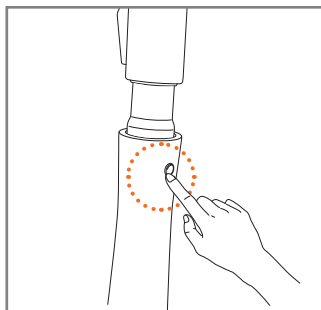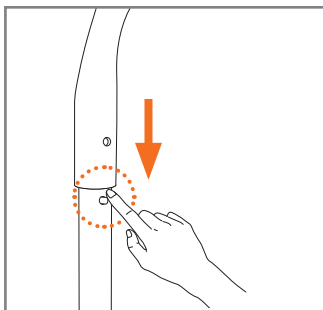


Note: Do not smash your fingers when assembling the telescopic rod.


# Product assembly methods
 
## ■ Host head and brush assembly sequence & method


1. The triangle power rotating head of the host aligned with the brush triangular hole, and withhold.

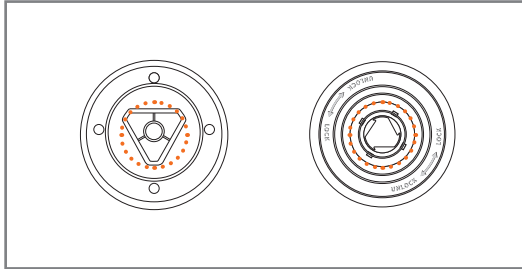

 2. Turn it following the "LOCK" direction then is connected.

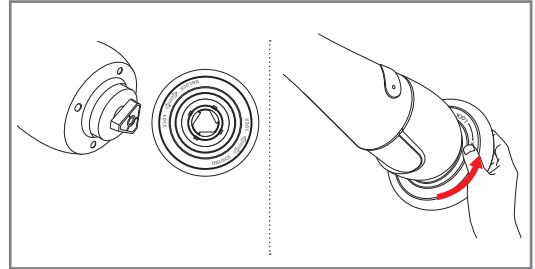

 
3. Please use the appliance after the host head and different brush heads are thoroughly assembled.

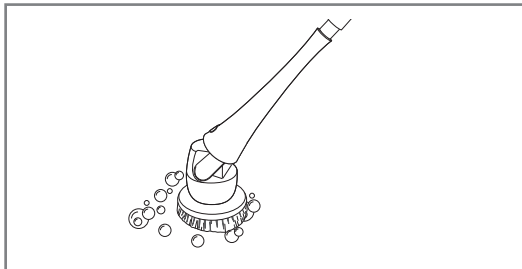


- ※ When assembling and dismounting the brush head, just turn it easily.
- ※ Turn the brush counterclockwise and is easy to remove.

## ■ Host head and brush head assembly sequence & method

 1. The triangle power rotating head of the host aligned with the brush head and spin counterclockwise, it can be separated.

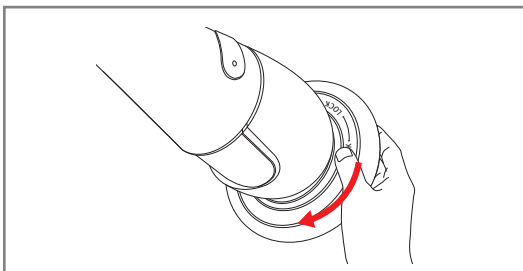


 2. Separate products can be placed in the base for charging or storage.

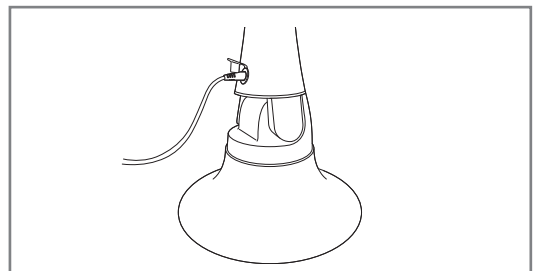


## The steps for Charging

 1. After the dedicated adapter is plugged into the AC adapter and the DC cover is pulled out, then plug the DC plug in the power supply, the red light indicates that charging has begun. Around the charging temperature need be in the range of 0 ~ 40 degrees around the place. The charging time is about 2.5 hours.

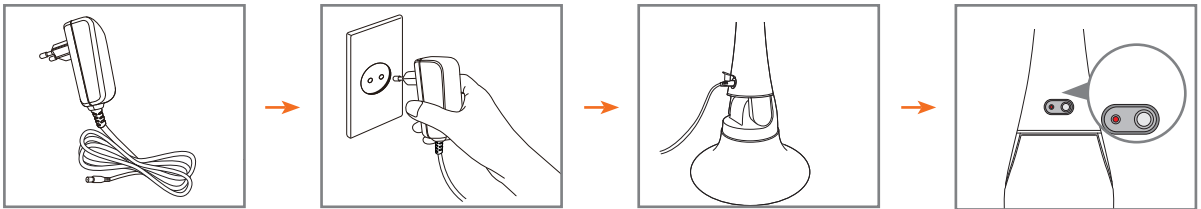

 2. After full charged, pull out the DC plug and cover DC jack with the waterproof lid, separate the adapter from the AC plug and keep it in a safe place.

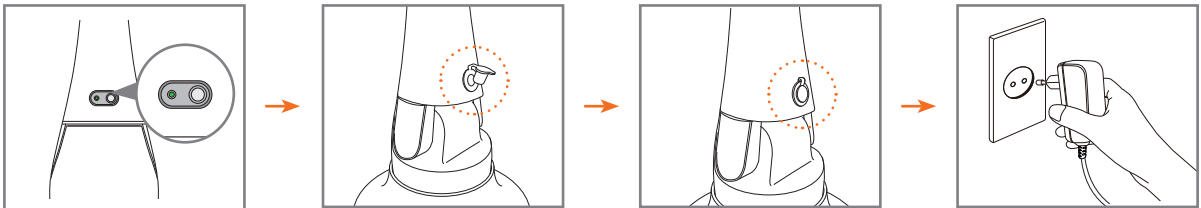

3. When the battery is fully charged, the light turns green. As the host has a charge protection circuit, you can unplug the power for a long time, but for safety, it is best to pull out the adapter immediately.

4. If the battery is running out of the power while working, please charge it in time.

# How to use the accessories



After purchasing the appliance, please fully charged before the first use, it can work about 2 hours.

		<b>ON / OFF button</b> The brush installed in the host, press the button and the appliance begin to rotate with super-strong power, so it does not need to be forced too hard.
		Uneven tile floor, bathroom, balcony and other rough floor, suitable for cleaning with a hard bristle brush.
		Smooth tiles and bathrooms, washstand and bathtubs, etc., are suitable for cleaning with the scouring pad.
		The long brush is suitable for cleaning the toilet, auto tire and other sunken places.
		Cotton flannel pad is suitable for cleaning wooden floor.
		Sponge brush is for cleaning the window or car window glass, etc. It works best when washing the car with foaming.

 


# Troubleshooting

Problems	solution
The appliance does not work	<ul style="list-style-type: none"> <li>• Charge and restart the appliance.</li> <li>• Confirm that there is no debris between the rotating parts and the brush head.</li> <li>• Make sure the power is on.</li> </ul>
The product has insufficient rotational force	<ul style="list-style-type: none"> <li>• Confirm there is no debris in the rotating parts.</li> <li>• Maybe it is out of power, please try again after charging.</li> </ul>
Can't charge	<ul style="list-style-type: none"> <li>• Make sure that the adaptor is connected to the AC outlet.</li> <li>• Make sure the charging interface of the host is connected.</li> </ul>
After full charging, the service time is shorter than before.	<ul style="list-style-type: none"> <li>• Although fully charged, the working time is still very short. Maybe the battery life is shorter because of the improper use.</li> </ul>

## Product Specification

Product Name	Multi-functional Cordless Telescoping Power Scrubber
Model	FD-EBC
Motor Speed	Host speed (RPM) about 160-180
Adaptor	Input: AC 100V ~ 240V, 50/60Hz Output: DC15V ~ 1.5A
Charging Time	About 2.5 hours <ul style="list-style-type: none"> <li>• When charging, the red light is on,</li> <li>• When full charged, the green light is on.</li> </ul>
Working Time	Above 2 hours (the service time is different according to different usage)
Product Dimension	108 * 108 * 350 mm (L*W*H)
Telescope Dimension	Min 55cm ~ Max 85cm, 25 $\phi$
Weight	About 730g
Waterproof	IPX7
Brush Dimension	150 $\phi$
Cloth Dimension	180 ~ 200 $\phi$
Accessories	Hard floor brush, Long bristle brush, Scouring pad, Velcro pad, Cotton flannel pad, Sponge brush, Adaptor, Base, Telescope Rod

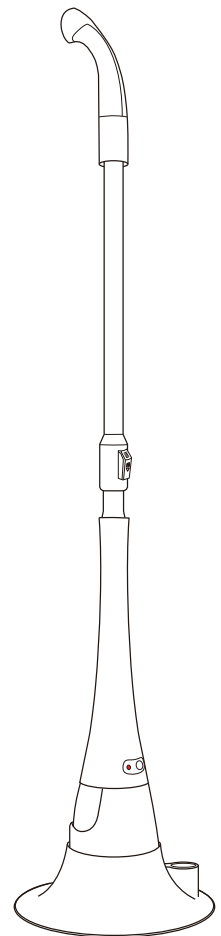

[www.myelicto.com](http://www.myelicto.com)



[info@myelicto.com](mailto:info@myelicto.com)

Questions or Comments Please Email Us

Elicto is registered trademark in USA and protected from unauthorized access of use

Manufacturer: Eco Sourcing Inc.

Address: 61 Willet St. Unit#qq, Passaic, NJ 07055

Made in China,designed in USA

Execution standard

GB.4706. 1-2005.GB4706.7-2004, GB4343.1-2009.GB17625.1-2012

