

# EXPLODED VIEW AND PARTS LIST

No.	Part Number	Part Description	Qty
1	4017-001	Oil Tank Cap Assembly	1
1-1	4017-002	Cap Cover	1
1-2	4017-003	Oil Tank Cap	1
1-3	4017-004	Seal Ring	1
1-4	4017-005	Hanger	1
2	4017-006	The Oil Tank Opening Sealing Ring	1
3	4017-007	Oil Tank Assembly	1
3-1	4017-008	Valve	1
3-2	4017-009	Oil Tank	1
3-3	4017-010	Oil Box Joint Core Plug	1
3-4	4017-011	Sponge	1
3-5	4017-012	Oil Tank Delivery Connection	1
3-6	4017-013	Oil Tank Joint Rubber Sleeve	1
3-7	4017-014	Transparent Oil Hosing	1
4	4017-015	Power Line	1
5	4017-016	Cable Sheath	1
6	4017-017	Power Cable Screws	2
7	4017-018	Cable Clamp	1
8	4017-019	Connector	2
9	4017-020	Copper Strip	1
10	4017-021	Connecting Wire	1
11	4017-022	Connecting Wire	1
12	4017-023	Switch Spring	1
13	4017-024	Switch Button	1
14	4017-025	Anti Lock Button Spring	1
15	4017-026	Lock Button	1
16	4017-027	Plug Screw	1
17	4017-028	Microswitch	1
18	4017-029	Connecting Wire	1
19	4017-030	Hexagon Nut With Flange	1
20	4017-031	Motor Gear	1
21	4017-032	Motor Gear Bushing	1
22	4017-033	Motor Plate Screws	11
23	4017-034	Left Housing	1
24	4017-035	Rotor Subassembly	1
24-1	4017-036	Bearing	1
24-2	4017-037	Rotor	1
24-3	4017-038	Bearing	1
25	4017-039	Washer	1
26	4017-040	Stator Subassembly	1
26-1	4017-041	Stator Screw	2
26-2	4017-042	Spring Washer	2
26-3	4017-043	Flat Gasket	2
26-4	4017-044	Front Stator Housing	1
26-5	4017-045	Stator	1
26-6	4017-046	Motor Back	1
26-7	4017-047	Brush Mount	2
26-8	4017-048	Washer	2

No.	Part Number	Part Description	Qty
26-9	4017-048	Hexagon Nut	2
27	4017-049	Brush	2
28	4017-050	Brush Cover	2
29	4017-051	Brush Cover Screws	4
30	4017-052	Motor Housing	1
31	4017-053	Brake Handle Screw	2
32	4017-054	Brake Washer	1
33	4017-055	Brake Handle	1
34	4017-056	Oil Pump Subassembly	1
34-1	4017-057	Worm Gear End	1
34-2	4017-058	Worm Gear	1
34-3	4017-059	Oil Pump	1
34-4	4017-060	Oil Pump Screws	1
35	4017-061	Transparent Oil Hosing	1
36	4017-062	Oil Nozzle	1
37	4017-063	Oring	2
38	4017-064	Output Shaft Subassembly	1
38-1	4017-065	Hex Lock Nut	1
38-2	4017-066	608Z Bearing	1
38-3	4017-067	Output Shaft Gear	1
38-4	4017-068	Output Shaft	1
38-5	4017-069	6900 Bearing	1
39	4017-070	Dust Shield	1
40	4017-071	Right Housing Sub Assembly	1
40-1	4017-072	Right Housing Plug	1
40-2	4017-073	Bumper Screws	2
40-3	4017-074	Clamp	1
40-4	4017-075	M8 Stud	1
40-5	4017-076	Right Housing	1
40-6	4017-077	Blade Adjustment Assembly	1
40-7	4017-078	Blade Adjustment Wheel	1
40-8	4017-079	Bumper	1
40-9	4017-080	Countersunk Bumper Screws	2
40-10	4017-081	Oil-Out Seal Ring	1
41	4017-082	Tensioning Spring	1
42	4017-083	Sprocket	1
43	4017-084	Chain Gear Baffle	1
44	4017-085	Clip	1
45	4017-086	Main Housing Screws	11
46	4017-087	Recessed Housing Screws	1
47	4017-088	Chain	1
48	4017-089	Bar	1
49	4017-090	Blade Adjustment Cover Assembly	1
49-1	4017-091	Knob	1
49-2	4017-092	Spindle	1
49-3	4017-093	Adjustment Cover	1
49-4	4017-094	End Cap Seal Ring	1
50	4017-095	Blade Cover	1

# EXPLODED VIEW AND PARTS LIST

