

Trigger Lock

Threaded Tip, With Protective
Cover, For Accessories

Heavy-Duty, Insulated,
Poly-Clad Zinc Body

...don't forget!



Avoid leaks
by ensuring
the washer
is in place before using.
If hose washer becomes
worn, damaged or lost,
replace with a new one.

Metal

CAUTION: Intended for outdoor use only. Severe electrical shock could result if water is sprayed into outlets or sources of electrical current. Do not use water more than 160°F (71°C).