

OSTBA



FOOD SLICER

MODEL NO: SL-5230D12C

USER'S MANUAL

|

INDEX

EN-----3-7

PURPOSE OF THE MANUAL

This user manual contains all the information necessary for the installation, use, and maintenance of food slicers. The aim of this manual is to allow the user to take all measures and to put in place all the human and material means necessary for the safe and sustainable use of the machines.

Before first use, please read all instructions contained in this user manual carefully, even if you are already familiar with using similar products. Only use this product in accordance with the instructions described in the user manual. Keep the user manual in a safe place where it can be easily retrieved for future use.

Save the original packaging, material, and proof of purchase receipt. If you need to ship this product, pack it in the original cardboard box to ensure maximum protection during shipping or transport (e.g., when moving or when you need to send this product for repair).

DISCLAIMER

Neither the OSTBA brand nor OSTBA GLOBAL INC is responsible for any improper use due to non-compliance with the instruction manual.

This product is intended for indoor household use only!

GENERAL INFORMATION



The crossed out "WHEELIE BIN" symbol with the acronym DEEE ("Déchet d'Équipement Électrique et Électronique" or WEEE "Waste of Electric and Electronic Equipment") indicates that at the end of its life, it must not be disposed of with household waste, but instead dropped off at a local recycling centre. Waste reclamation allows us to preserve our environment.



The "CE branding" symbol guarantees compliance with the non-mandatory harmonised European Standards, which communicates the essential requirements in technical specifications. These standards are not obligatory but guarantee compliance with the essential requirements.



The ROHS symbol (Restriction of use of certain Hazardous Substances) relating to environmental protection certifies that the maximum concentration of each of the 5 dangerous substances (mercury • lead • hexavalent chromium • PBB and PBDE flame retardants) is equal to or less than 0.1% of the weight of the homogeneous material, and 0.01% for the sixth (cadmium).



This operating equipment has reinforced isolation (protective isolation). There is no protective-conductor terminal.



The "GLASS/FORK" symbol indicates that the appliance is compatible with and can come into contact with food.



The "TRIMAN" symbol indicates that the consumer is invited to deliver their products to a separate collection for recycling (for example a recycling bin, a local dump, or a voluntary waste drop-off station).

SAFETY INSTRUCTIONS


- If you ignore the safety instructions the manufacturer cannot be held responsible for damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions or has been damaged in any manner. To avoid a hazard make sure that a damaged cord or plug is replaced by a competent and qualified repair service. Do not repair this appliance yourself.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- This appliance is only to be used for household purposes and only for its intended purpose.
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are under supervision and have been given instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 years old and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in water or any other liquid.
- Switch off the appliance and unplug from the power supply before changing accessories or handling parts that move in use.
- Always unplug the device if it is left unattended and before assembling, disassembling, or cleaning.
- Do not allow children to use the device without supervision.
- This appliance must be used with the sliding feed table and the piece holder in position unless this is not possible due to the size or shape of food.
- Avoid accidents such as trips or falls by placing the cord in a safe position.
- If an extension cord is used, its capacity needs to be suitable for the appliance's power consumption.
- Do not operate the appliance with wet hands or while standing on a wet floor. Do not touch the power plug with wet hands.
- Do not open the appliance housing under any circumstances. Do not insert any foreign objects into the interior of the housing.
- Never use accessories that are not recommended by the manufacturer. They could pose a safety risk to the user and might damage the appliance. Only use original parts and accessories.
- Keep the appliance away from any hot surfaces and open flames. Always operate the appliance on a level, stable, clean, and dry surface. Protect the appliance against heat, dust, direct sunlight, moisture, drips, and splashing water.
- Do not place heavy objects on top of the appliance. Do not place objects with open flames, e.g. candles, on top of or beside the appliance. Do not place objects filled with water, e.g. vases, on or near the appliance.
- Do not pull the power cord to remove the plug from the electrical outlet and do not wrap the power cord around the appliance.
- Unplug the appliance from the electrical outlet when not in use and before cleaning.
- Switch off the appliance before changing accessories or handling parts that move during use.
- If the appliance should overheat, stop using the appliance and unplug from its electrical outlet.
- Never leave the appliance unattended during use.
- Dry the appliance and all accessories before connecting to the power supply and prior to attaching the accessories.
- Always turn the appliance off before disconnecting the power plug.
- Clean the appliance thoroughly prior to using it.
- During operation keep hands, hair, clothing, and utensils away from the cutting blade to avoid injuries and damage to the appliance.
- The appliance is only intended for short term operation. After an operation time of 5 minutes let it cool for at least 30 minutes. Do not overload the appliance.

SPECIFICATION

Model	SL-5230D12C
Rated Power	200W
Rated Input	120V~ 60Hz 200W

PARTS DESCRIPTION

1	Support Plate
2	Blade
3	Blade Locking Screw
4	Power Cord
5	Base Assembly
6	Food Carriage
7	Slicing Guard
8	Dual-action On / Off switch
9	Security lock
10	Thickness Adjustment Knob
11	Motor Assembly
12	Tray

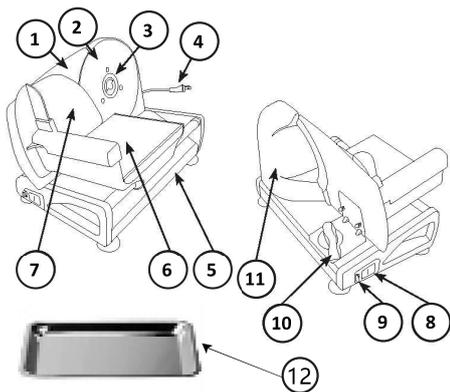

Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.

Check for the presence of all parts and for transport damage. In case of damages or incomplete delivery, please contact your dealer. Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. **Voltage 120V~ 60Hz 200W**)

Before using your appliance for the first time, wipe all removable parts with a damp cloth. Never use abrasive products.

Clean the whole appliance (see the cleaning section).

Place the appliance on a dry, flat, and stable surface.

Apply downward pressure onto the appliance so that the suction feet (7) get a good grip.

BEFORE THE FIRST USE

Use the setting button to choose the desired cutting width.

The cutting width is adjustable from 1 to 15 mm. Slide the cradle to the left and place the food on the cradle.

Place the holder on the cradle; use this holder to push the food slightly against the back cover.

Activate the device by using the on/off switch which is located on the left side of the device.

NOTE: This appliance is equipped with a safety switch (A), first bring the safety switch towards yourself then push simultaneously the on/off switch and the appliance will start. By pushing the on/off switch again the appliance will stop.

WARNING! Do never touch the blade, the blade is very sharp and can cause severe injury.

Slide the tray slowly to the right against the rotating blade.

Catch the sliced food at the back of the device.

WARNING! Never use the device without the guard, you can seriously injure yourself.

When turning off the device the blade keeps turning for a while, so do not touch it.

After 5 minutes of continued use, turn off the device and allow it to cool down, to prevent overheating of the motor.

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down.

Use a soft, slightly damp cloth to wipe appliance surfaces. Do not allow water or any other liquid to get into the unit.

Before removing the blades, disconnect the power plug.

WARNING! Never touch the edges of the blades! Make sure the removed cutting knife cannot roll off the table!

Keep children at a safe distance!

To remove the cutting blade. Push the 'push button' in the middle of the cutting blade, a latch will come out; turn the latch clockwise to unlock the cutting blade.

Now you can clean the blade in soapy water, the blade is also dishwasher safe.

To put the cutting blade back into position, make sure the tabs on the blade match up to the appliance and put on the blade, lock the blade by turning the latch counterclockwise.

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard: At the right side of the tie rod, you will find a hatch, slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

WARNING!
Packaging materials are not toys. Children should not play with the packaging materials, as they pose a risk of swallowing and suffocation!

USE

Use the setting button to choose the desired cutting width.

The cutting width is adjustable from 1 to 15 mm. Slide the cradle to the left and place the food on the cradle.

Place the holder on the cradle; use this holder to push the food slightly against the back cover.

Activate the device by using the on/off switch which is located on the left side of the device.

NOTE: This appliance is equipped with a safety switch (A), first bring the safety switch towards yourself then push simultaneously the on/off switch and the appliance will start. By pushing the on/off switch again the appliance will stop.

WARNING! Do never touch the blade, the blade is very sharp and can cause severe injury.

Slide the tray slowly to the right against the rotating blade. Catch the sliced food at the back of the device.

WARNING! Never use the device without the guard, you can seriously injure yourself.

PLEASE NOTE THAT:

This appliance is only suitable for slicing food contents, e.g. meats, cheeses, fruits, vegetables, breads, etc. The food to be sliced must be defrosted, unpackaged and deboned before it can be sliced with the appliance. Do not use it for slicing frozen food, bones, or for any other purpose.

This appliance is only suitable for private household use and it is not designed for commercial purposes.

This appliance is intended for dry indoor use only. Do not use the appliance outdoors.

OSTBA'S TIPS

HOT ROASTS—BEEF, PORK, LAMB, TURKEY, HAM

When slicing boneless roasts, remove from the oven and allow to cool for 15-20 minutes before slicing. The meat will retain its natural juices and slice without crumbling.

Cut the roast, if necessary, to fit onto the platform. Place foil underneath the platform table to catch juices and crumbs for easy cleanup (and treating yourself with the best pieces).

For rolled or tied roast, remove strings one at a time as the strings become closer to the blade (make sure the appliance is off).

EXTRA-THIN SLICED CORNED BEEF OR FRESH BEEF BRISKET

Chill brisket that has been cooked overnight in its juices.

Before slicing, drain, and reserve meat juices from brisket. Pat dry with paper towels. Remove excess fat. Slice well-chilled brisket to desired thickness.

To serve hot, place slices on a heatproof tray and moisten with a small amount of reserved meat juice. Heat in the oven at 150°C for 30 minutes.

CHEESE

Slice while well chilled.

Before serving, allow the cheese to reach room temperature. This will enhance the natural flavour.

Some processed cheese may stick to the blade.

When necessary, turn the appliance off, wait for the blade to stop turning, and remove the plug.

Wipe the blade with a damp cloth since moisture will help prevent the blade from sticking.

BACK BACON

Chill thoroughly before slicing. Some types of smoked bacon should have the fat removed.

COLD CUTS AND SANDWICH MEAT

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.

For best results, chill first.

Remove any plastic or hard casing before slicing.

Use a constant, gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.

Slice carrots lengthwise in very thin strips.

Soak in ice water to curl.

Slice zucchini, eggplant, and squash.

DO NOT SLICE:

Hard frozen foods

Meat with bones

Food containing large stones or seeds

Food in wrappers such as aluminum foil or cling film

Extra tip for soft, hard-to-slice food:

Chill in the freezer for 2-4 hours before slicing and you will see that it is much easier that way!

BACK BACON

Chill thoroughly before slicing. Some types of smoked

bacon should have the fat removed.

Cold Cuts and Sandwich Meat

Cold cuts of meat will last longer and will retain flavour longer if sliced when needed.

For best results, chill first.

Remove any plastic or hard casing before slicing.

Use a constant, gentle pressure for uniform slices.

FRUITS AND VEGETABLES

Slice potatoes for thick or thin chips.

Slice carrots lengthwise in very thin strips. Soak in ice water to curl.

Slice zucchini, eggplant, and squash.

BREAD, CAKES, AND COOKIES

Your slicer is effective with coarse-textured bread and cakes. Freshly baked bread should be cooled before slicing. Use day-old or slightly stale bread for extra-thin sliced for toasting. Your slicer is ideal for all types of bread loaves, pound cake, and fruit cake. For wafer-like icebox cookies, chill dough in the refrigerator and then slice as desired.

DO NOT SLICE:

Hard frozen foods
Meat with bones
Food containing large stones or seeds
Food in wrappers such as aluminum foil or cling film
Extra tip for soft, hard-to-slice food:
Chill in the freezer for 2-4 hours before slicing and you will see that it is much easier that way!

CLEANING AND MAINTENANCE

Unplug the appliance and allow it to cool down. Use a soft, slightly damp cloth to wipe appliance surfaces. Do not allow water or any other liquid to get into the unit.

REMOVE THE CUTTING BLADE

Before removing the blades, disconnect the power plug.

WARNING! Never touch the edges of the blades! Make sure the removed cutting knife cannot roll off the table! Keep children at a safe distance! To remove the cutting blade. Push the 'push button' in the middle of the cutting blade, a latch will come out; turn the latch clockwise to unlock the cutting blade.

Now you can clean the blade in soapy water, the blade is also dishwasher safe.

To put the cutting blade back into position, make sure the tabs on the blade match up to the appliance and put on the blade, lock the blade by turning the latch counter-clockwise.

CLEANING THE TIE ROD AND BLADE GUARD

To disassemble the tie rod and blade guard: At the right side of the tie rod, you will find a hatch, slide this hatch to the right now you can take out the rod and you will be able to clean these parts.

PARTS	HOW TO CLEAN THEM?
Food holder	Remove and clean with soapy water.
	Rinse under tap water and dry thoroughly.
Sliding platform	Wipe with a soft cloth damped with some dishwashing liquid.
Sliding food guide	Wipe with a clean cloth and dry thoroughly. Do not immerse in water or other liquids!

STORAGE AND DISPOSAL

STORAGE:

Store the appliance in a cool, dry, and clean place, out of the reach of children and pets. Please keep the packaging for transporting the appliance or for storing your appliance when not in use for a prolonged time period.

PRODUCT DISPOSAL:

This product may not be disposed of with ordinary household waste, as electrical and electronic waste must be disposed of separately. Contact your retailer, distributor or the municipal authorities for further information on product disposal.

Accessory Purchase Information

To better maintain and extend the service life of your slicer, we offer the following accessories for separate purchase:

Replacement Blades:

Sharp and durable, ensuring consistent slicing performance.

Food Pusher:

Safe and easy to use, making slicing more efficient. You can conveniently purchase these accessories from our official store. For details, please visit the store page or contact customer service for further assistance.

OSTBA



Intertek
3121233

CONFORMS TO UL STD.982
CERTIFIED TO CSA STD. C22.2
NO.1335.1 & 1335.2.14

OSTBA

Only Sell the Best Appliance

Hong Kong TopChef Appliance Limited
Room P, 4/f, Lladro Centre, 72 Hoi Yuen Road Kwun Tong Kowloon
Website: www.ostba.cc
E-mail: support@ostba.cc