 


# INSTRUCTION MANUAL

Always read this instruction manual before installing or  
using your appliance and always keep for future reference

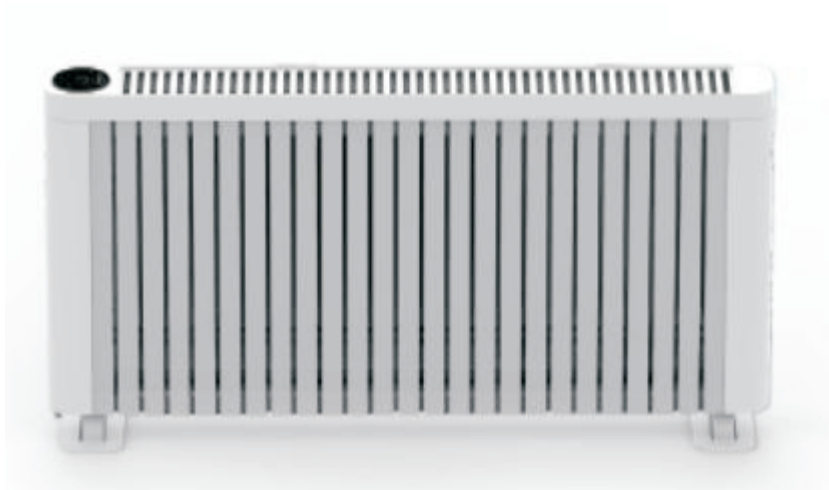

**MODEL# KM3796**

### **Safety Advice**

READ THIS NOTICE CAREFULLY BEFORE OPERATING THE APPLIANCE.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.**
- Make sure that the voltage indicated on the nameplate of the appliance corresponds to that of your electrical installation. If this is not the case, contact your dealer and do not connect.
- Regularly check the condition of the power cable. Do not use if the power cord, plug or appliance is damaged.
- The device should not be placed underneath a power

outlet.

- The power cable should never be in contact with hot parts of the device.
- CAUTION: To prevent overheating, do not cover the heater.
- Keep a minimum distance of one meter from flammable objects such as curtains, textile ...
- Do not clean the unit with abrasive chemicals.

**Do not place sharp metal objects or your fingers into the unit to prevent damage and reduce the risk of electric shock.**

- Do not use accessories other than those supplied or recommended by the manufacturer. This can be dangerous and may damage the device.
- Never repair the unit yourself. Otherwise you will lose the benefit of the guarantee. Like any electrical appliance, it must be repaired by a qualified person. If the power cable is damaged, it must be replaced by the manufacturer, his service agent or similarly qualified person in order to avoid danger.
- A repair involving the opening of the radiator can be made by the manufacturer or its distribution network.
- Do not use this heater with a programmer, timer,

separate remote-control system or any other device that switches the heater on automatically, since a fire risk exist if the heater is covered or positioned incorrectly.

- Disconnect from mains when not in use or cleaning.

**It is not recommended to use an extension cord.**

- The heater is hot when in use. To avoid burns, do not let bare skin touch hot surface.
- Do not immerse cord, plug or any part of the appliance in water or any other liquid.
- Do not use the heater in dusty environments or where flammable vapours are present (e.g. in a workshop or garage).
- Do not place the heater on or near any other source of heat.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not let the mains lead hang over the edge of the table or work surface or touch hot surfaces.
- Do not use outdoors.
- Do not use the appliance for other than its intended use.

 
This appliance is intended for household use only.

- Do not misuse the cord or pull the cable to disconnect it from the outlet. Instead, grasp the plug and pull it to disconnect.
- Do not insert or allow foreign objects to enter the ventilation or exhaust openings as this may cause an electric shock , fire or damage to the appliance.
- When the heater is turned on for the first time, it may release a slight, harmless odor. This odor is a normal occurrence caused by the initial heating of the internal heating elements and should not occur again.
- Please do not put any unit on the product.
- In order to avoid any accident, please turn off the unit when people leave.
- Please do not use the product when there are no people to take care of children, animal or the disabled people.
- Do not handle the power cord and plug by wet hands.




**Warning: In order to avoid overheating, do not cover the heater.**

## Installation

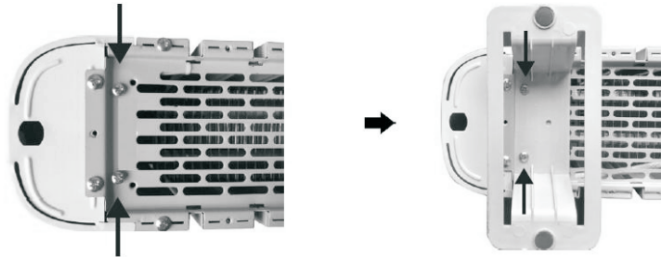


## How to use:
  
### Control Panel

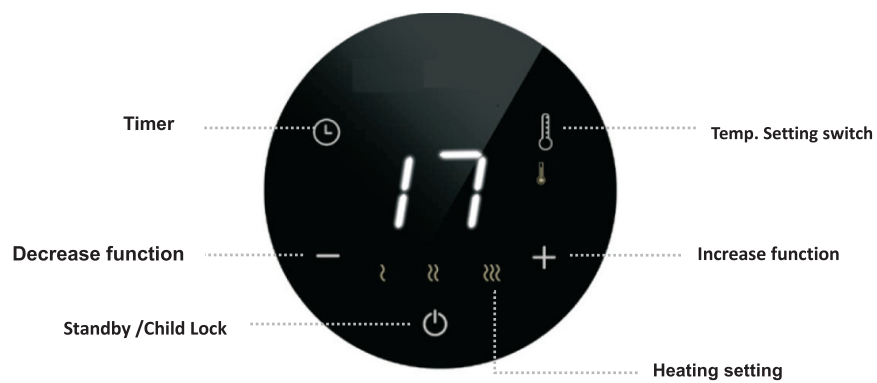



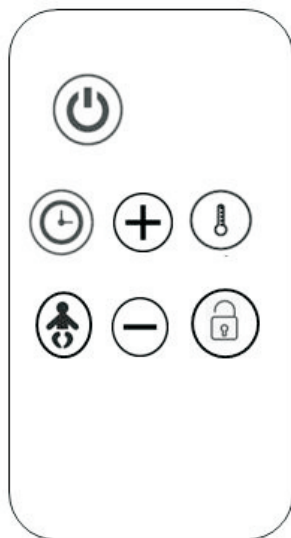











### Remote Control



	Standby
	Timer
	Increase function
	Temp. Setting
	Kids Mode
	Decrease function
	Child Lock

#### How to use:

- Place the appliance on a flat and horizontal surface at least 1M away from the closest or combustible material.
- Plug the appliance into 120V~ 60Hz socket with a beep sound then the heater standby. The indicator light is on and keep burning.
- Press to turn on the heater, which is in state of factory default when first time use. The factory default setting is power II 900W and target temperature is 37°C。
- Press and to set the heating position ( I , II , III ). temperature from 5-37°C.

- Press  to enter the temperature setting ,when the temperature number on screen display is flashing ,press  or  to start the target temperature setting ,press  again to confirm the setting.
- Press  to enter the timer setting, the indicator light  is on, and the screen display **00** keeps flashing, Press  and  to set the timer from 0-12 hours. Press  again to confirm setting.
- Press down  5 seconds or switch on  on remote control ,the Child Lock function is activated ,the screen will be locked .To unlock the heater, press down  5 seconds or switch off the  on remote control.
- Press  to activate Kids Mode on remote control , the heater is working on power I (600W).

Model	Power I	Power II	Power III
KM3796	600W	900W	1500W

## CLEANING & MAINTENANCE

- Switch off and unplug from the power supply before cleaning.
- Using a soft, moist cloth, with or without a mild soap solution, carefully clean the exterior surface of the product.

- CAUTION: Allow the product to completely cool before handling or cleaning it.
- Do not allow water or other liquids to run into the interior of the product, as this could create a fire and/or electrical hazard.
- We also recommend the periodic cleaning of this appliance by lightly running a vacuum cleaner nozzle over the guards to remove any dust or dirt that may have accumulated inside or on the unit.
- CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components.



Waste electrical products should not be disposed of with household waste.



Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.