



12" Motion Sensor Ceiling Light Installation Guide

MCL-6122305

www.maxximastyle.com



WARNINGS



- Risk of fire or electric shock.
- If you are unfamiliar with electrical installations, consult a qualified electrician before proceeding.
- Do not make or alter any holes in the wiring enclosure or modify any electrical componentry.
- Supply conductors must be rated for at least 90°C/194°F.

CAUTIONS

- To ensure personal safety, proper grounding of the electrical fixture is required.
- The fixture must be wired in accordance with the National Electric Code (N.E.C.) and applicable local codes or ordinances.
- Suitable for damp locations
- 120 VAC, 23 W, 50/60 Hz only

INSTALLATION INSTRUCTIONS

Ceiling Flush Mount:

1. Ensure that power has been turned off by switching the circuit breaker or by removing the fuse from the fuse panel.
2. If you are replacing an existing fixture, remove and disconnect the old fixture first.
3. Attach the mounting bracket to the junction box using the supplied mounting screws as shown in figure 1. Ensure that the supply wires go through the center hole of the bracket.
4. Connect the hot (black) wire to the black supply wire, the neutral (white) wire to the white supply wire, and the ground (green) wire to the green wire using the supplied wire connectors, as shown in figure 2.
5. Ensure that the wires are safely tucked into the junction box and no wires are pinched.
6. Align the installation bracket position mark, shown in figure 3, with the bracket ends. Push the fixture up until the bracket clicks in place.
7. Using the CCT and sensor switch on the fixture, preview and select the desired color temperature and sensor setting.
8. Installation is now complete. Restore power and check operation of the light fixture.

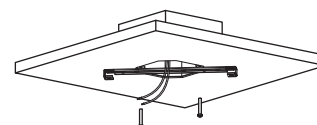 


Figure 1

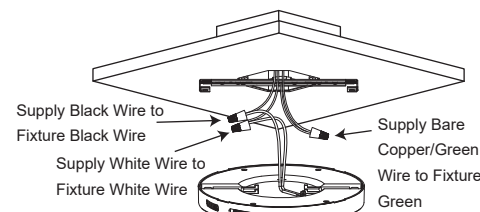 


Figure 2

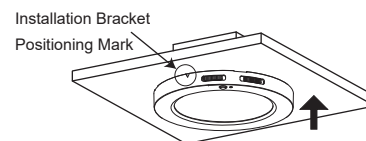 


Figure 3

Sensor Details: (Refer to Figure 4 for a visual diagram)

 
OFF: All sensors will be deactivated. Light turns on/off with a switch.

OFF/ON: Both PIR and D2D sensors will be on. When motion is detected in the dark, the light will turn on full brightness for 30 seconds.

Bi-Level: Same as OFF/ON setting, except if no motion is detected in the dark, the light will be at a low brightness.

** On both the OFF/ON and Bi-Level setting, in order for the light to turn off, sufficient light must be detected as well as no motion must be detected for 30 seconds.

Bi-Level Function:

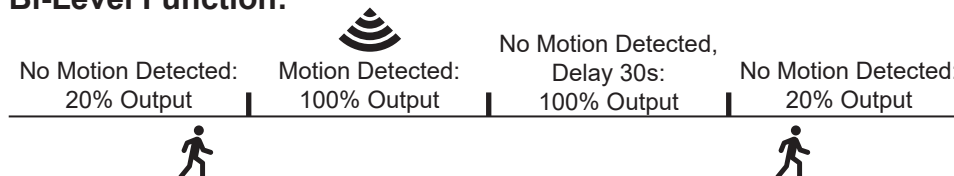

ON/OFF Function:

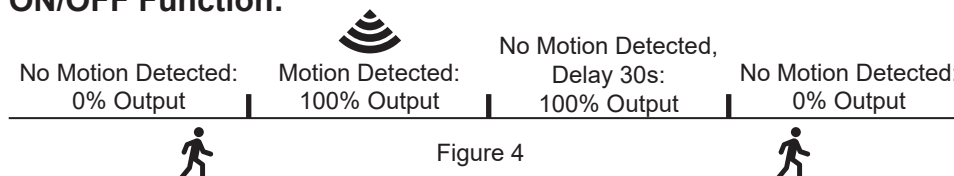 


Figure 4

3-YEAR WARRANTY

Maxxima extends a 3-year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warrantied product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.