

ASSEMBLY AND STORAGE

STORAGE NOTES



Proper cleaning and lubrication of certain components of the EZ-Roller™ are critical to prolonging the life of the components.

If after extended use the plunger has a tendency to stick, apply a generous amount of petroleum jelly located on the end of the plunger (see Lubricating the components, step 2).



Attention

When storing the EZ-Roller™, make sure the fill valve is pointing downward, and never store the EZ-Roller™ with the fill tube inserted into the fill valve.

ASSEMBLY AND STORAGE OF THE COMPONENTS

1. Turn the locking collar as shown until the main tube slides easily off of the plunger.
2. Lubricate around and in between the plunger O-rings with petroleum jelly.
3. Re-insert the plunger back inside the main tube. Make sure the O-rings do not twist or cut.
4. Tighten the locking collar.
5. Lubricate the inside of the fill valve housing on the main tube with petroleum jelly.
6. Clean and lubricate with petroleum jelly the indicated areas on the roller arm.
7. Lubricate the roller caps with petroleum jelly as shown. Reassemble roller cover. Place back onto roller arm.
8. Attach roller arm to head. Lock arm into place by pushing down on the Quick-Release tab.

