


PARTS DIAGRAM

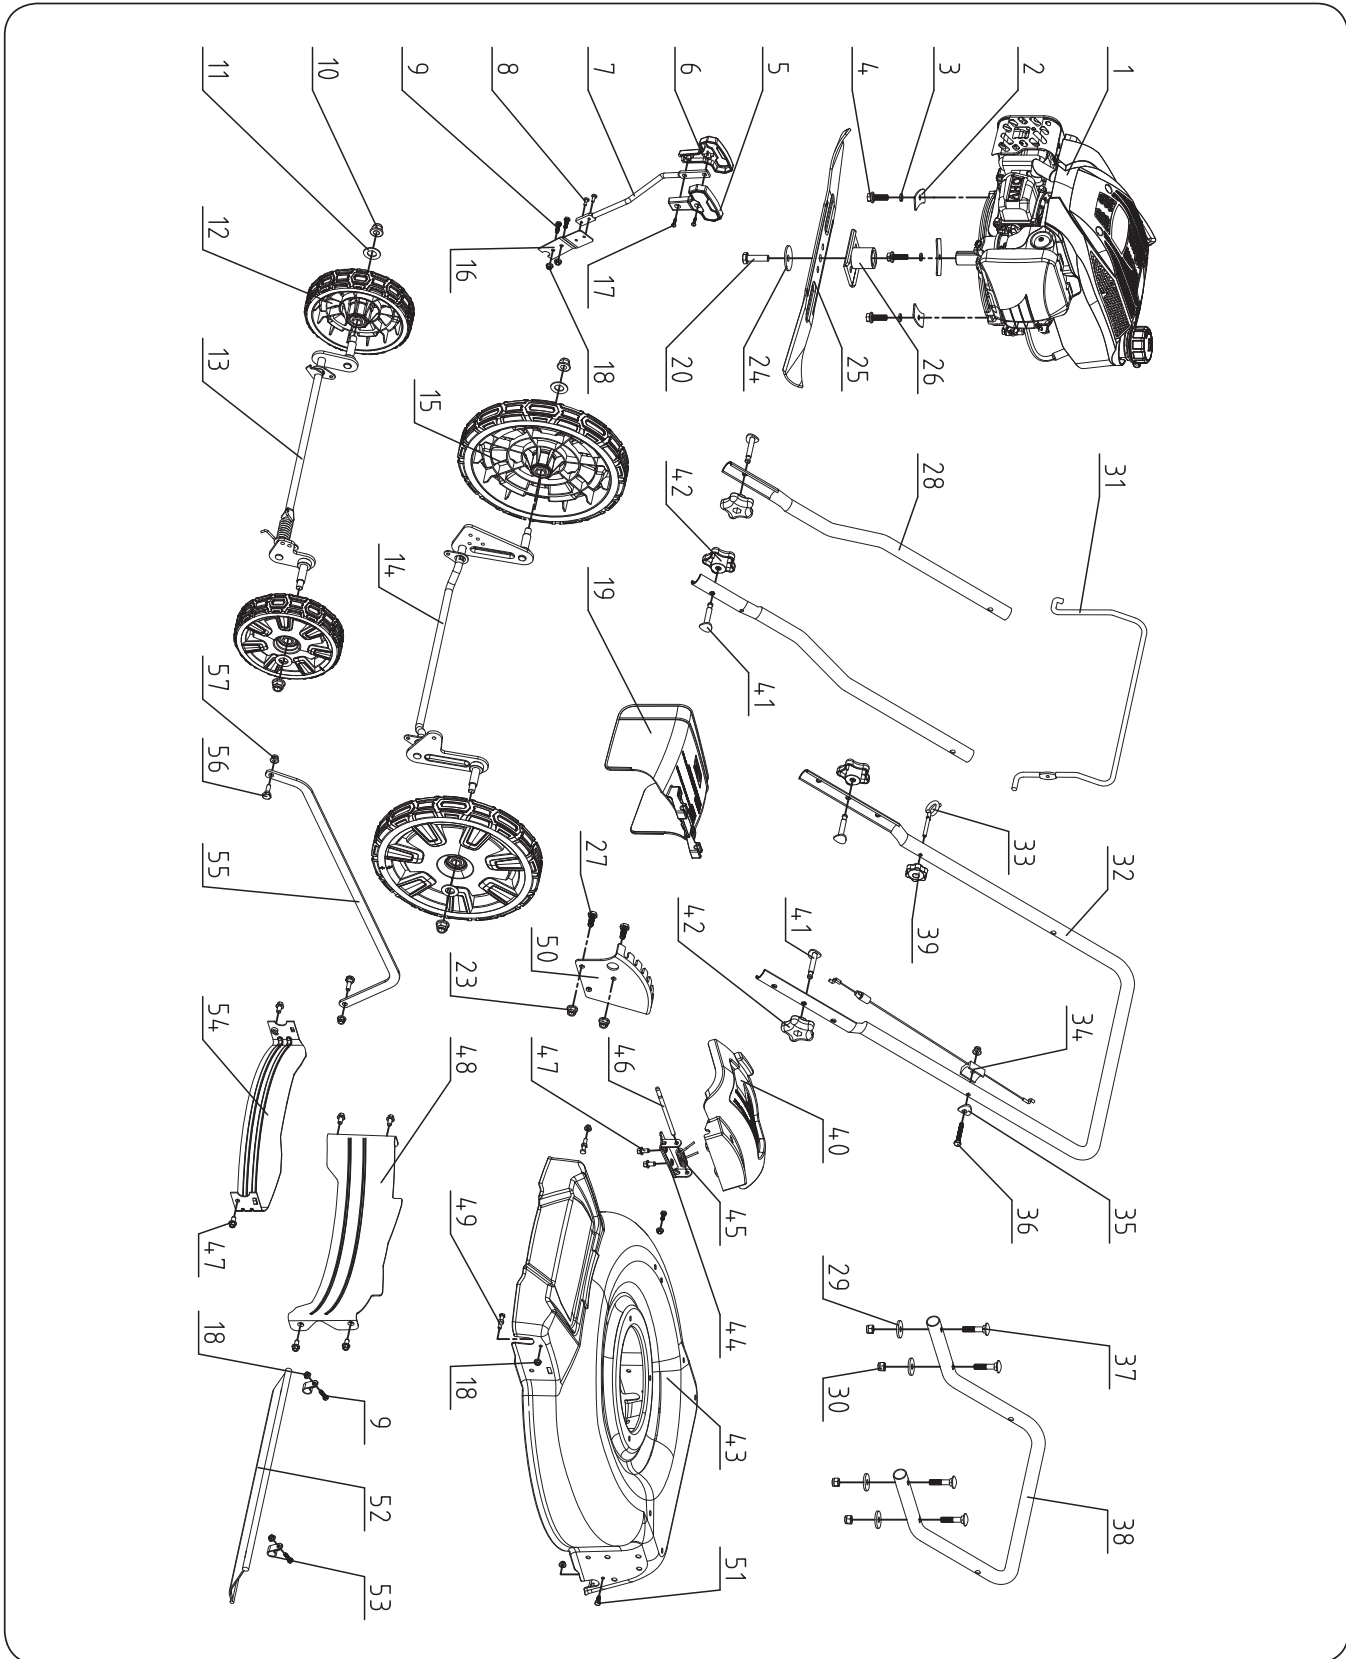

YG1550 PARTS LIST

No.	Description	Qty
1	Engine	1
2	Engine Bolt Gasket	3
3	Spring Washer 8	3
4	Bolt M8x25	3
5	Height Adjustment Handlebar Knob-Left	1
6	Height Adjustment Handlebar Knob-Right	1
7	Height Adjustment Handlebar	1
8	Rivet 4 x10	2
9	Bolt M5x16	4
10	Nut M10	4
11	Washer 14	6
12	Front Wheel	2
13	Front Wheel Axle	1
14	Rear Wheel Axle	1
15	Rear Wheel	2
16	Arm Pivot	1
17	Screw ST3.5*13	2
18	Nut M5	6
19	Side Discharge Chute	1
20	Blade Bolt 3/8-24UNF*35	1
21	Discontinued	N/A
22	Discontinued	N/A
23	Lock Nut M8	2
24	Spring Washer for Blade	1
25	Blade	1
26	Blade Support	1
27	Bolt M8x16	2
28	Intermediate Connecting Handlebar	2
29	Flat Washer 8	4
30	Thick Lock Nut M8	4

No.	Description	Qty
31	Engine Start/Stop Control	1
32	Upper Handle	1
33	Rope Guide	1
34	Engine Start/Stop Control Cable	1
35	Curved Washer M8	1
36	Bolt M6x40	1
37	Bolt M8x40	4
38	Lower Handle	1
39	Guide Knob M6	1
40	Mulching Cover	1
41	Curved Half-round Head Bolt	4
42	Wing Knob	4
43	Cutting Deck	1
44	Mulching Cover Mounting Plate	1
45	Return Torsional Spring	1
46	Mulching Cover Rotating Shaft	1
47	Hexagon Head Self-tapping Locking Screw M6x12	8
48	Rear Baffle	1
49	Groove Bolt	2
50	Height Adjustment Positioning Plate	1
51	Bolt M5x12	2
52	Shield-Trailing	1
53	Trailing Shield Holder	2
54	Front Baffle	1
55	Height Adjustment Connecting Rod	1
56	Positioning Bolt	2
57	Nut M6	3