

To learn more about your cutlery and experience our full line of cutlery and kitchen products, visit **KitchenAid.com/cutlery** (USA) or **KitchenAid.ca** (Canada).

For countries outside the USA and Canada, visit **international.KitchenAid.com** to locate your local KitchenAid website and customer support information.

You may also reach us at:

USA:
1.800.541.6390

Canada:
1.800.807.6777

UK/Northern Ireland:
01-942-60-55-04

PROOF OF PURCHASE

Always keep a copy of the itemized sales receipt showing the date of purchase of your cutlery. Proof of purchase will assure you of in-warranty service. The completion and submission of product registration information is not required to obtain your product warranty. Please complete the following for your personal records:

Model Number:

Date Purchased:

Store Name:

Customers in the USA only: Before you use your cutlery, please register online at **KitchenAid.com/registermyproduct**.

This will enable us to contact you in the unlikely event of a product safety notification and assist us in complying with the provisions of the Consumer Product Safety Act.

USING YOUR CUTLERY

Proper use

- Select the proper knife for the task at hand.
- Do not use knives to cut through bone or to cut or separate frozen foods; it may damage or dull the blade.
- Do not use knives as a screwdriver or can opener; it may damage the blade.

Cutting surfaces

- Use smooth, easy-to-clean cutting surfaces. Wood and polyethylene cutting boards are recommended.
- Do not use knives on hard surfaces that can dull or damage the cutting edge, such as glass, stone, ceramic, metal, or countertops.

CARING FOR CUTLERY

Washing cutlery


- Cutlery is dishwasher safe, but hand washing is recommended for lasting appearance and performance.

Sharpening cutlery

To maintain maximum performance, knives should be sharpened periodically.

- Pull knives through the built-in diamond sharpener with slight downward pressure until desired sharpness is achieved.
- The built-in sharpener can be cleaned and sharpening wheel can be replaced, if worn out.
See KitchenAid.com/cutlery for more information.

NOTE: Knives with serrated edges must be professionally sharpened.

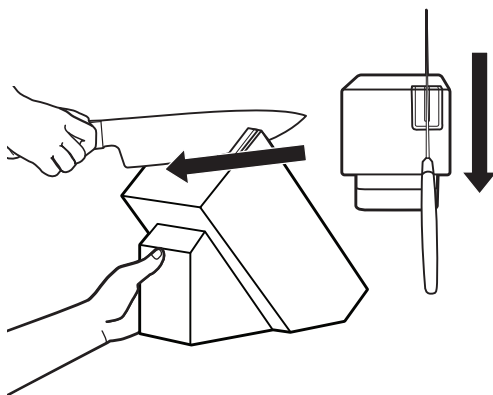

FOR HOUSEHOLD USE ONLY

LIFETIME LIMITED WARRANTY applies to U.S.A. and Canada only. See the full warranty at KitchenAid.com.

For warranty information as it applies to other countries, visit international.KitchenAid.com.

KitchenAid

© 2015 KitchenAid. All rights reserved.
Used under license in Canada.