

*** NOTICE BEFORE ASSEMBLY ***

Please choose the CHAISE will be on the LEFT or RIGHT hand side.


#Assembly Instruction II: CHAISE ON THE RIGHT

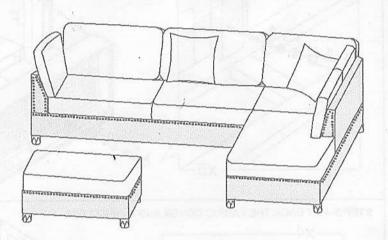


Before assembly, open both Box 1 and Box 2 to switch between Part C&H and Part F&G. And you will get the direction of right chaise.

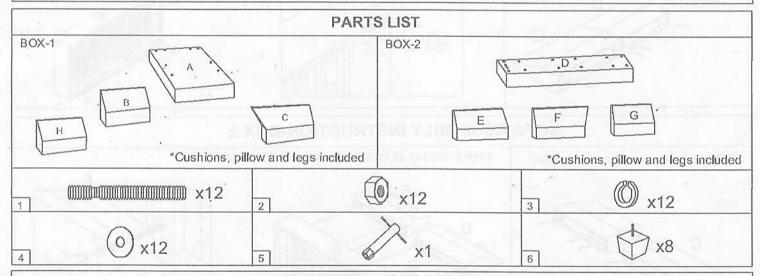



BEFORE ASSEMBLY

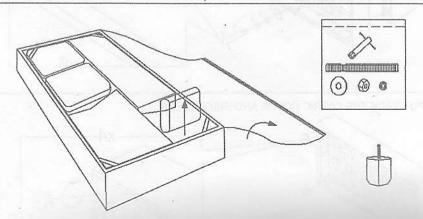

Open up the Velcro of Non-Woven Fabric cover on the bottom of the seat frame to remove seat cushions, back cushions and pillow.

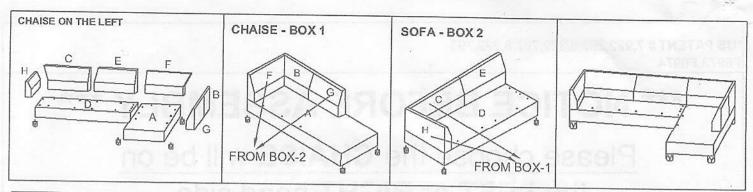

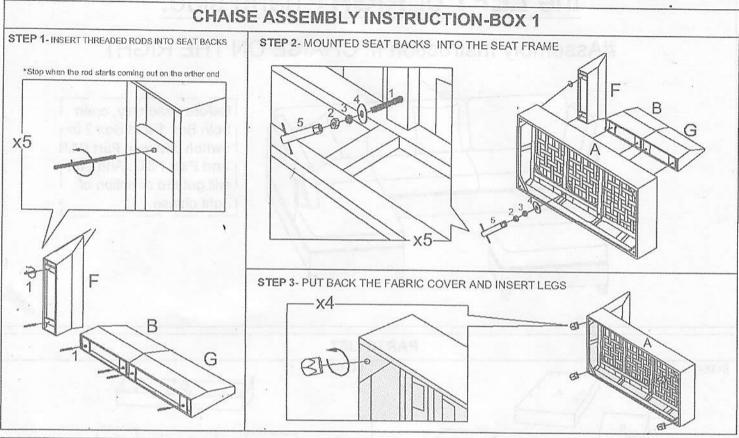


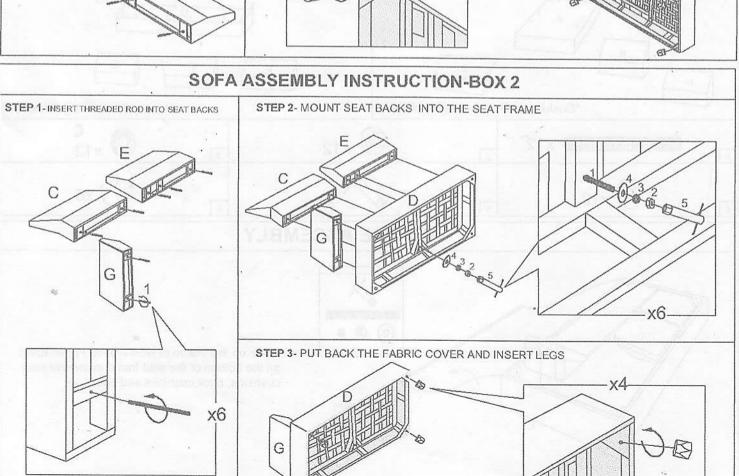


*** NOTICE BEFORE ASSEMBLY ***


Please choose the CHAISE will be on the LEFT or RIGHT hand side.

#Assembly Instruction I: CHAISE ON THE LEFT

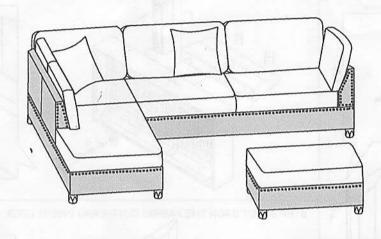


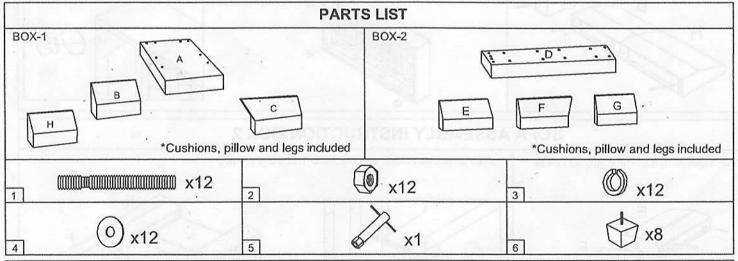



BEFORE ASSEMBLY

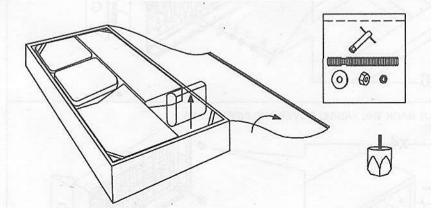

Open up the Velcro of Non-Woven Fabric cover on the bottom of the seat frame to remove seat cushions, back cushions and pillow.

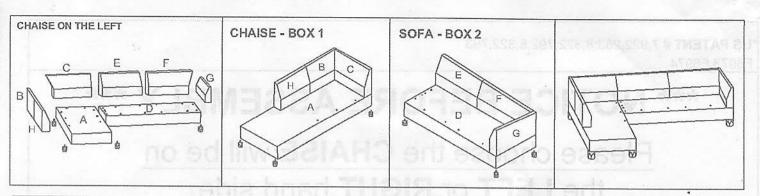


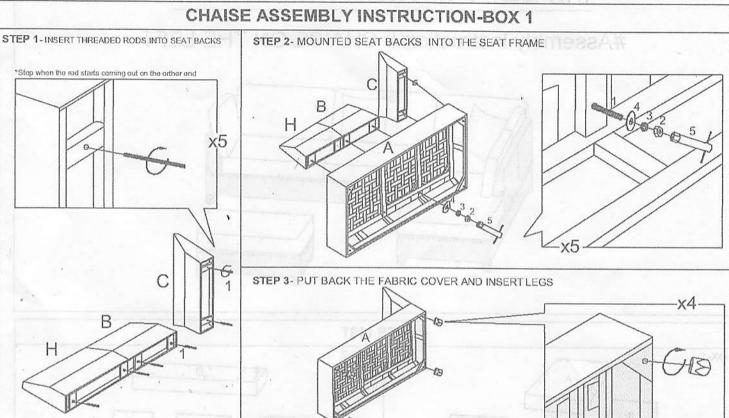

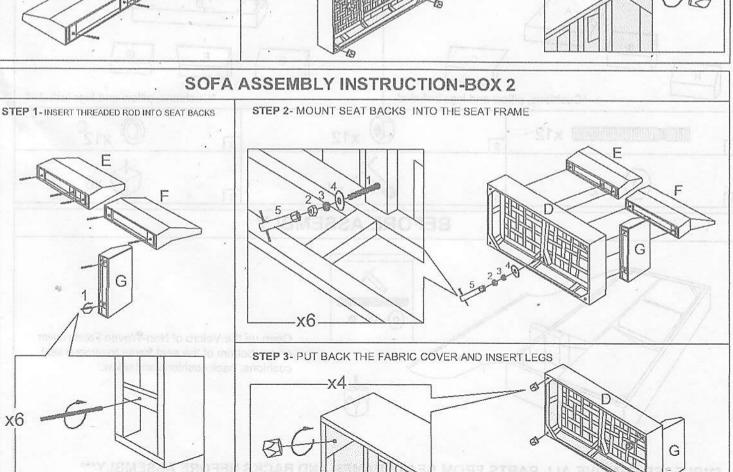


OPTIONAL: CHAISE + SOFA(SECTIONAL)

STEP1-INSERT THE "N" SHAPE HANGER INTO THE ONE-ARM CHASE FRAME AND ONE-ARM SOFA FRAME TO ATTACH TOG ETHER

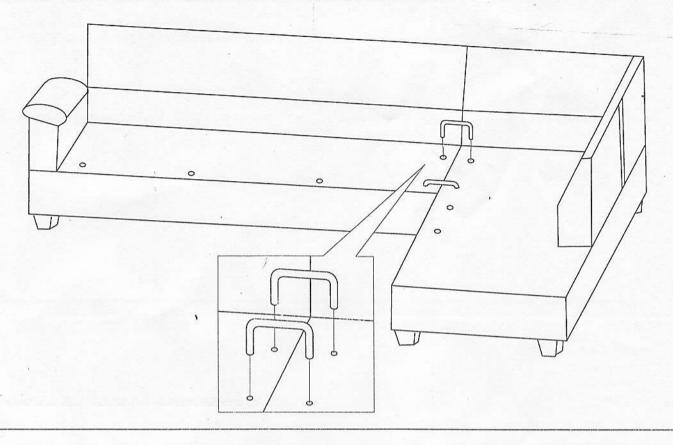

CHAISE + SOFA(SECTIONAL)

STEP1-INSERT THE "N" SHAPE HANGER INTO THE ONE-ARM CHASE FRAME AND ONE-ARM SOFA FRAME TO ATTACH TOG ETHER

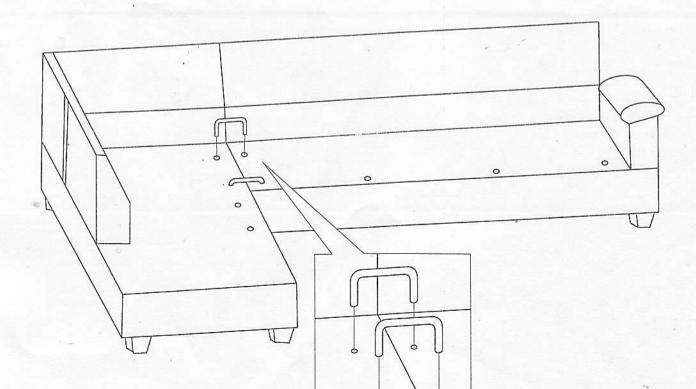

Assembly Instructions

ITEM NO .: F6974

