



# Assembly and Installation

## 1 Preparing for installation


- FOR FIRST TIME USE: Twist and remove the top cover (A) from the housing (D). Remove the pull tab between the top cover (A) and housing (D).

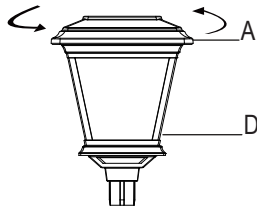

- Replace the top cover (A) on the housing (D).

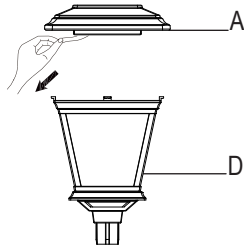

- Firmly slide the post (E) into the housing (D).

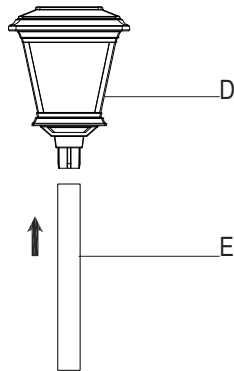

## 2 Installing the solar light in the ground



**NOTE:** Do not use a hammer. If the ground is hard, use water to soften or a trowel to loosen the soil.

- Attach the post (E) to stake (F).
- Push the assembly firmly into the ground.

