


 BREED®

The image shows a BREED OUTPOST Heat Deflector in use. It is a two-tiered metal structure. The top tier is a flat circular plate with the BREED logo embossed on it. The bottom tier is a larger circular plate with a hole in the center, through which a fire is burning. The fire is bright orange and yellow, with sparks rising from it. The background is dark and out of focus, suggesting an outdoor setting at night.

OUTPOST™
HEAT DEFLECTOR

GET READY FOR A HEATWAVE

The Outpost Heat Deflector is fully assembled and ready for use.
Requires the Outpost Rod for use on Breeo X & Y Series Fire Pits.

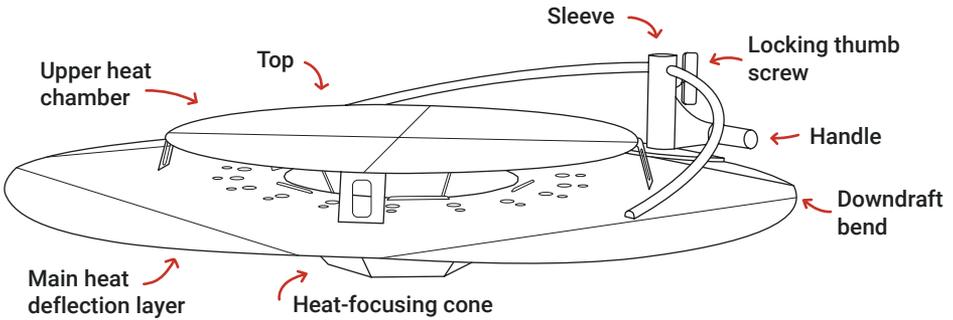

HOW TO SET UP OUTPOST ROD

STEP 1

Insert the locking mechanism end of the Outpost Rod into the opening on the rim of your fire pit.

STEP 2


Align pegs on the Rod with notched openings on the fire pit, lower Rod, ensure pegs go down into the opening, and twist the Rod to secure.

STEP 3

Slide locking collar on Rod down, align tabs and slide them into the notched openings on the fire pit. This will lock the post into place. Rod should not spin, and the small handle should be facing outward.



Aligning pegs with notches on the fire pit

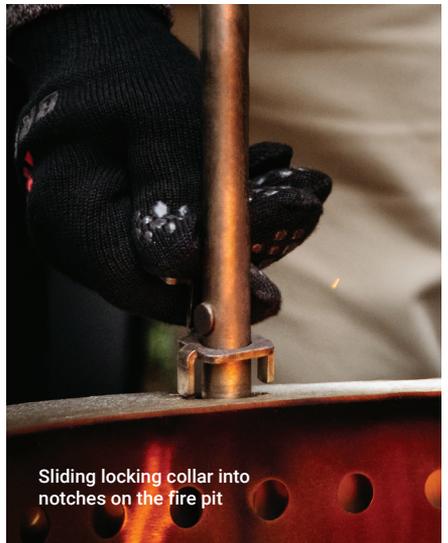

Sliding locking collar into notches on the fire pit

HOW TO INSTALL HEAT DEFLECTOR

STEP 1


Loosen locking thumb screw (do not remove) so that the sleeve on the Heat Deflector can slide onto the Outpost Rod.

STEP 2

Hold Heat Deflector horizontally and slide sleeve onto the Outpost Rod. Adjust the Heat Deflector to desired height and swivel the Heat Deflector directly over the center of the fire pit.

STEP 3

Secure by tightening the locking thumb screw on the handle of the Heat Deflector. You can adjust the height of the Heat Deflector as needed to ensure you get the full benefits of airflow depending if you are sitting or standing.

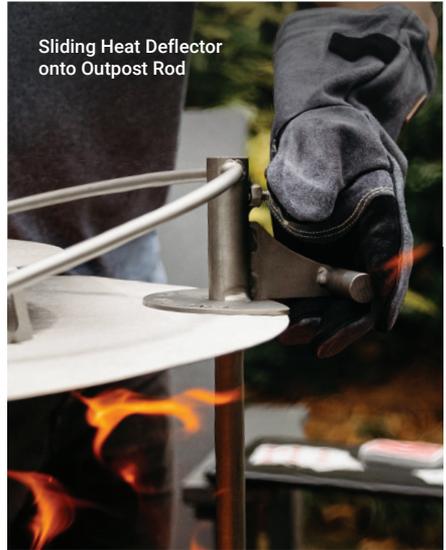

USE & CARE

Make sure the Heat Deflector is secured firmly into place on the Outpost Rod to prevent sliding down while in use.

Always wear protective gloves when adjusting the Heat Deflector.

Soot can build up on the underside of the Heat Deflector, clean with a rag, water, and dish soap.

Stainless steel may darken in color when exposed to heat. This will not affect performance.

Heat Deflector can be used in conjunction with other Outpost accessories if desired.

Heat Deflector can be used to protect the fire pit from light rain.

WARNING

Always practice safety first when using the Outpost™ system and accessories, exercise the same precautions you would with any open fire.

Never leave your Breco Fire Pit & accessories unattended, especially around children and pets.

The Outpost Heat Deflector, Rod, and accessories become very hot in use and can cause severe burns. Do not touch when hot.

Avoid touching sensitive surfaces with the Outpost Heat Deflector and accessories when they are hot.

When adjusting the height or orientation of your Outpost Heat Deflector, always wear protective gloves or use other heat protection to avoid burns.

Breco, LLC warrants to the original purchaser that the Breco Fire Pits and Accessories are free from workmanship and material defects during the lifetime of the original purchaser. In addition Breco, LLC warrants no rust through or burn through for a period of five (5) years from purchase. If a product is covered by this limited warranty, Breco, LLC, at its option, will repair or replace with a new product free of charge, excluding any applicable shipping and handling charges. If the product being warranted has been discontinued, the replacement product will be of equal or similar value. Altering any Breco product, or using the product in any way other than the intended use, will void this Lifetime Warranty. Except as provided above, no warranty is offered on rust, paint or finishes due to being made with material with potential for corrosion. Steel products will develop a natural iron oxide patina over time.

Breco, LLC's liability and obligation is limited to repair or replacement of the product, at their option. The purchaser must provide Breco, LLC with photos of the product's defects for evaluation. Upon approval of warranty, Breco, LLC will issue a return for repair, or return for exchange of the defective product.

This warranty does not cover damage or product failure caused by normal wear and tear, accident, misuse, negligence, tampering, modifications, act of war, overloading, improper attachment, improper maintenance, or failure to maintain. Breco, LLC is held harmless for any injury or death caused by the misuse of this product. This warranty does not cover damage caused by proper or improper use of our products to any surrounding surfaces, structures, or furnishings. This includes, but is not limited to, discoloration or damage to a patio or deck surface, furniture, house, or any other structure.

This warranty gives you specific legal rights providing said product is put to its proper designated use.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. NO ORAL AGREEMENT, GUARANTEE, PROMISE, REPRESENTATION OR WARRANTY SHALL BE BINDING. IN NO EVENT WILL BRECO, LLC BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES EVEN IF BRECO, LLC HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND EVEN IF BRECO, LLC HAS KNOWLEDGE THAT FAILURE TO PERFORM COULD CAUSE CONSEQUENTIAL ECONOMIC LOSSES. IN ANY EVENT, CUMULATIVE DAMAGES FOR BREACH OF THIS WARRANTY WILL BE LIMITED TO THE AMOUNT ACTUALLY PAID TO BRECO, LLC FOR THE PRODUCT. THIS PARAGRAPH SHALL APPLY TO ALL ACTIONS RELATED TO THE PRODUCT, WHETHER BASED ON TORT, CONTRACT OR OTHER THEORIES. THE PURCHASER ACKNOWLEDGES THAT THIS PARAGRAPH ALLOCATES THE RISK OF PRODUCT FAILURE BETWEEN BRECO, LLC AND THE PURCHASER, AND THAT THIS ALLOCATION IS REFLECTED IN THE PRICE PAID.



WWW.BRECO.CO

(800) 413-9848

CONTACT@BRECO.LLC

© 2022 Breco LLC. All rights reserved. 12/22

