



*The Choice of Professionals*



**DTA USA GROUP Inc**  
Tiling Tools, Accessories & Floor Trims

## Use and Care of the for DTA tile cutters

### **Using you tile cutter-**

1. Mark your tile where it will need to be cut.
2. Place the tile against the cutter's fence with the glazed side facing upward.
3. Align it properly on the manual tile cutter under the scoring wheel so its perfectly straight for your cutting line.
4. In one firm, quick movement scribe the tile with the cutting wheel.
5. Apply equal pressure to the handle the entire length of the cut/tile.
6. Without moving you tile, position the breaker bar at the far end of the tile. Snap the tile along the score line by pressing down on the handle to complete the snap.



### **Maintenance of your tile cutter-**

1. Maintenance is very important to keep the quality of your scoring of the tile.
2. Clean your rails off with a clean and dry cloth towel.
3. Lubricate the rag and run it over the rails.
4. Run your tile cutter over the rails back and forth to evenly distribute the lubrication.
5. Repeat process until your handle slides smoothly and evenly down the rail(s).

**DTA USA GROUP INC**  
230 South Vasco Road  
Livermore, CA 94551  
E: [sales@dtausagroup.com](mailto:sales@dtausagroup.com)  
P: 925 371 7101

[www.dtausagroup.com](http://www.dtausagroup.com)