

REPAIR SHEET

BRAND

RYOBI

DESCRIPTION


MODEL NO.

RY40PH01

MFG. NO.

317945002

40 Volt Power Head

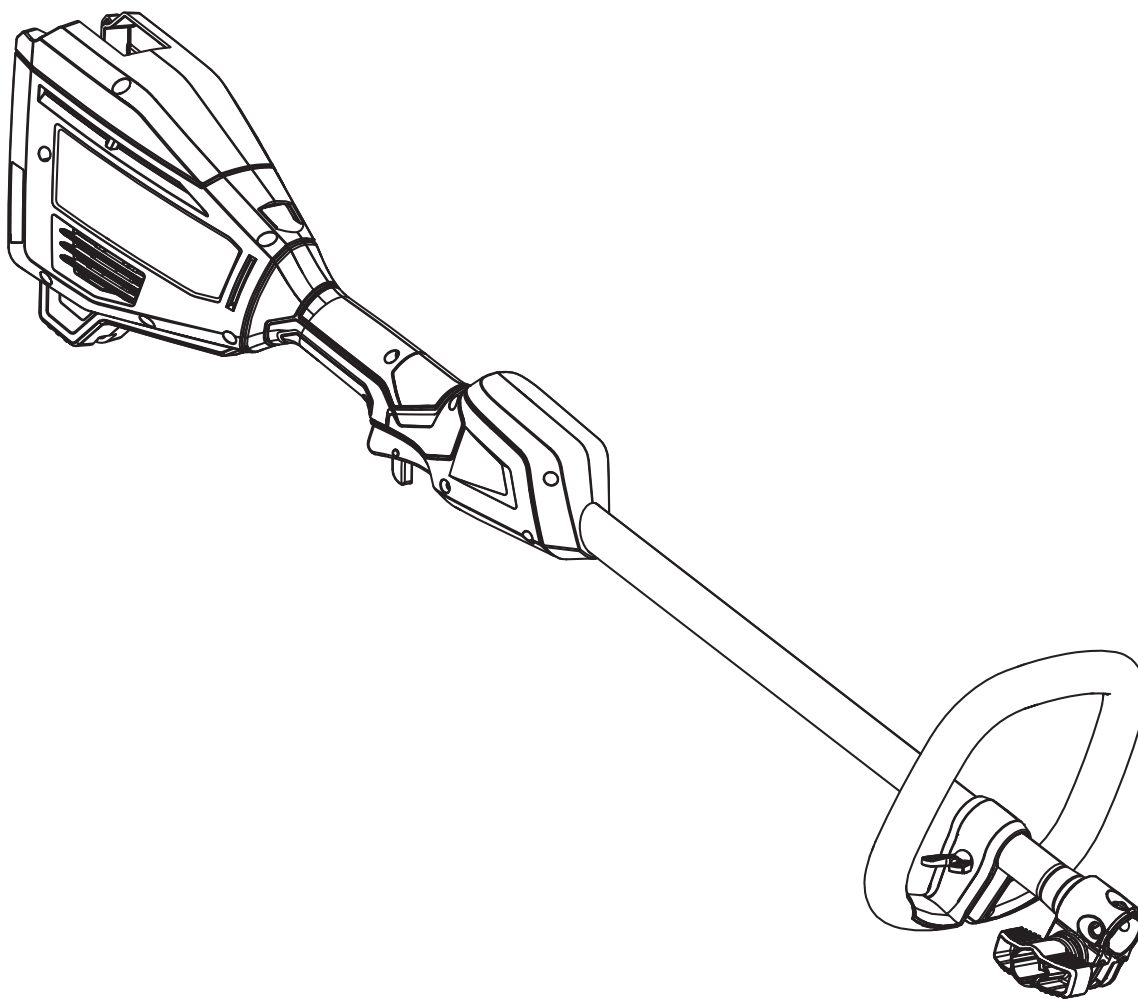


TTI OUTDOOR POWER EQUIPMENT, INC.

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

6-13-24 (Rev:01)

The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

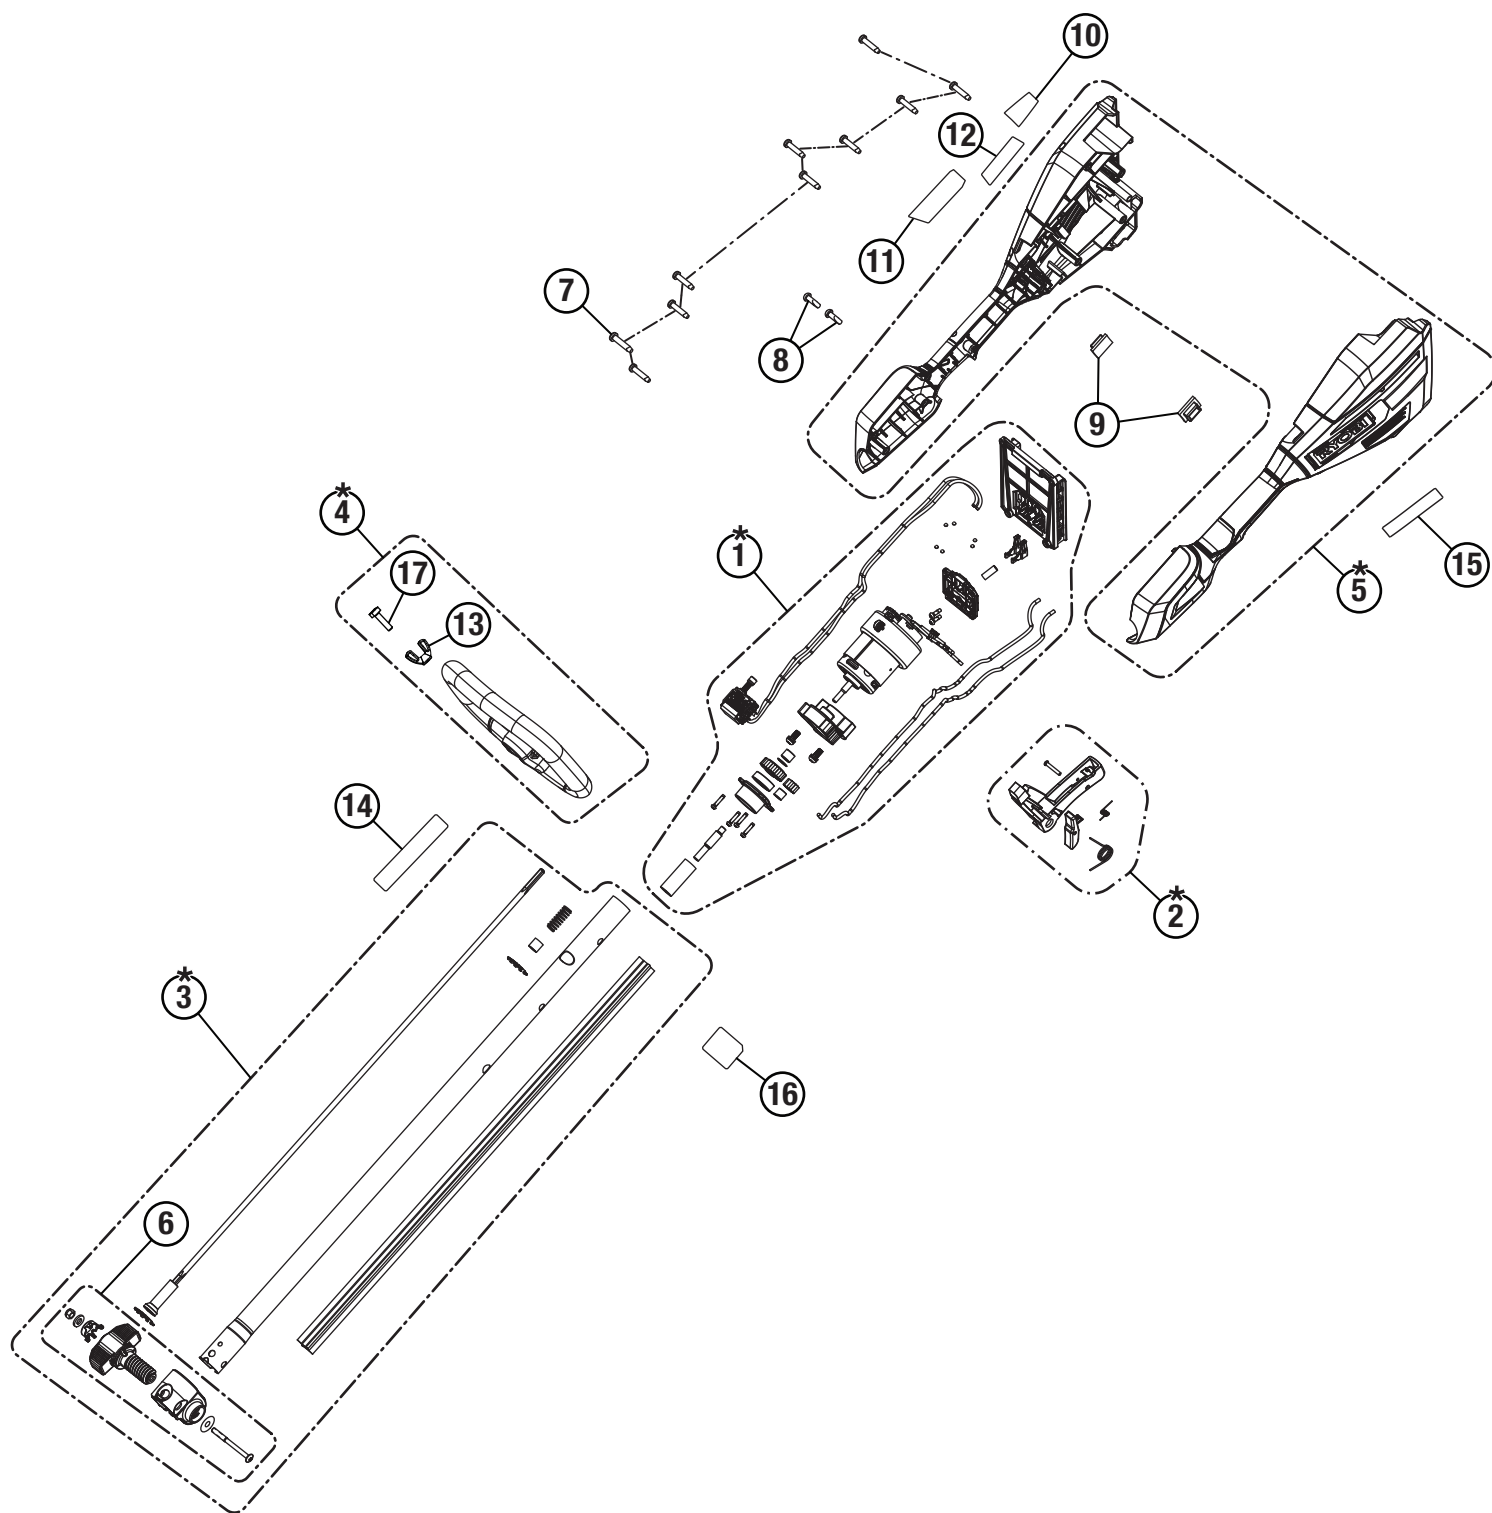

* Part comes as a complete assembly. Individual components of an assembly will not be offered separately, unless listed in the parts list.




RY40PH01

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	QTY.
*1	205435010	Motor, Gear Box, Switch & Contact Plate Assembly	1
*2	314833001	Switch Trigger Assembly	1
*3	205032008	Boom Assembly (Inc. Key No. 6, 14 & 16)	1
*4	308991003	Front Handle Assembly (Inc. Key Nos. 13 & 17)	1
*5	205004007	Rear Handle Assembly (Inc. Key Nos. 9-12 & 15)	1
6	315386001	Boom Clamp Assembly	1
7	661864007	Screw (M4 x 18 mm, T15 Torx. Pan Hd.)	10
8	660005006	Screw (M3 x 10 mm)	2
9	570115001	Rubber Plate	2
10	941263373	Data Label	1

KEY NO.	PART NO.	DESCRIPTION	QTY.
11	941263370	Warning/Icon Label	1
12	941263369	Battery Statement Label	1
13	518949001	Wing Nut (1/4-20)	1
14	941263388	Attachment Capable Label	1
15	940705496	Ryobi Logo Label	1
16	940779563	Harness Label	1
17	660643008	Screw	1
	Not Shown:		
	999000282	Operator's Manual	

* Part comes as a complete assembly. Individual components of an assembly will not be offered separately, unless listed in the parts list.

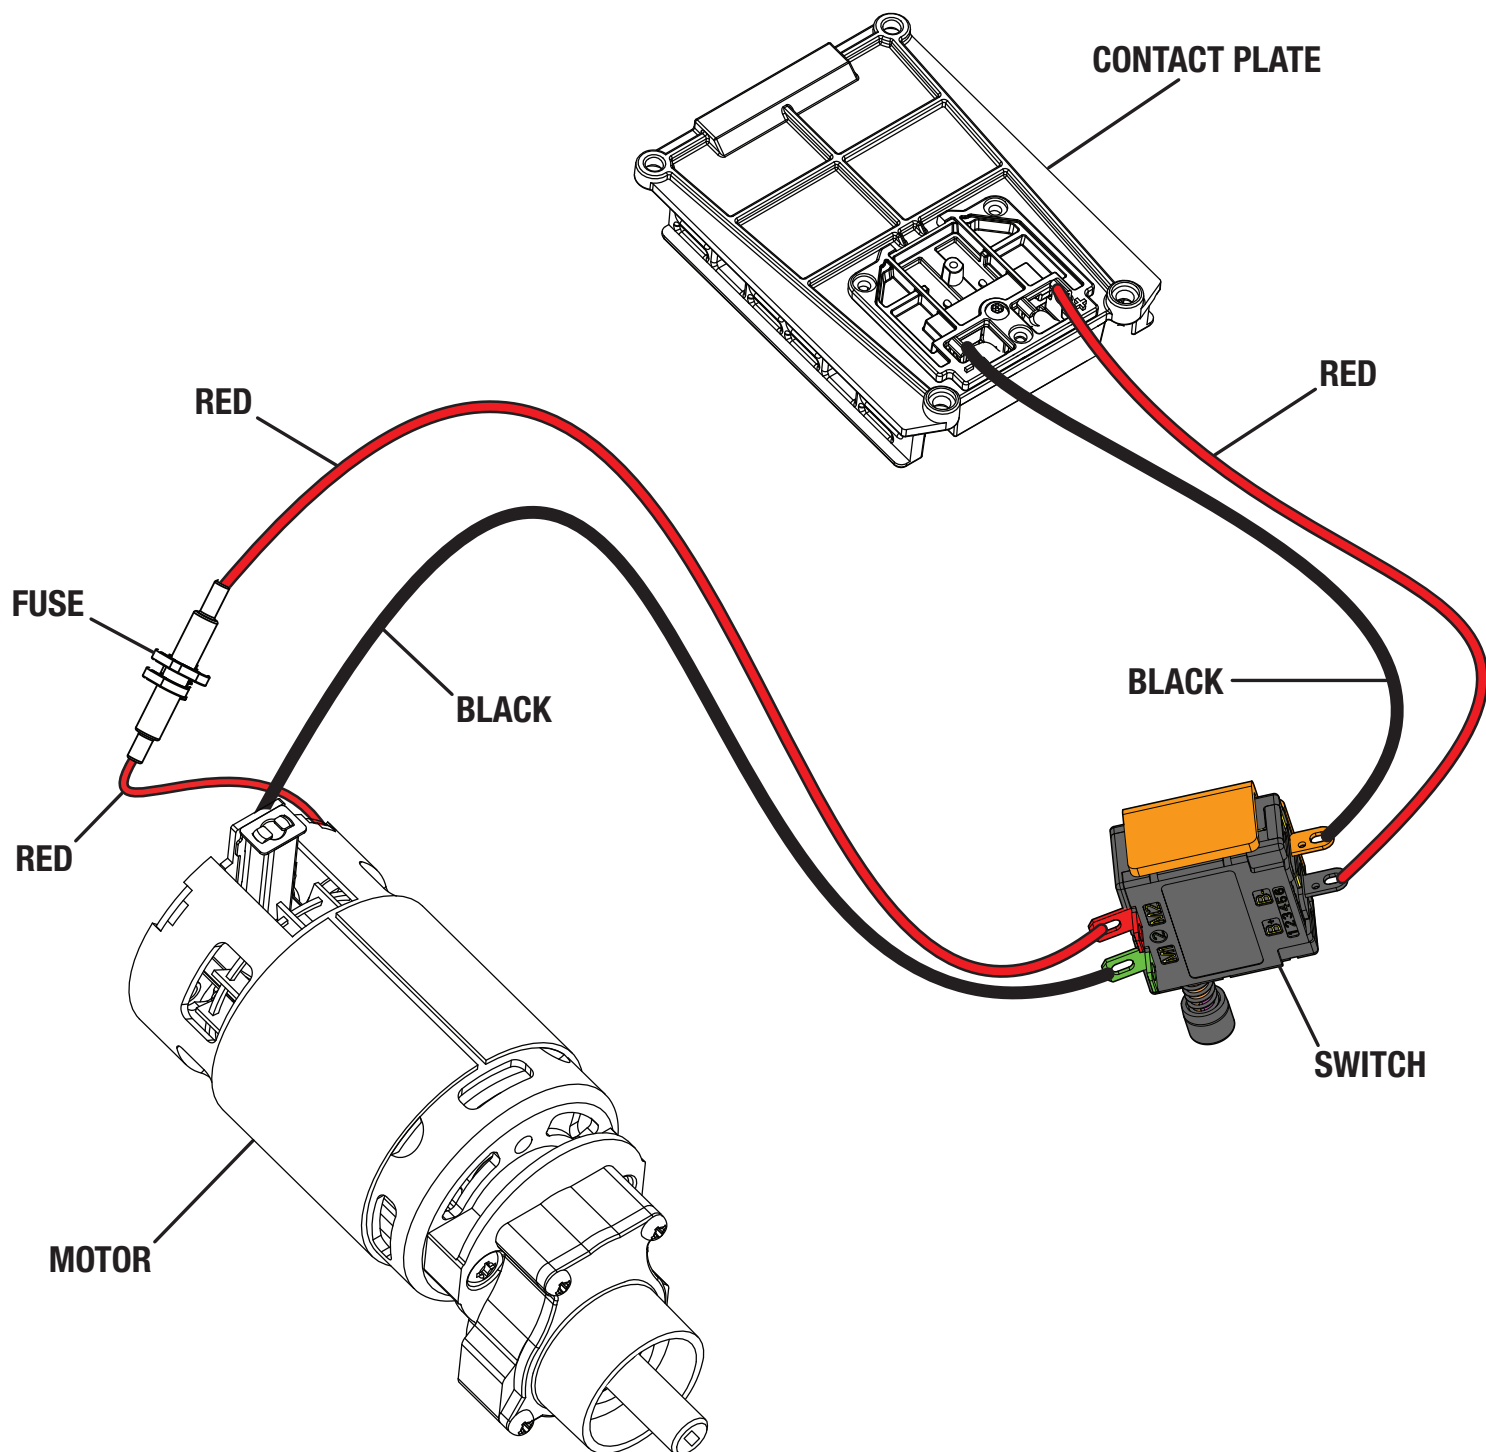**WIRING DIAGRAM**