

## Cycle Guide

The cycle guide below shows the options and recommended fabric types for each cycle.

● = Available option

CYCLE	FABRIC TYPE	BASIS OPTION (★=DEFAULT)			ADDITIONAL OPTIONS				
		Wash Temp.	Spin Speed	Soil Level	Pre Wash	Extra Rinse	Steam	Cold Wash™	Turbo Wash™
Tub Clean	This cycle is designed to remove a mildewy or musty smell.						●		
Allergiene™	Cotton, underwear, pillow covers, bed sheets, baby wear		Extra High High★ Medium Low No Spin			●	●		●
Sanitary	Heavily soiled underwear, work clothes, diapers, etc.	Extra Hot★	Extra High High★ Medium Low No Spin	Heavy ▼ Normal★ ▼ Light	●	●	●		●
Bright Whites™	White Fabrics	Hot★ Warm Cold Tap Cold	Extra High High★ Medium Low No Spin	Heavy ▼ Normal★ ▼ Light	●	●	●		●
Bulky/Large	Large items such as blankets and comforters	Hot Warm★ Cold Tap Cold	Medium★ Low No Spin	Heavy ▼ Normal★ ▼ Light	●	●	●	●	●
Cotton/ Normal	Cotton, linen, towels, shirts, sheets, jeans, mixed loads	Extra Hot Hot Warm★ Cold Tap Cold	Extra High High★ Medium Low	Heavy ▼ Normal★ ▼ Light	●	●	●	●	●
Heavy Duty	Heavily soiled Cotton Fabrics	Hot Warm★ Cold Tap Cold	Extra High★ High Medium Low	Heavy★ ▼ Normal ▼ Light	●	●	●	●	●
Perm.Press	Dress shirts/pants, wrinkle-free clothing, poly/cotton blend clothing, tablecloths	Hot Warm★ Cold Tap Cold	High Medium★ Low	Heavy ▼ Normal★ ▼ Light	●	●		●	●
Hand Wash/ Wool	Items labeled "hand-washable"	Warm★ Cold Tap Cold	Low★ No Spin	Normal★ ▼ Light				●	
Delicates	Dress shirts/blouses, nylons, sheer or lacy garments	Warm Cold★ Tap Cold	Medium★ Low No Spin	Heavy ▼ Normal★ ▼ Light	●	●		●	
Towels	Towels	Hot Warm★ Cold Tap Cold	Extra High★ High Medium Low No Spin	Heavy ▼ Normal★ ▼ Light	●	●		●	●
Speed Wash	Lightly soiled clothing and small loads	Hot★ Warm Cold Tap Cold	Extra High★ High Medium Low No Spin	Heavy ▼ Normal ▼ Light★		●		●	●
Drain+Spin	Drain, Spin Only		Extra High High★ Medium Low No Spin						

- Cycle time depends on type and amount of load and detergent, water pressure and chosen additional options.

- If the Turbo Wash™ option is on, you cannot select "No Spin" as your Spin Speed.

(If the Turbo Wash™ option is off, you can select "No Spin" as your Spin Speed.)

- Do not load more than 22 lb. (10 kg) in the washer. (1 thick, dry bath towel = 1 lb.)

Do not use the Sanitary cycle with more than 10 lb. (4.5 kg) of laundry.

Do not use the Hand Wash/Wool cycle with more than 8 lb. (3.6 kg) of laundry.

- Do not overload the Bulky/Large cycle. If the washer does not function properly, manually redistribute the load or wash one item at a time.