 




ASSEMBLY INSTRUCTIONS

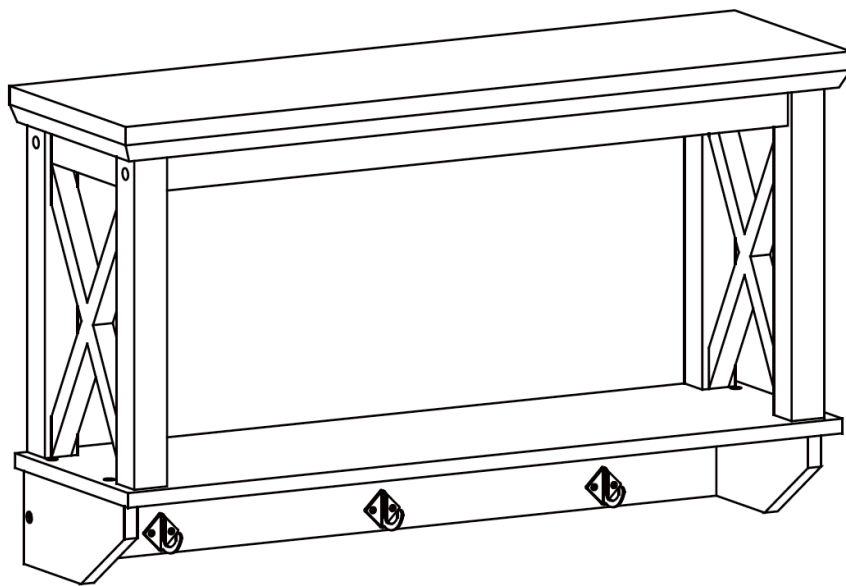

RiverRidge® X-Frame Wall Shelf with Hooks

ITEM #: 06-005 White
ITEM #: 06-006 Espresso

ADULT ASSEMBLY REQUIRED

This product requires assembly by an adult because of small parts. Care should be taken in unpacking and assembling this item to keep small parts away from children. During assembly children should be kept away from the product due to possible risk of injury.

WARNING SEE FULL WARNING ON PAGE 2

Young children can be seriously injured or killed if furniture tips over. Don't use this item for a TV stand or place heavy objects on top of item. Always use angle-braces or anchors to secure furniture to the wall.

THIS SHELF UNIT WILL HOLD UP TO 25 POUNDS PER SHELF OR A TOTAL OF 50 POUNDS. DO NOT LOAD EACH SHELF WITH MORE THAN 25 POUNDS OR A TOTAL OF 50 POUNDS TOTAL WEIGHT. IF OVERLOADED WITH MORE THAN 25 POUNDS PER SHELF OR 50 POUNDS TOTAL WEIGHT, THE SHELF MAY FALL FROM THE WALL AND CAUSE SERIOUS INJURY OR DEATH.

 


WARNING

**SERIOUS OR FATAL INJURIES CAN
OCCUR FROM FURNITURE TIP-OVER.
TO HELP PREVENT TIP-OVER:**





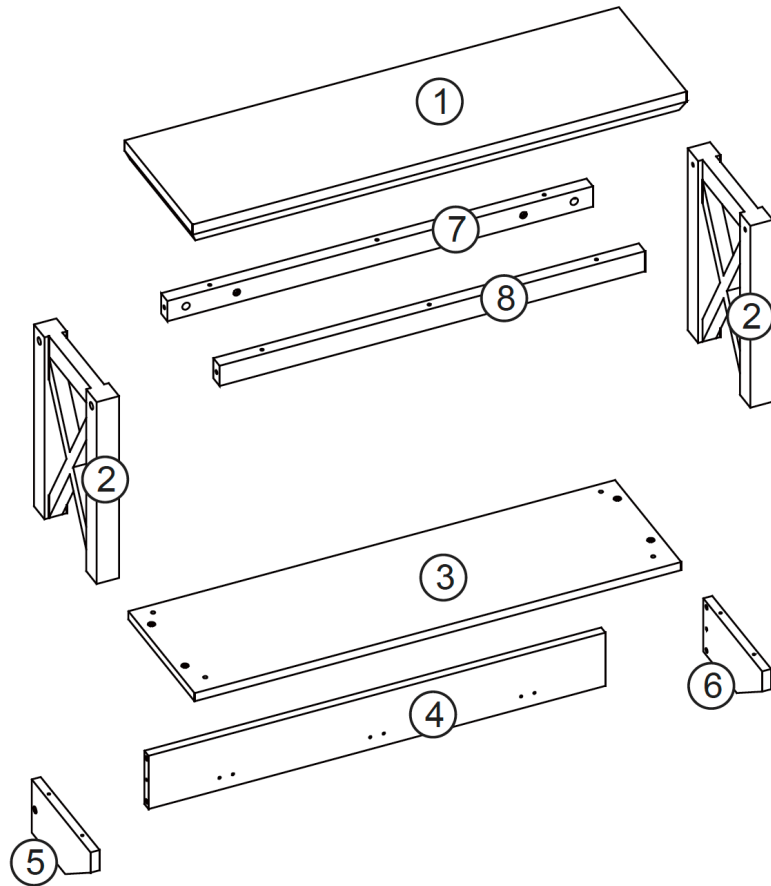





- **Always use tip over restraints and/or wall anchors to secure furniture to the wall**
- **Place heaviest items in the lowest drawers/bins or shelves**
- **Do not set TV's or other heavy objects on the top of this product**
- **Never allow children to climb or hang on to the drawers/bins, doors or shelves of furniture**
- **Never open more than one drawer at a time or defeat or remove any drawer interlock system**

PARTS LIST



NO	QTY	DESCRIPTION
1	1PC	Top Board
2	2PCS	Side Frame
3	1PC	Bottom Board
4	1PC	Back Board
5	1PC	Left Side Panel
6	1PC	Right Side Panel
7	1PC	Back Cross Bar
8	1PC	Front Cross Bar

 
PARTS LIST

NO	PARTS	QTY	DESCRIPTION
A		4PCS	Wood Dowel
B		8PCS	Screw (5x45mm)
C		12PCS	Screw (4x35mm)
D		6PCS	Screw (3x12mm)
E		3PCS	Hook
F		4PCS	Plastic Cap
G		2PCS	Screw (4x60mm)
H		2PCS	Plastic Anchor
I		1PC	Allen Wrench
		1PC	Wall Mounting Paper Template

TOOLS NEEDED FOR ASSEMBLY: FLAT & PHILLIPS SCREWDRIVER (NOT INCLUDED)
THE USE OF A POWER SCREWDRIVER IS NOT RECOMMENDED FOR ASSEMBLY
DO NOT USE ITEM IF ANY PARTS ARE MISSING OR DAMAGED


To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States.
 If purchased outside of the United States, please contact retailer where purchased.

 STEP 1

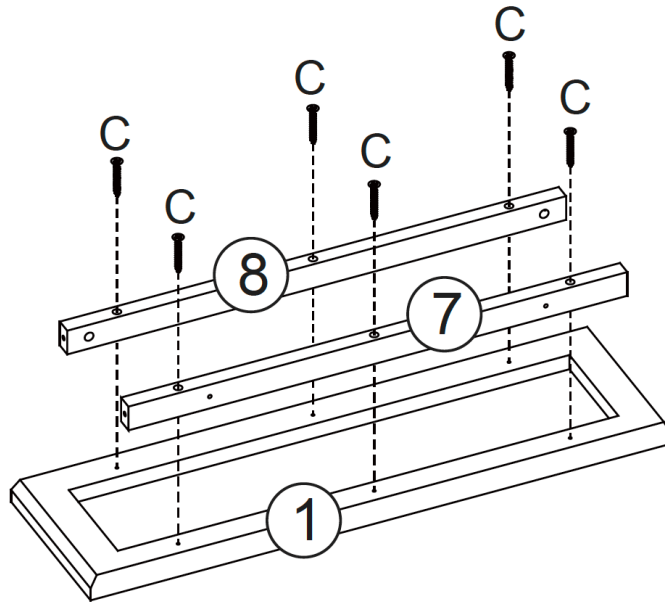


1. Place top board (1) upside down on soft padded surface.
2. Attach back cross bar (7) to top board (1) by inserting 3 screws (C) through holes on back cross bar (7) and tighten to top board (1).
3. Repeat above step to attach front cross bar (8) to top board (1).

 STEP 2

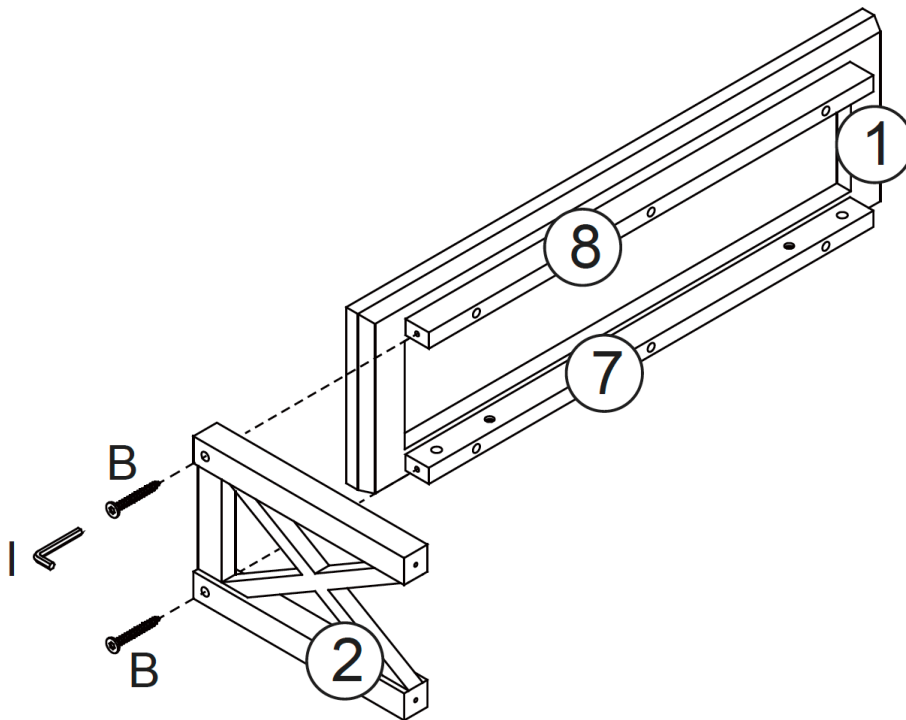


1. Attach 1 side frame (2) to top board (1) by inserting 2 screws (B) through holes on side frame (2), then tighten to back cross bar (7) and front cross bar (8) using Allen wrench (I). When tightening, slightly push screw in to catch inner thread.

 STEP 3

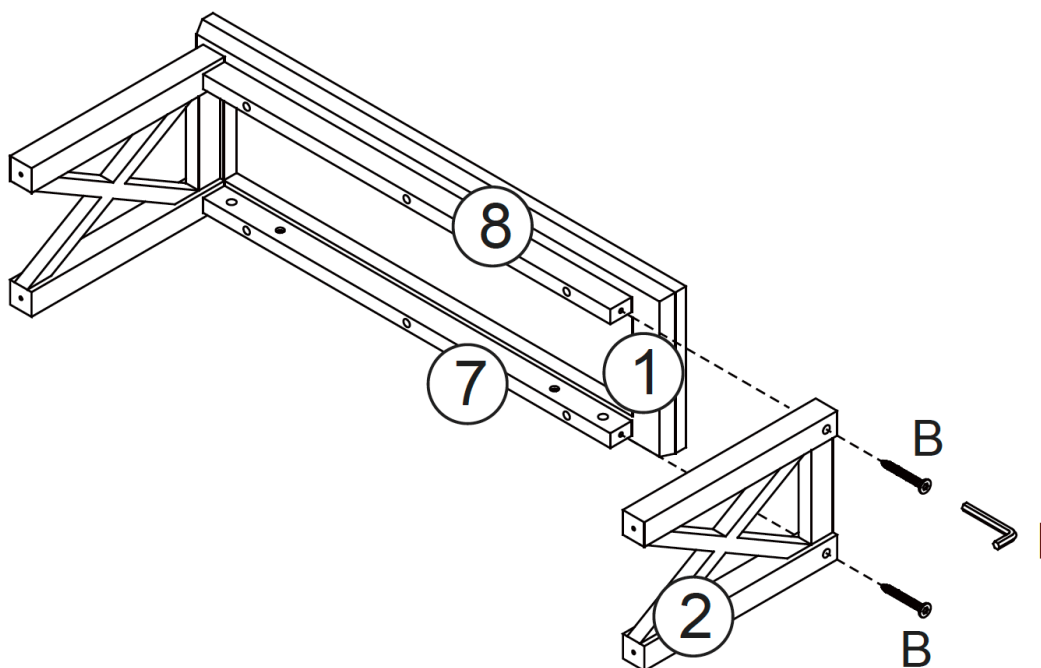


1. Attach other side frame (2) to top board (1) by inserting 2 screws (B) through holes on side frame (2), then tighten to back cross bar (7) and front cross bar (8) using Allen wrench (I).

 STEP 4

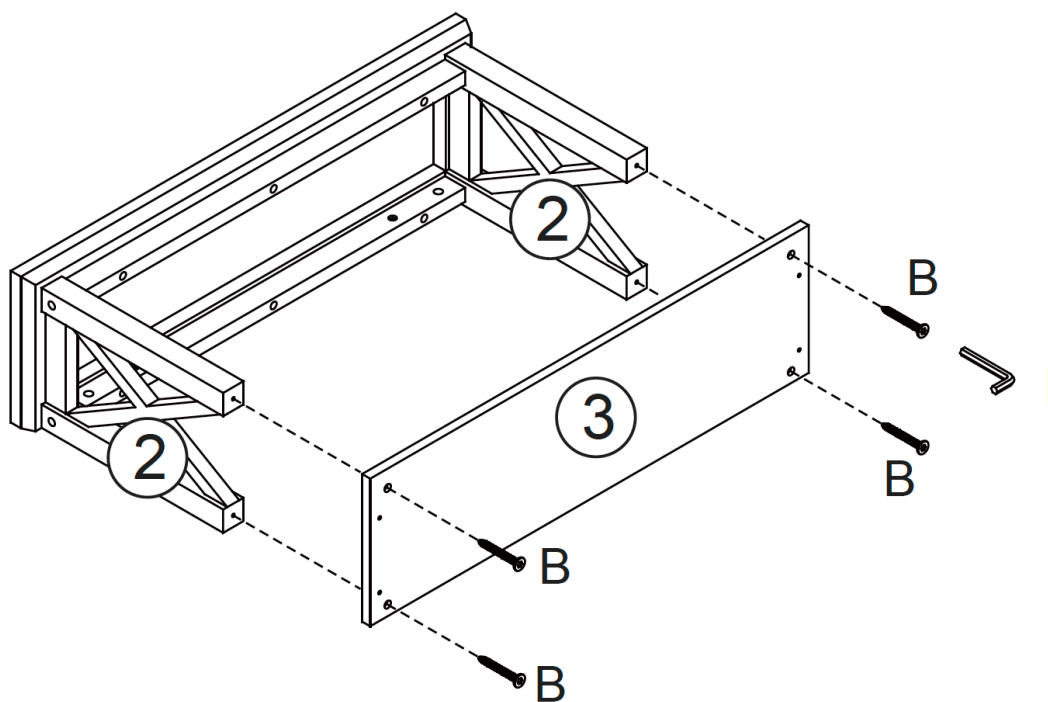


1. Attach bottom board (3) to bottom of side frames (2) by inserting 4 screws (B) through holes on bottom board (3), then tighten to side frames (2) using Allen wrench (I).

 STEP 5

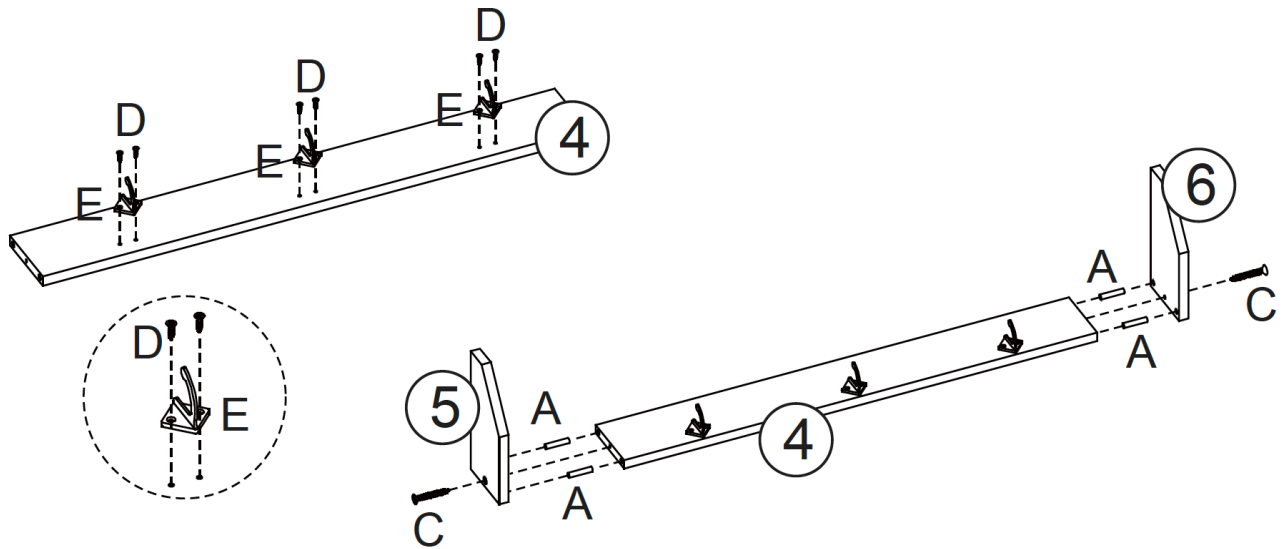


1. Attach 3 hooks (E) to back board (4) by inserting 6 screws (D) through holes on hooks (E), then tighten to back board (4).
2. Insert 2 wood dowels (A) into dowel holes on left side panel (5) and attach left side panel (5) to back board (4) by inserting wood dowels (A) into dowel holes on back board (4).
3. Insert 1 screw (C) through hole on left side panel (5) and tighten to back board (4).
4. Repeat above steps 2 and 3 to assemble right side panel (6).

 STEP 6

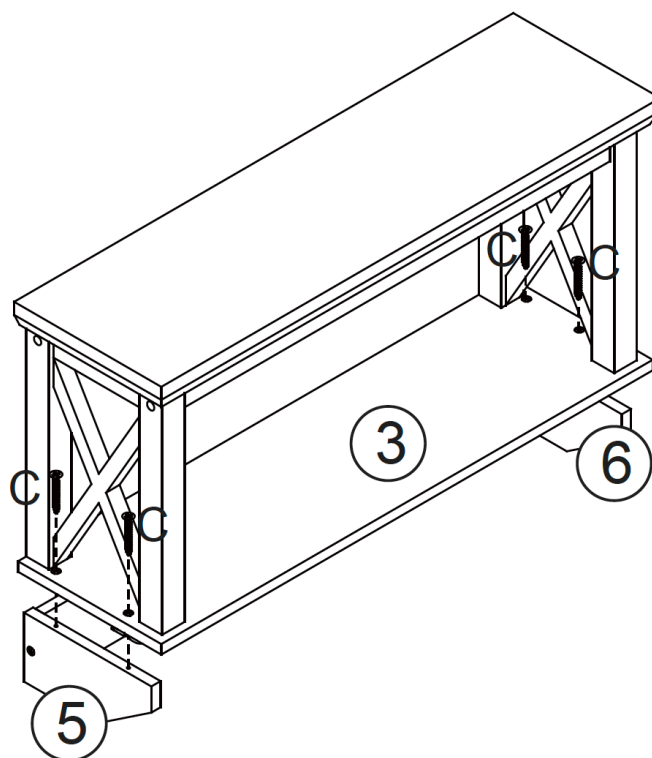

1. Attach assembled back board (4) to bottom board (3) by inserting 2 screws (C) through holes on bottom board (3) and tighten to left side panel (5), then insert 2 screws (C) through holes on bottom board (3) and tighten to right side panel (6).

 
STEP 7

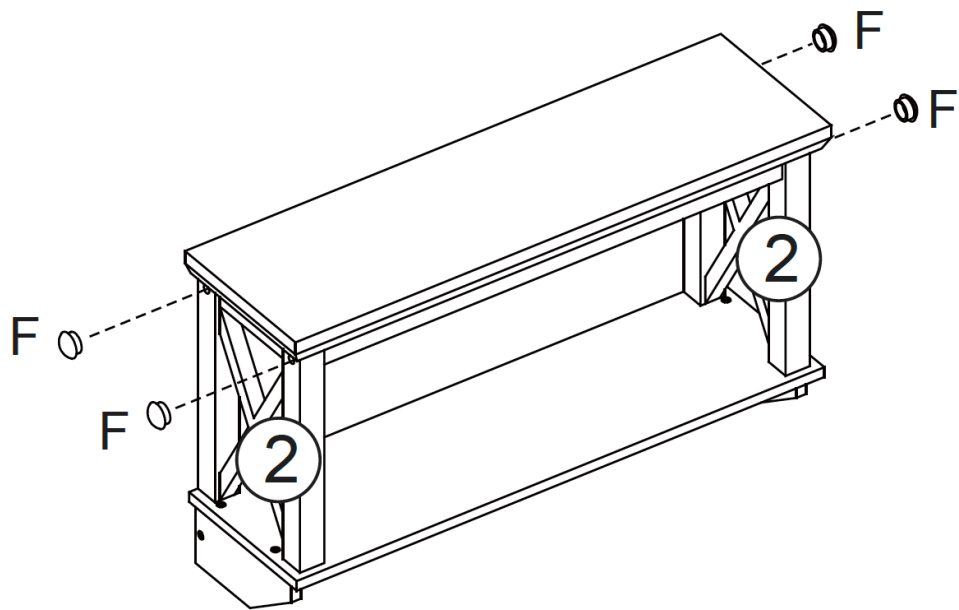

1. Press 4 plastic caps (F) into screw holes on both side frames (2).

*Tip: If added pressure is needed to keep plastic caps in place – cover caps with a piece of paper and tap lightly with hammer to secure cap.

 STEP 8

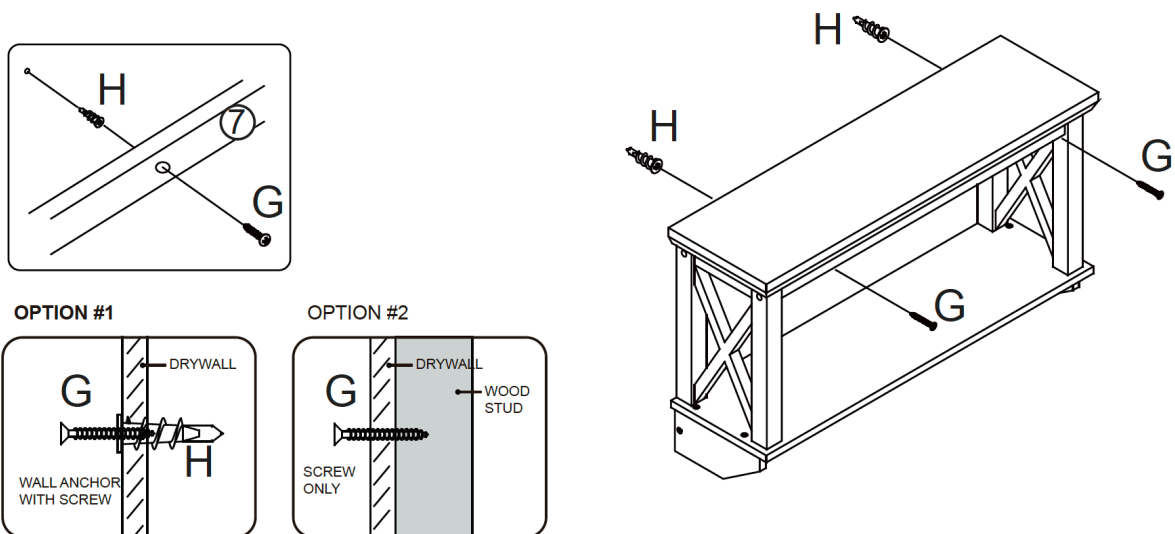

Option #1: Securing to Drywall

1. Using wall mounting paper template to determine position, screw 2 plastic anchors (H) into drywall.
2. Insert 2 screws (G) through holes on back cross bar (7) and into plastic anchors (H) and tighten.

Option #2: Securing to Drywall and Wood Stud

1. Insert 2 screws (G) through holes on back cross bar (7), then tighten through drywall and into wood stud.

ATTENTION ADULTS: Cabinet should be checked periodically for damage or loose screws/parts. Take appropriate action necessary to correct hazards such as tightening of screws and taking any damaged parts away from children.

WARNING  Please make sure your item is secured to the wall, per assembly instructions.

 
CARE INSTRUCTIONS:

Wipe clean with a water dampened cloth. Wipe dry with clean cloth.

IMPORTANT:

Keep assembly instructions for future reference.

Enjoy your new RiverRidge® Wall Shelf!

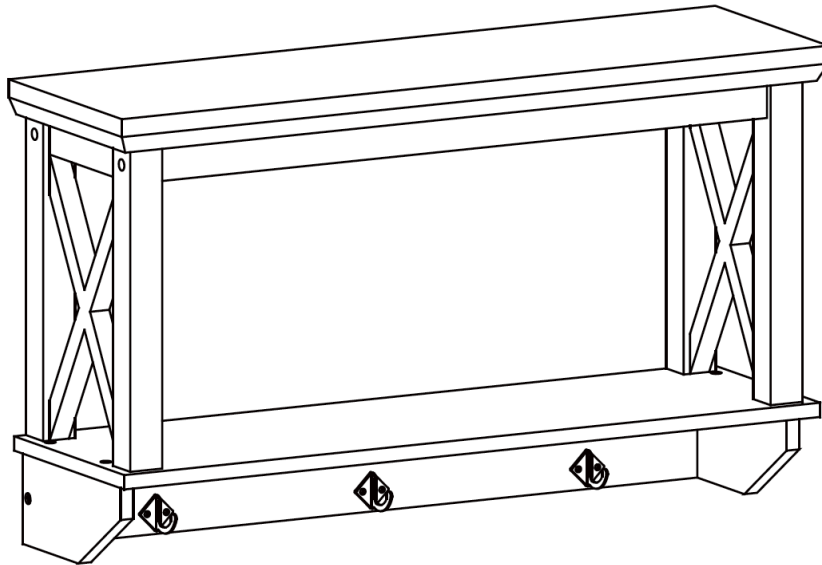

Thank you for purchasing this RiverRidge® Home item. We hope you enjoy it and consider purchasing other RiverRidge® items.

To order replacement parts at no cost to you, email customer.service@ssi-rr.com, call 1-(844)-223-5201 or order parts online at www.riverridgehome.com. Only valid in the United States. If purchased outside of the United States, please contact retailer where purchased.



RiverRidge® is a registered trademark of Sourcing Solutions, Inc., Hudson, WI 54016