

CYCLE GUIDE

The cycle guide below shows the default settings, available options and recommended fabric types for each cycle. Allowable modifier adjustments are shown below the default setting for each cycle.

| Key | | | | | |
|------------------|--|-----------|------------|-------------|------------|
| Default | | | | | |
| Available option | | | | | |
| Cycle | Cycle Use | Est. Time | Wash Temp. | Extra Rinse | Child Lock |
| Normal | Lightly soiled cotton, t-shirts, towels, jeans, mixed loads. | 39 ~ 116 | Warm | ● | ● |
| | | | Cold | | |
| Intimates | Lingerie, underwear, pajamas, delicates, etc. | 47 ~ 103 | Warm | ● | ● |
| | | | Cold | | |
| Hand Wash | Sweaters, knits, items labeled hand-washable, etc. | 47 ~ 103 | Warm | ● | ● |
| | | | Cold | | |
| Active Wear | Specially designed/treated performance clothing. | 43 ~ 103 | Warm | ● | ● |
| | | | Cold | | |
| Rinse + Spin | Pre-treats stains, or rinses off soap and drains tub | 8 ~ 90 | | ● | ● |
| | | | | | |
| Tub Clean | Cleans tub and removes mildewy odor. | 58 | Warm | | ● |
| | | | Cold | | |

WASH CYCLES

Wash cycles are designed for the best wash performance for each type of load. Select the cycle that best matches the load contents for maximum wash performance and fabric care. Press the cycle selector button to select the desired cycle. When you select a wash cycle, the light for the corresponding wash cycle will turn on. See page 19, **OPERATING THE WASHER**, for more details on operating methods.

Normal

Use this cycle to wash lightly soiled normal items, except delicate fabrics such as wool or silk.

NOTE: Pressing the START/PAUSE button without selecting a cycle will cause the NORMAL cycle to begin immediately using the default settings.

Intimates

Use this cycle to wash delicate items such as lingerie or sheer and lacy clothes which could easily be damaged in a normal cycle. This cycle is not for silk items.

Hand Wash

Use this cycle to wash shrinkable woolen or hand-washable items requiring delicate care. Only wash woolen items that are labeled machine wash or hand wash.

Active Wear

Use this cycle to wash performance garments that are specially designed and treated for sports.

Rinse + Spin

Select this option to rinse and spin a load separately from a regular cycle. This can be helpful in preventing fresh stains from setting in fabrics.

Spin Only Cycle

To activate a spin only cycle, select the Rinse+Spin cycle. Then press the Extra Rinse button six times or until the display shows 8 and the Rinse icon is no longer illuminated on the panel.

Tub Clean

Use this cycle to clean the tub of the washing machine.