

LA CROSSE®
TECHNOLOGY

WIRELESS TEMPERATURE STATION



SET UP GUIDE

 
MODEL: 308-1415v4

Power Up


1. Insert 2-AA batteries into your Outdoor Sensor.
2. Insert the 5 volt power cord into the outlet, then into your Temperature Station. Optional: Insert 2-AA batteries for backup.
3. Once the Outdoor Sensor is reading to your station, place it outside in a shaded location to protect from the sun's heat.

Watch the sensor mounting video: bit.ly/th_sensor_mounting

Outdoor Sensor
TX141-Bv4

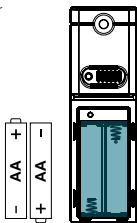

Temperature Station
308-1415v4

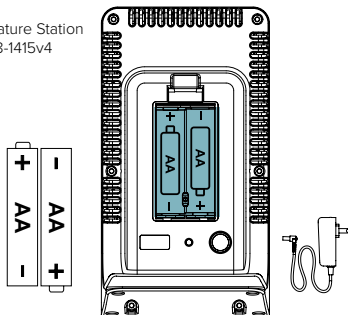 

Custom Date Display

Press the **MODE** button to select between full Weekday or Calendar (Weekday, Month, Date) display.



Settings Menu

1. Hold the **MODE** button to enter the Settings Menu.
2. Use the **+ / -** button to adjust, and **MODE** to confirm.

Settings Menu order:

- Language (English, Spanish, French)
- Beep ON/OFF
- 12/24 Hour Time
- Hour
- Minutes
- Year
- Month
- Date
- Fahrenheit/Celsius

Language: When Español or Français is selected, the following instructions and weekday will be presented in that language.

Weekday: Weekday sets automatically when Year, Month and Date are set.

Adjustable Backlight

- When operating with the power cord, the backlight is constant and adjustable.
- Press the LIGHT button to change the backlight brightness (HI/LO/OFF)
- When operating on batteries alone, press the LIGHT button to activate the backlight for 10 seconds.

Button Functions

The buttons are located on the front of your station.

MODE - + LIGHT


MODE	Press to view full Weekday or Calendar display. Hold to enter the Settings Menu.
+ (PLUS)	Press to view HI/LO Records. When viewing HI/LO Records: Hold to delete a record. Settings Menu: Press to increase value. Hold to increase quickly.
- (MINUS)	Settings Menu: Press to decrease value. Hold to decrease quickly. Search for Sensor: Hold to search for outdoor sensor.
LIGHT	Press to adjust backlight HI-LO-OFF.

HI/LO Temperature Records

The indoor and outdoor HI/LO temperature records will reset daily at midnight. This provides a daily 24 hour HI/LO reading.

View: Press the **+** button to view HI and LO Records since midnight.

 Reset: While viewing individual records, hold the **+** button to reset to current temperatures.

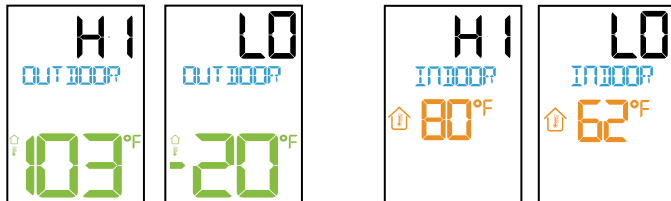

Temperature Trend Arrows

Both the Indoor and Outdoor temperature have Trend Arrows to indicate temperature changes (2°F / 1°C) over the past three hour period.



Temperature has risen over the past 3 hours.




Temperature has been steady over the past 3 hours.





Temperature has fallen over the past 3 hours.

Search for Outdoor Temperature

If you are seeing dashes for your outdoor readings, please try the following steps:

1. Hold the **(-) MINUS** button to search for your outdoor sensor. The Reception Indicator  will begin to animate.
2. If after 3 minutes the sensor still isn't connected, bring the sensor inside next to the display and remove power from both the sensor and station.
3. Press any button on the station 20 times and leave the parts sit for a few moments with the power off.
4. Install a new set of alkaline batteries into the sensor, then into your station. For additional help visit: bit.ly/basic_restart
5. If your outdoor data is still not appearing after these steps, please contact our support staff via the links on page **7**.

Low Battery Indicator

- Low Battery Indicator  by Indoor Temperature, replace batteries in the Station.
- Low Battery Indicator  by the Outdoor Temperature replace batteries in the Outdoor Sensor.

Sensor Shield (not included)

- The Sensor Weather Shield is designed to protect your outdoor sensor from rain and snow.
- This shield will offer limited protection from the sun's heat.
- Optional purchase at: bit.ly/925-1418



We're Here to Help

If you require additional assistance, get in touch with our friendly customer support team based in La Crosse, WI.

Self Help: bit.ly/308-1415v4_support

Online: bit.ly/contact_techsupport

Phone: 1.608.782.1610

Our knowledgeable customer support team is available: Mon-Fri 8am-6pm CST

SCAN HERE
Additional Info
and Support ✓



Stay in Touch!

Ask questions, watch setup videos, and provide feedback on our social media outlets. Follow La Crosse Technology on YouTube, Twitter, Facebook and Instagram.



Specifications

308-1415v4

Temperature Range: 32°F to 122°F
(0°C to 50°C)

Power: 5-volt power adapter included

AC6#: GPU280500150WA00

Optional: 2-AA batteries sold separately

The plug on the power adapter is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Battery Life: Over 24 months


TX141-Bv4

Outdoor Temperature Range: -40°F to 140°F
(-40°C to 60°C)

Transmission Range: 330 ft (100m) open air,
RF 433MHz

Power: 2-AA batteries sold separately

 Battery Life: Over 24 months

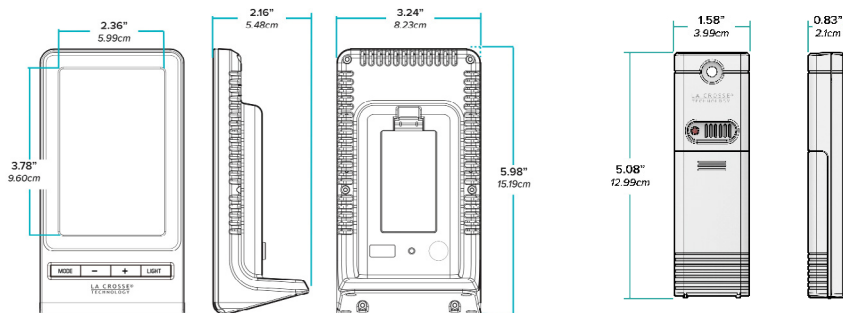

Warranty & Patents

La Crosse Technology, Ltd. provides a **1-year limited time warranty** (from date of purchase) on this product relating to manufacturing defects in materials & workmanship. La Crosse Technology, Ltd, 2830 S. 26th St., La Crosse, WI 54601
For Full Warranty Details, Visit: www.lacrossetechnology.com/pages/warranty
Patents: www.lacrossetechnology.com/pages/patents



CA WARNING:

This product can expose you to chemicals including acrylonitrile, butadiene, and styrene, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to: www.P65Warnings.gov

Care & Maintenance

When batteries of different brand or type are used together, or new and old batteries are used together, some batteries may be over-discharged due to a difference of voltage or capacity. This can result in venting, leakage, and rupture and may cause personal injury.

- Do not mix Alkaline, Lithium, standard, or rechargeable batteries.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Always replace the whole set of batteries at one time, taking care not to mix old and new ones, or batteries of different types.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove batteries from product during periods of non-use. Battery leakage can cause corrosion and damage to this item.
- Remove used batteries promptly.
- For recycling and disposal of batteries, and to protect the environment, please check the internet or your local phone directory for local recycling centers and/or follow local government regulations.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Caution!

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. **All rights reserved.** This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized. The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment.

DOUBLE YOUR WARRANTY



Scan Here

Scan the QR Code or visit:

bit.ly/308-1415v4_register

to register your product and double the
standard 1-year warranty fo free by opting
to recieve occasional product emails.