 


ASSEMBLY INSTRUCTIONS

65in. Fireplace Console

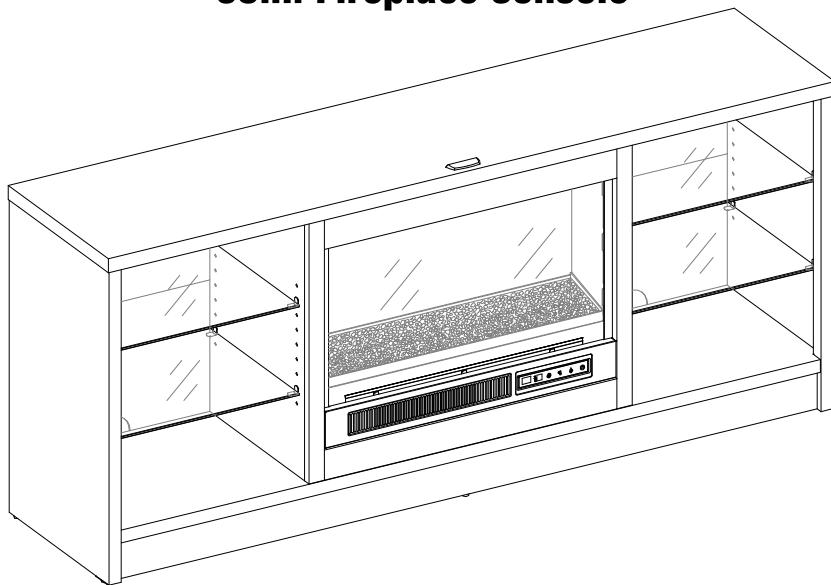

ADULT ASSEMBLY REQUIRED

If you have any questions regarding the use of this unit or find that your fireplace/heater unit needs service, please do not return the unit to the store where you purchased it. Instead, please call our customer service number and have your instructions and parts list ready to provide the model name, part name, or factory number:

1-866-942-5362

Or visit our website for product assistance at www.whalenfurniture.com

Or e-mail your request to: parts@whalenfurniture.com

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Scan for easy 3D instructions

 
Tap. Zoom. Rotate with official interactive instructions on the BILT app.



BILT®

Download on the
App Store

GET IT ON
Google Play

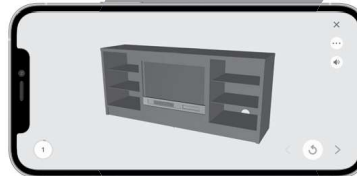

THANK YOU

We appreciate the trust and confidence you have placed in Whalen Furniture through the purchase of this electric fireplace/heater. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Whalen Furniture!

Table of Contents

Table of Contents	2
Safety Information	2
Maximum Recommended Weight Loads	2
Warranty.....	2
Pre-Assembly	2
Planning Assembly.....	2
Tools required.....	2

Hardware Included.....	3
Package Contents	4
Assembly.....	5
Care and Maintenance	25
Caring for Wood Furniture.....	25
Cleaning the Fireplace Trim	25

Safety Information

Please read and understand these instructions before assembling and using this console. Save these instructions for future reference.


MAXIMUM RECOMMENDED WEIGHT LOADS



WARNING: This unit is not intended for use with CRT TVs. Use only with flat panel TVs and audio/video equipment meeting recommended size and weight limits. Never use with larger/heavier than recommended flat panel TVs or equipment. To avoid instability, place flat panel TV in the centre of the unit; the base of the television must be able to rest on the supporting surface of the unit without over-hanging the edges. Improperly positioned flat panel TVs, or flat panel TVs or other equipment that exceed recommended size and weight limits could fall off or break the unit, causing possible serious injury.

Fits up to most 190.5 cm / 75 in. diagonal flat-panel TVs
Maximum load 45.4 kg / 100 lb

Place TV behind the stopper

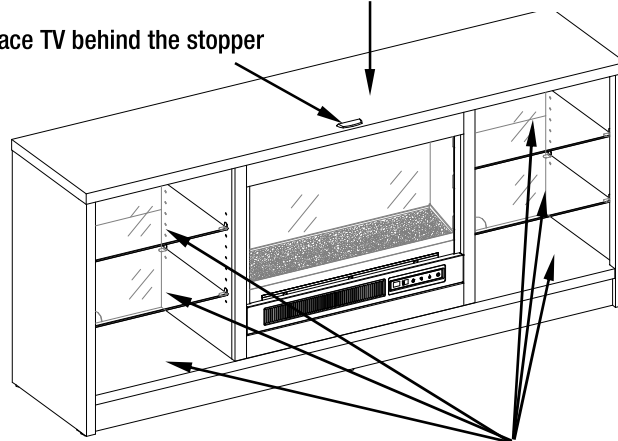

Maximum load 22.7 kg / 50 lb

Warranty

We are confident that you will be delighted with this purchase. Should this product be defective in workmanship or materials, or fail under normal use, we will repair or replace it for a period of up to one (1) year from date of purchase.

This warranty gives you specific rights and you may also have other rights which vary from state to state.

Contact the Customer Service Team at 1-866-942-5362 or visit www.whalenfurniture.com.

Pre-Assembly

PLANNING ASSEMBLY

Compare all parts with the Hardware Included and Package Contents list. If any part appears missing or damaged, do not assemble this product and contact the Customer Service Team at 1-866-942-5362.

TOOLS REQUIRED




Phillips
screwdriver
(not provided)

Pre-Assembly (continued)

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.

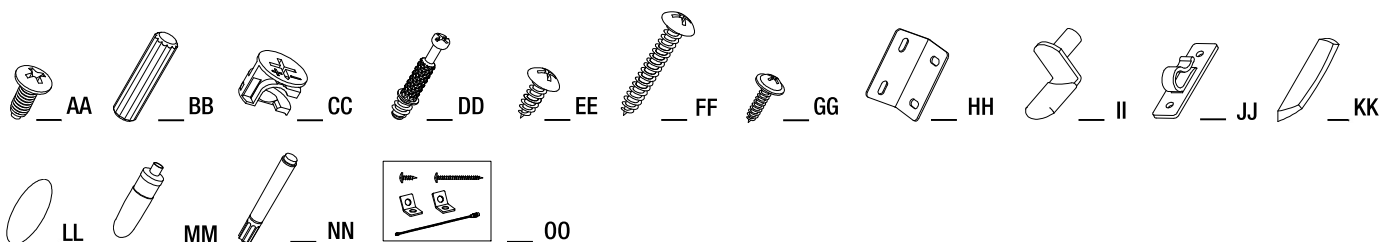


Part	Description	Quantity
AA	Insert screw	16+1 extra
BB	Wood dowel	41+2 extra
CC	Cam lock	37+1 extra
DD	Cam bolt	37+1 extra
EE	Short pan head screw	16+1 extra
FF	Long pan head screw	10+1 extra
GG	Washer head screw	32+1 extra
HH	L-shaped bracket	2

Part	Description	Quantity
II	Shelf Support	16+1 extra
JJ	Cord Clip	4
KK	Acrylic stopper	1
LL	Paper sticker	4+1 extra
MM	Glue	2
NN	Touchup pen	1
OO	Tipping restraint hardware	2

Pre-Assembly (continued)

PACKAGE CONTENTS

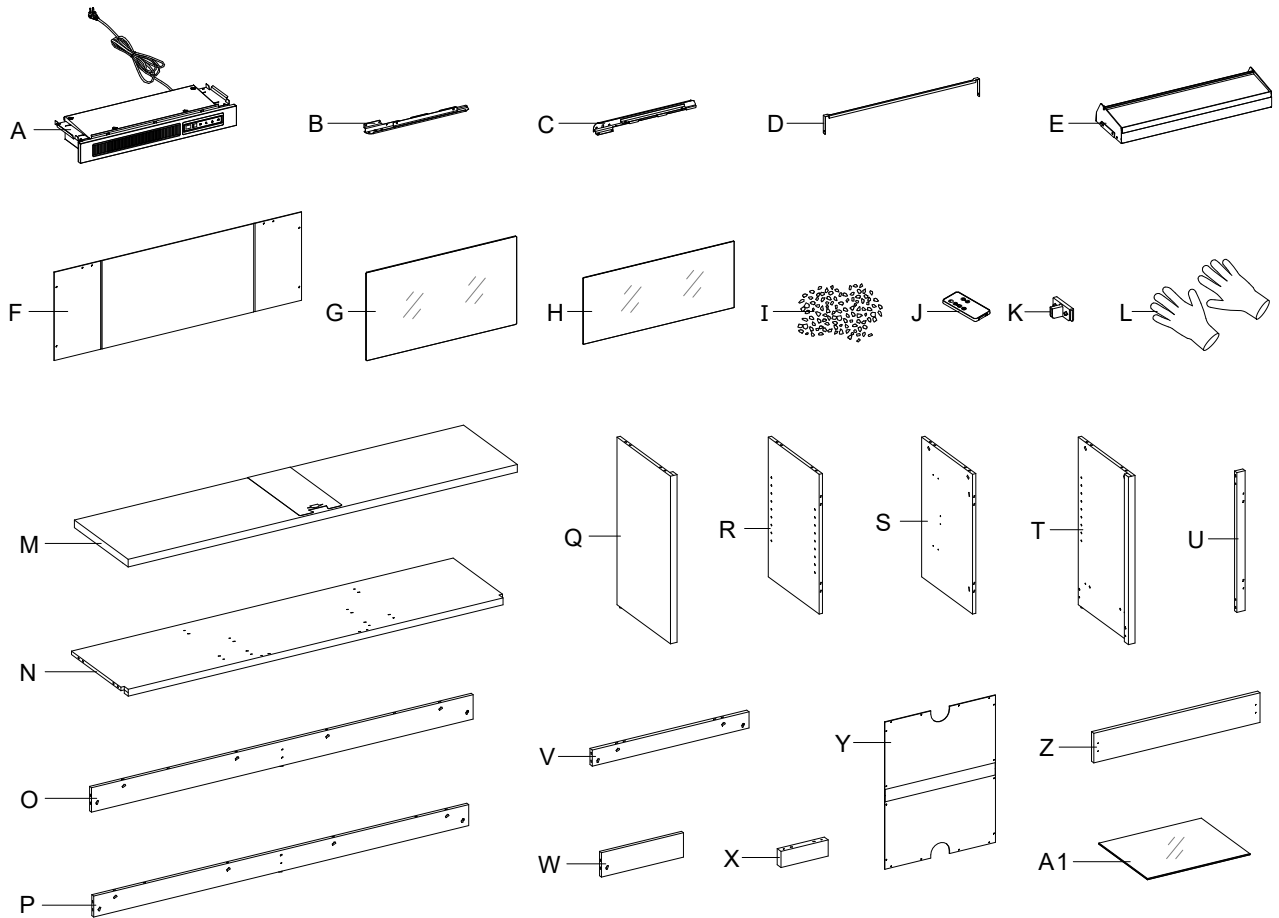

Part	Description	Quantity
A	Heater	1
B	Left upright arm	1
C	Right upright arm	1
D	Connector strap	1
E	Fuel bed	1
F	Firebox wall panel	1
G	Viewing glass	1
H	Reflective glass	1
I	Decorative glass (golden/silver)	2 packs
J	Remote control with battery	1
K	Plastic clip	2
L	White gloves	1
M	Top panel	1
N	Bottom panel	1

Part	Description	Quantity
O	Rear skirting	1
P	Front skirting	1
Q	Left side panel	1
R	Left partition	1
S	Right partition	1
T	Right side panel	1
U	Middle trim	2
V	Middle crossbar	2
W	Base center support	1
X	Firebox short support	2
Y	Back panel	2
Z	Firebox brace	1
A1	Glass shelf	4



Assembly

1 Preparing base assembly



NOTE: Do not fully tighten all bolts until you finish assembling all parts. Once assembled, go back and fully tighten all bolts. This will make the assembly easier.

- Unpack the unit and confirm that you have all the hardware and required parts. Assemble the unit on a carpeted floor or the empty carton to avoid any scratches.
- Securely screw nine cam bolts (DD) into the designated small holes on the bottom panel (N) and front skirting (P) using a Phillips screwdriver.

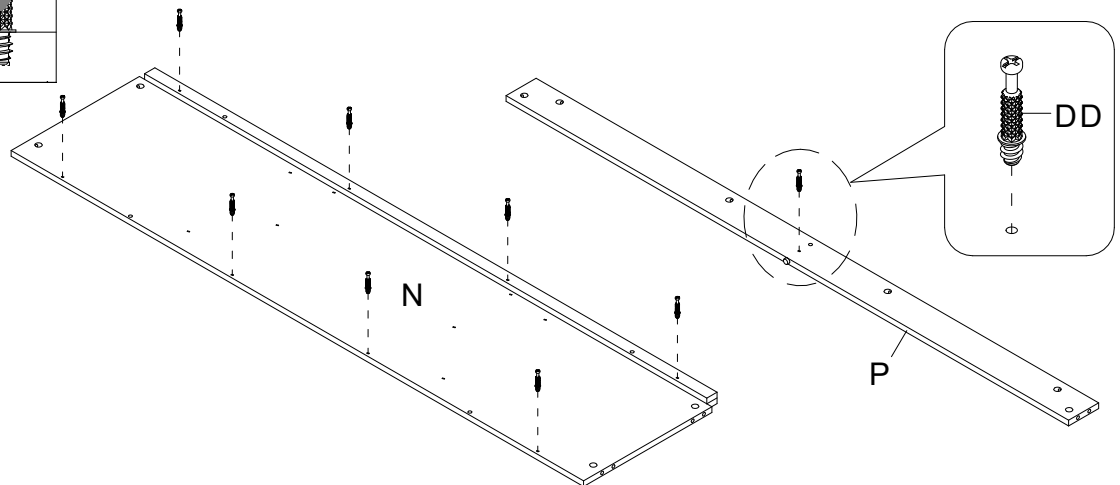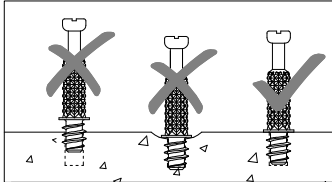


2 Gluing wood dowels








NOTE: Refer to the dowel guide drawings in this step for further clarification on how to properly glue in the wooden dowels. Apply this method whenever instructed to install wood dowels.

- Glue thirteen wood dowels (BB) into the designated holes of the Bottom panel (N), skirtings (O and P) and base center support (W). It is very important to use a small amount of glue on both ends of dowels and wipe away the excess glue immediately.

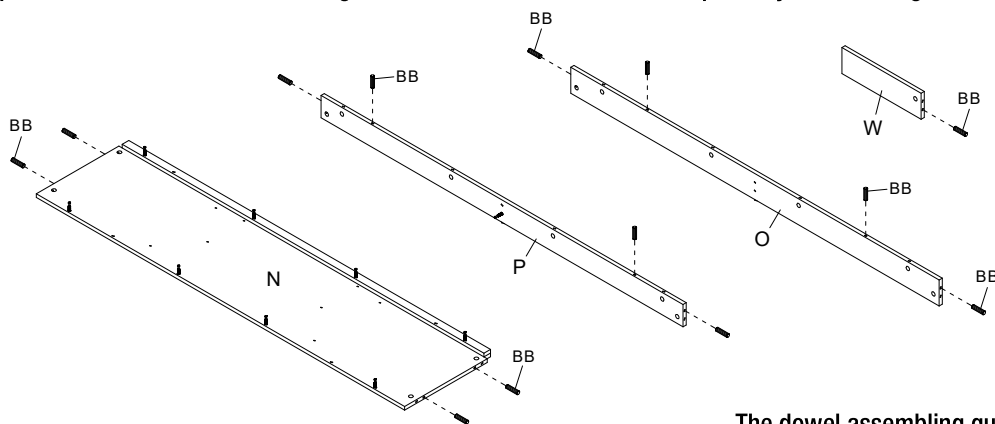

The dowel assembling guide

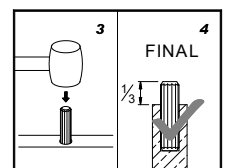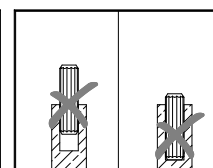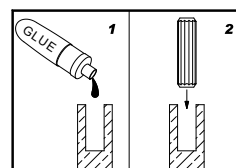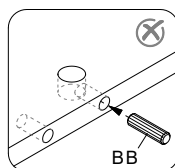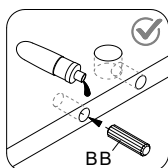


Assembly (continued)

3 Attaching front skirting




NOTE: Refer to the cam lock assembling guide drawings in this step for further clarification on how to properly install cam locks. Apply this method whenever instructed to install cam locks.

- Orient and attach the front skirting (P) to the bottom panel (N) by engaging four cam locks (CC). Turn the cam locks with a Philips screwdriver until securely locked onto the cam bolts.

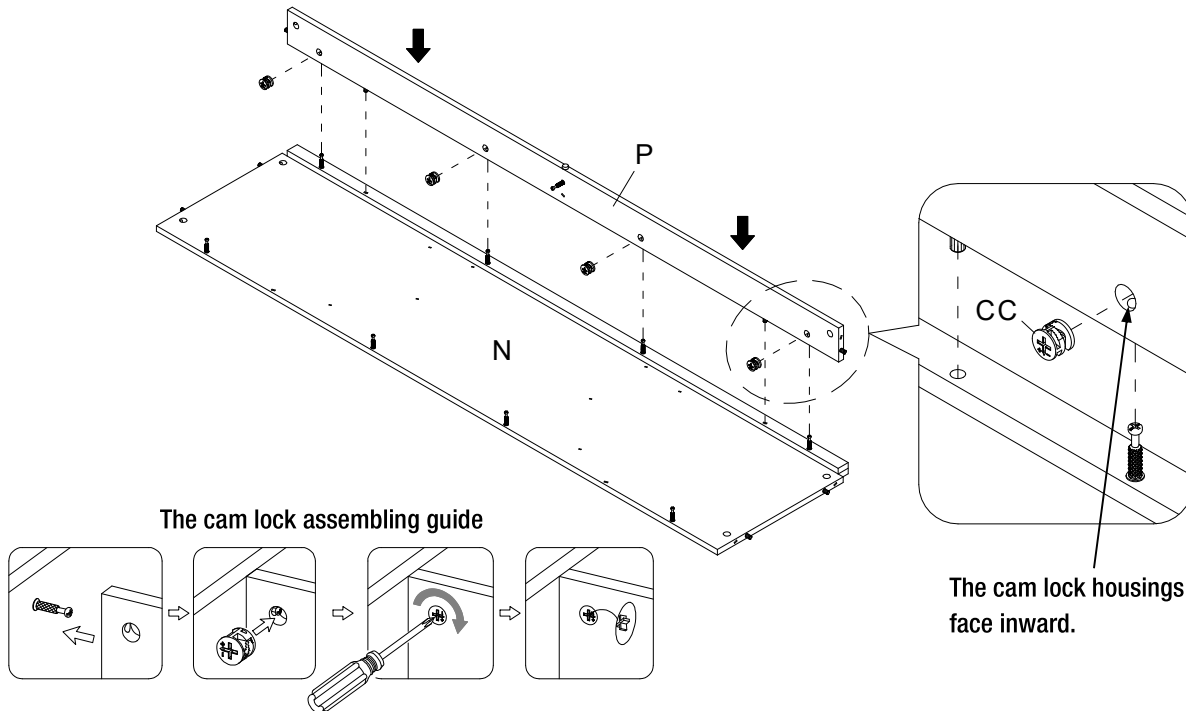

4 Attaching base center support


- Align and attach the base center support (W) to the front skirting (P) by engaging one cam lock (CC). Turn the cam lock with a Philips screwdriver until securely locked onto the cam bolt.

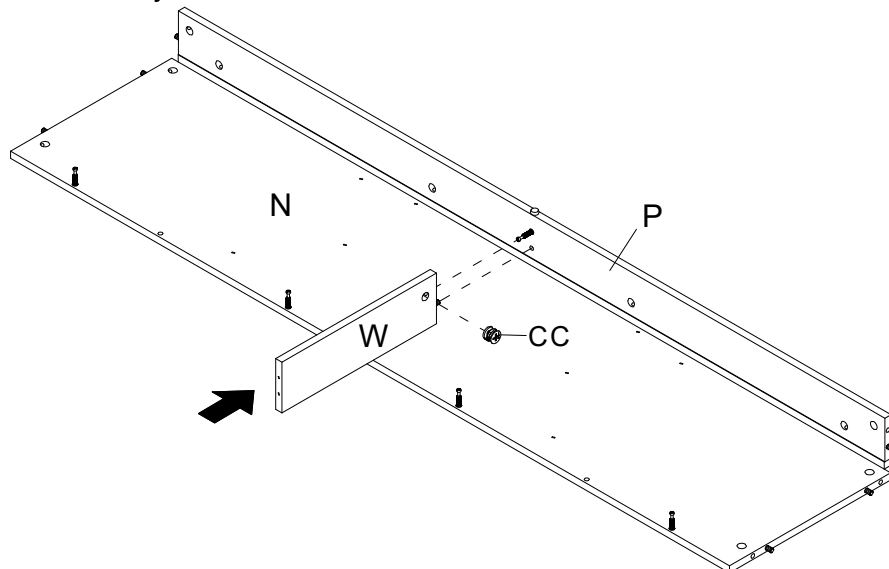

Assembly (continued)


5 Attaching rear skirting

- Align and attach the rear skirting (O) to the bottom panel (N) using four cam locks (CC). Turn the cam locks with a Philips screwdriver until securely locked onto the cam bolts.

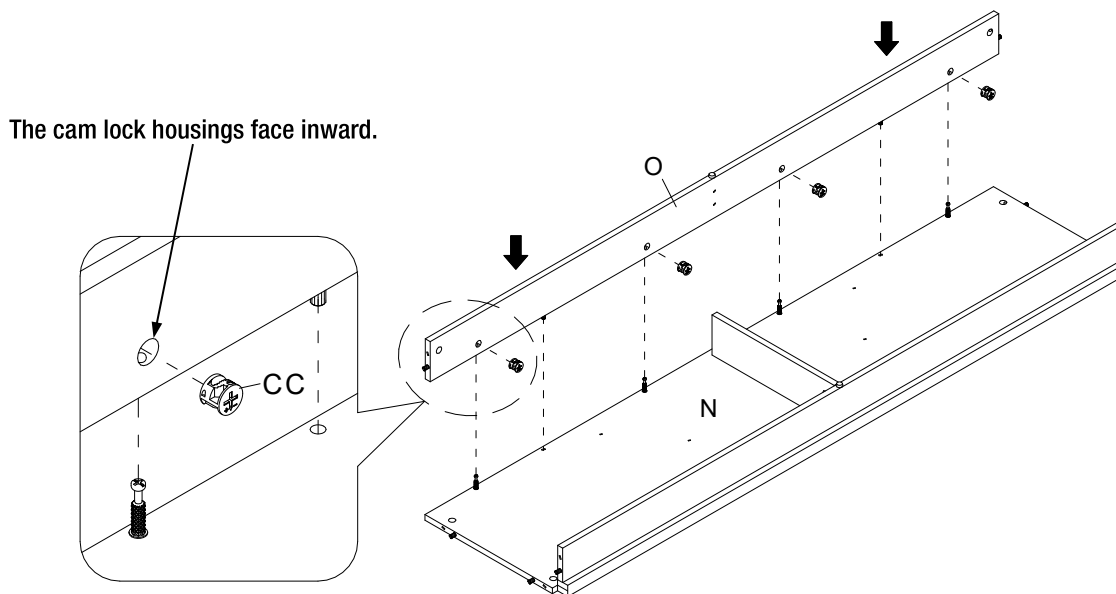

6 Fastening base center support


- Insert two long pan head screws (FF) through the rear skirting (O) and securely screw into the base center support (W) using a Phillips screwdriver.

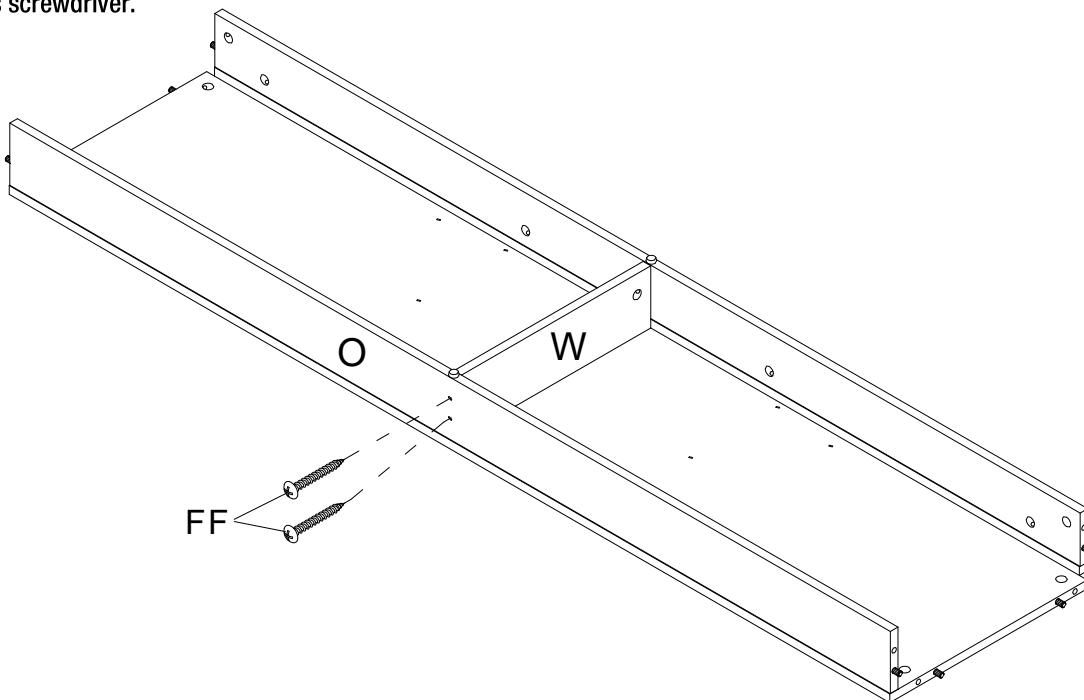

Assembly (continued)


7 Preparing bottom panel assembly

- Securely screw two cam bolts (DD) into the designated small holes on the top surface of the bottom panel (N) using a Phillips screwdriver.

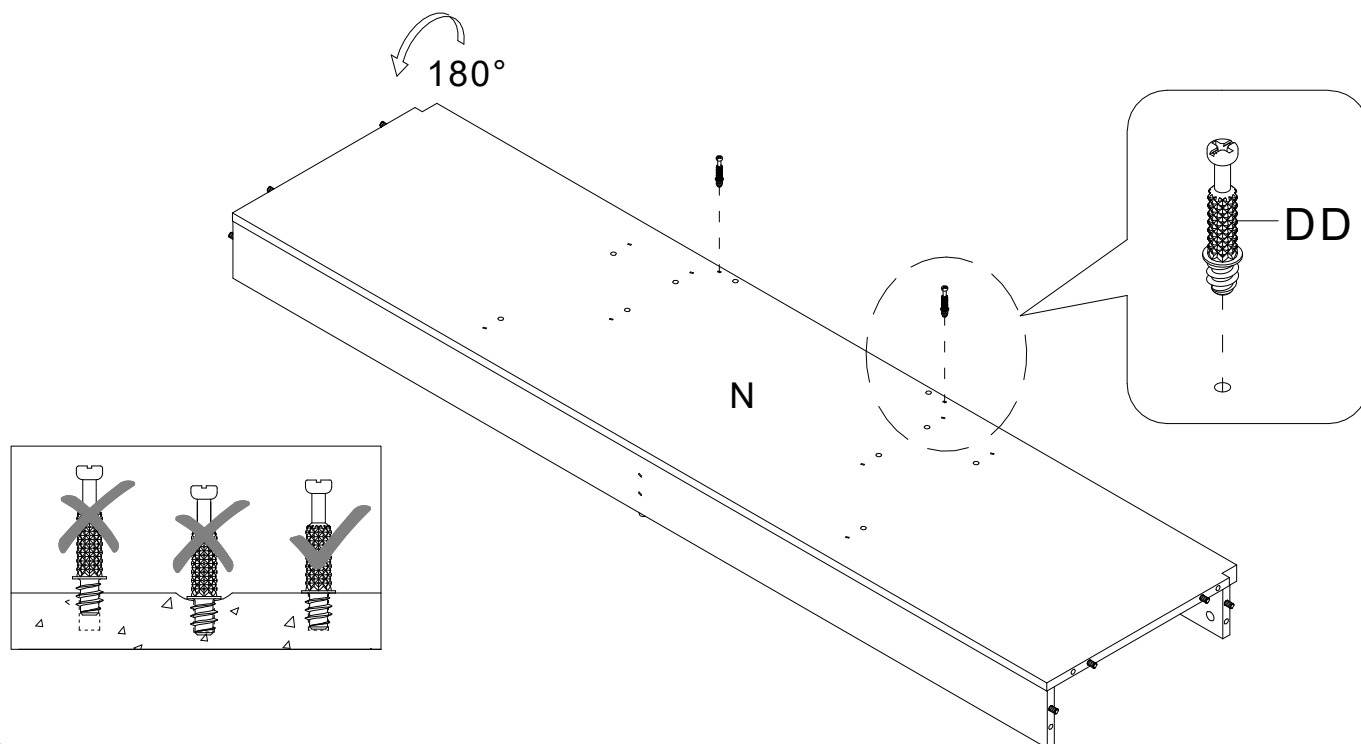

8 Preparing middle trim assembly


- Securely screw four cam bolts (DD) into the designated small holes on each middle trim (U) as shown.

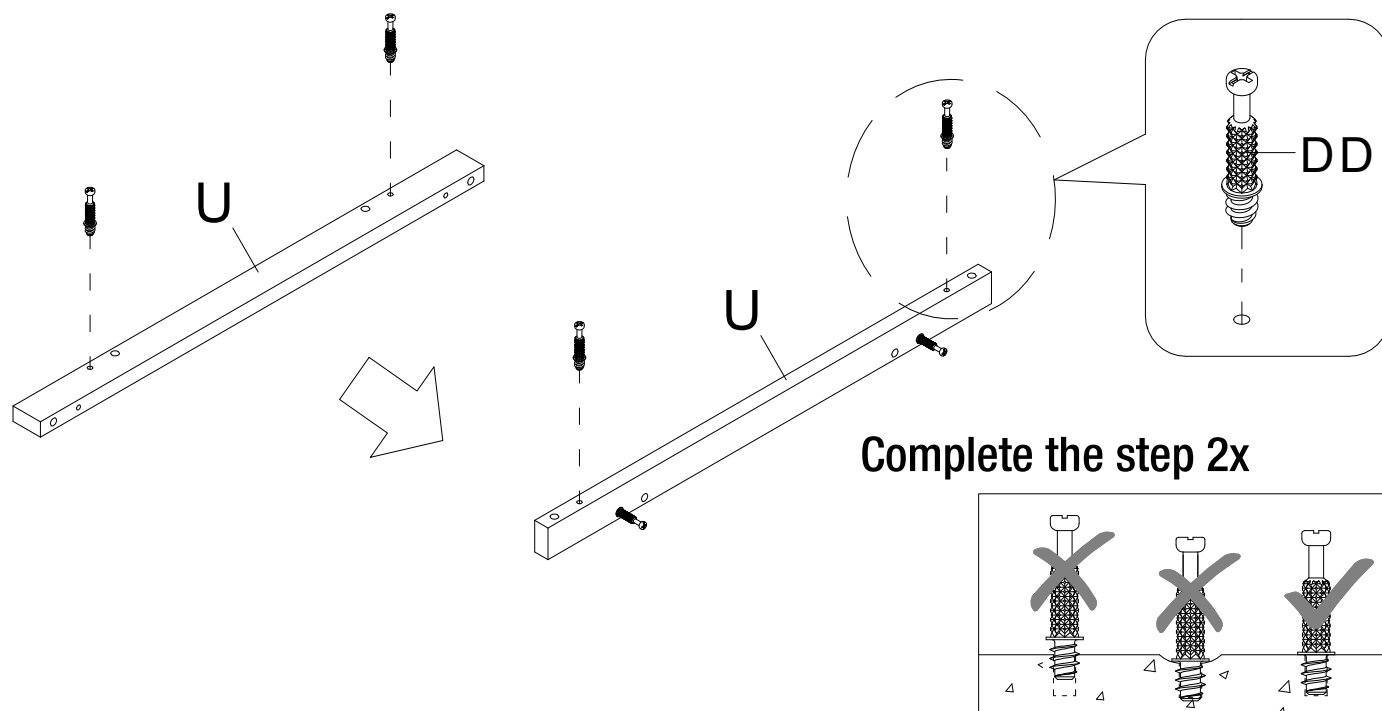

Assembly (continued)


9 Gluing wood dowels

- Glue twenty wood dowels (BB) into the designated end holes on the partitions (R and S) and middle crossbars (V) as shown.

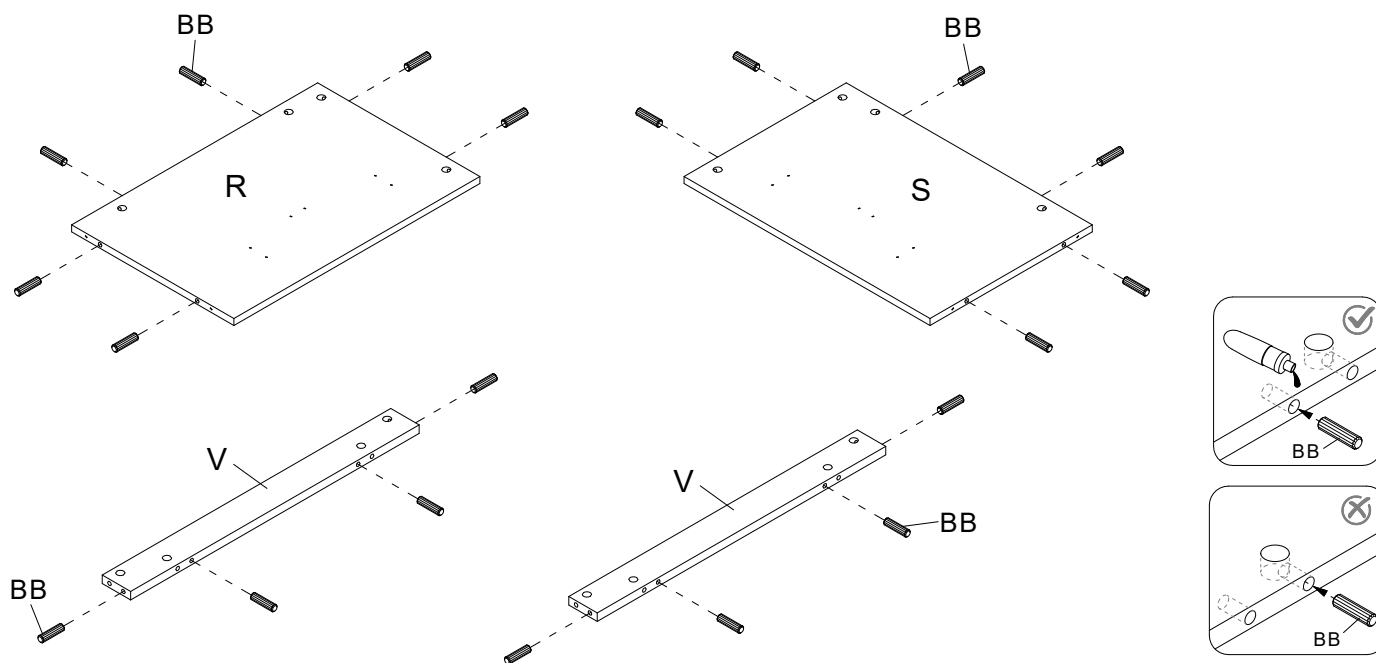

10 Attaching middle trims


- Attach the middle trims (U) to the partitions (R and S) respectively by engaging two cam locks (CC) per trim. Turn the cam locks with a Philips screwdriver until securely locked onto the cam bolts.

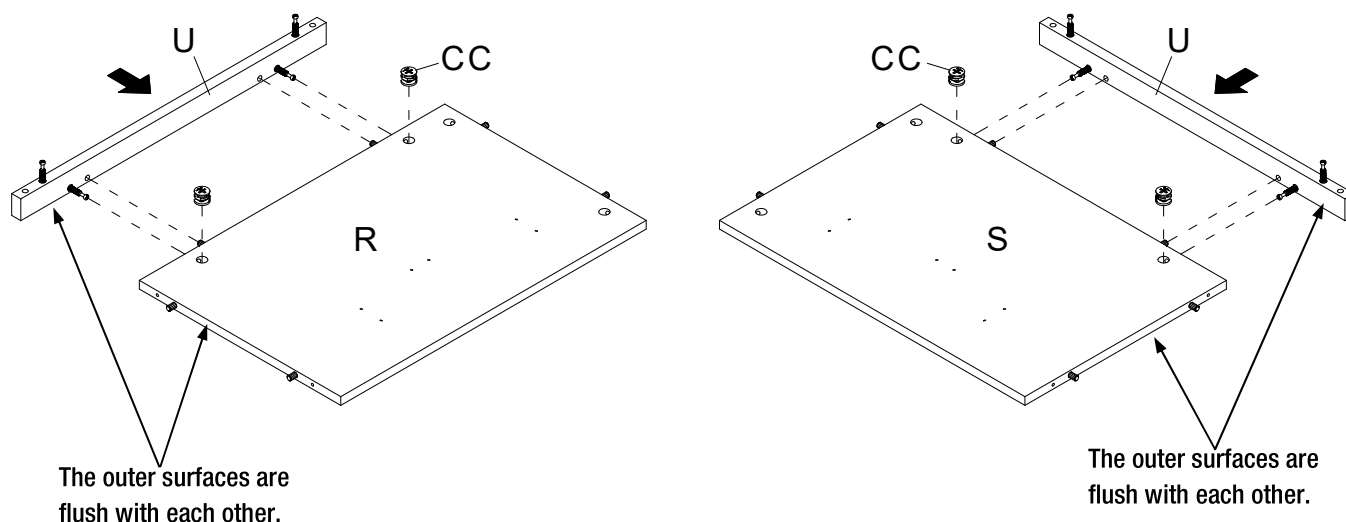

Assembly (continued)


11 Attaching middle crossbars

- Orient and attach two middle crossbars (V) to the middle trim (U) on the left partition (R) by engaging two cam locks (CC). Turn the cam locks with a Philips screwdriver until securely locked onto the cam bolts.

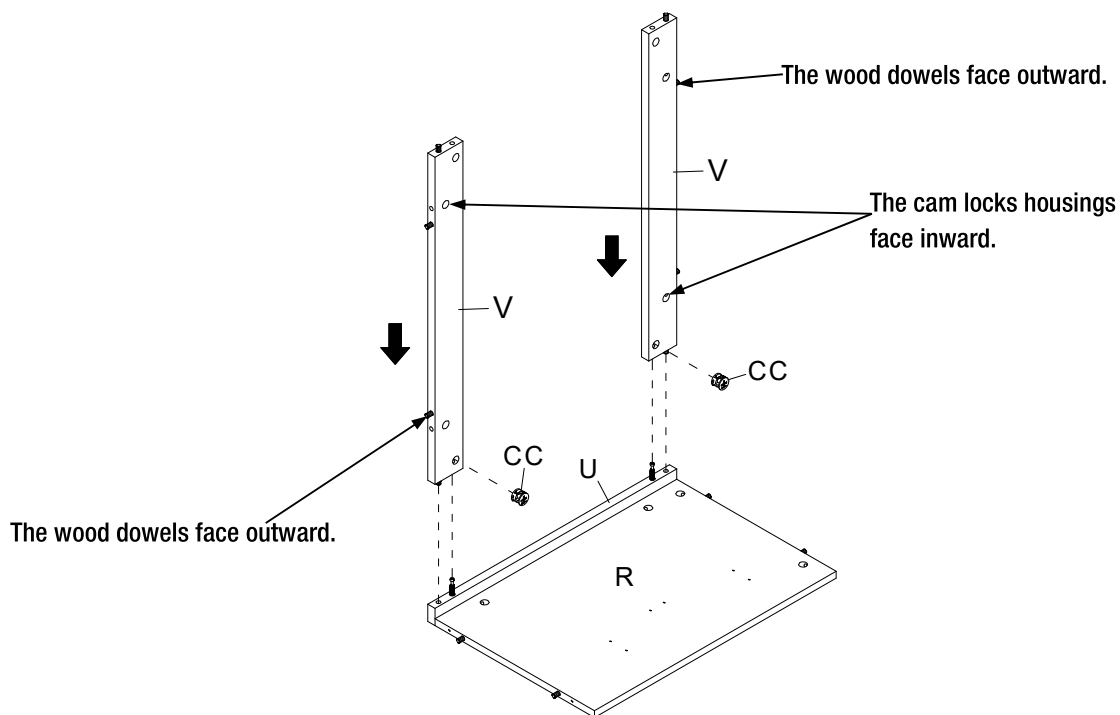

12 Attaching right partition


- Repeat the same process to attach the other middle trim (U) on the right partition (S) to the middle crossbars (V).

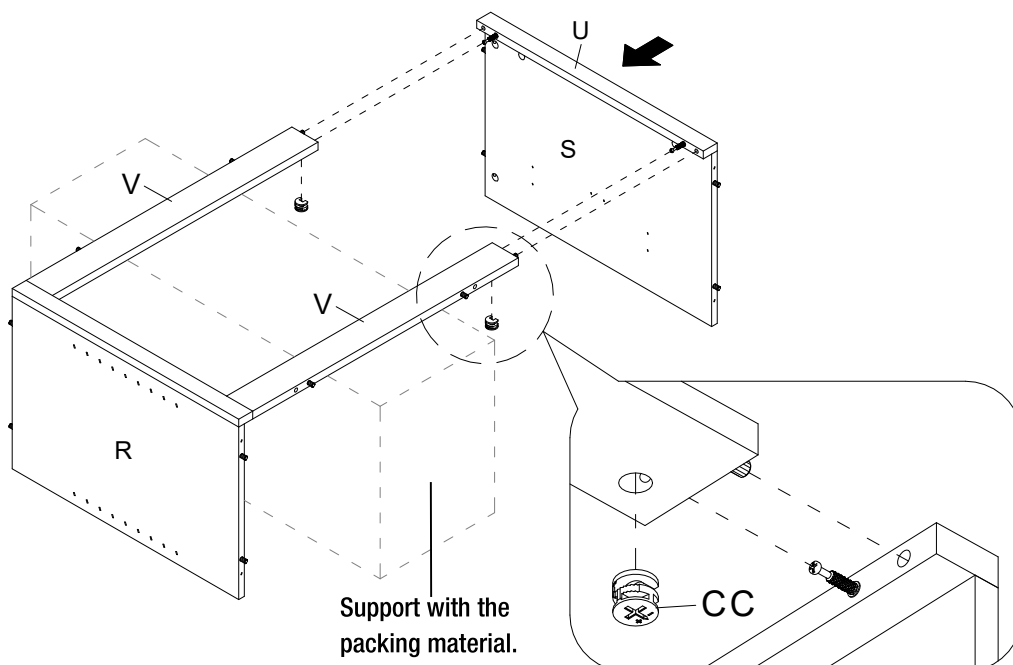

Assembly (continued)


13 Attaching bottom panel

- Using the wood dowels as a guide, firmly press the previous assembly to the bottom panel (N).
- Attach the middle crossbar (V) to the bottom panel (N) by engaging two cam locks (CC). Turn the cam locks with a Philips screwdriver until securely locked onto the cam bolts.

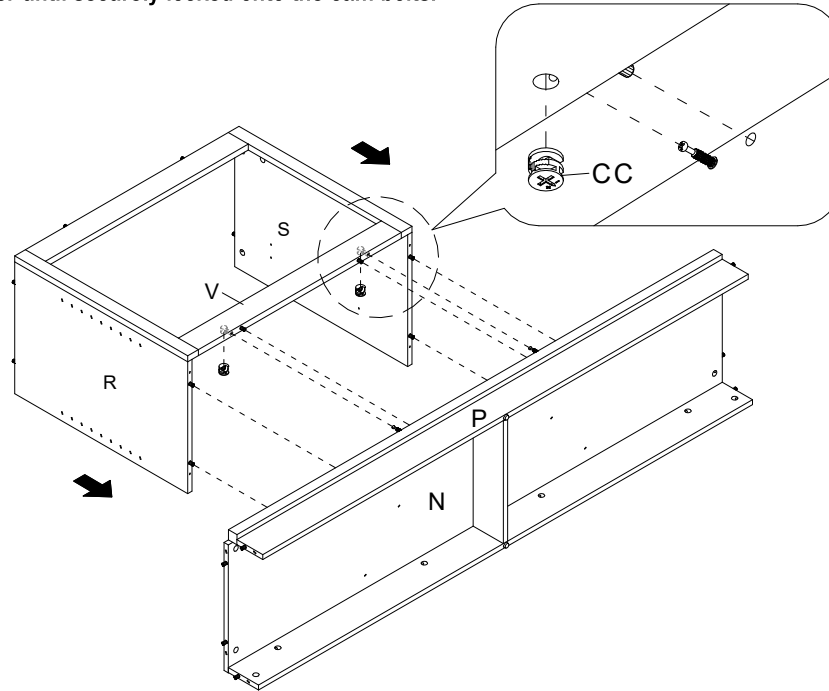

14 Fastening bottom panel


- Fasten the bottom panel (N) to the partitions (R and S) with insert four long pan head screws (FF) through the mounting holes on the bottom panel (N) and securely screw into the two partitions (R and S). Tighten the screws into place with a Philips screwdriver.

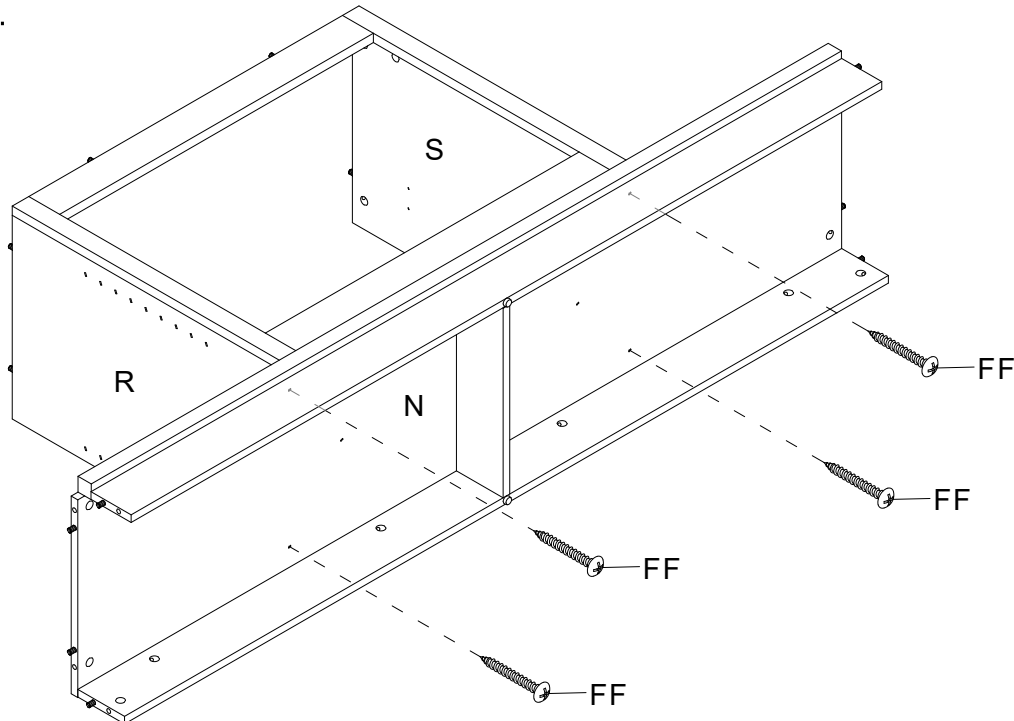

Assembly (continued)


15 Attaching firebox short supports

- Glue four wood dowels (BB) into the designated inner holes of the firebox short supports (X) as shown.
- Using the wood dowels as guide, fasten two firebox short supports (X) to the bottom panel (N) with four long pan head screws (FF).

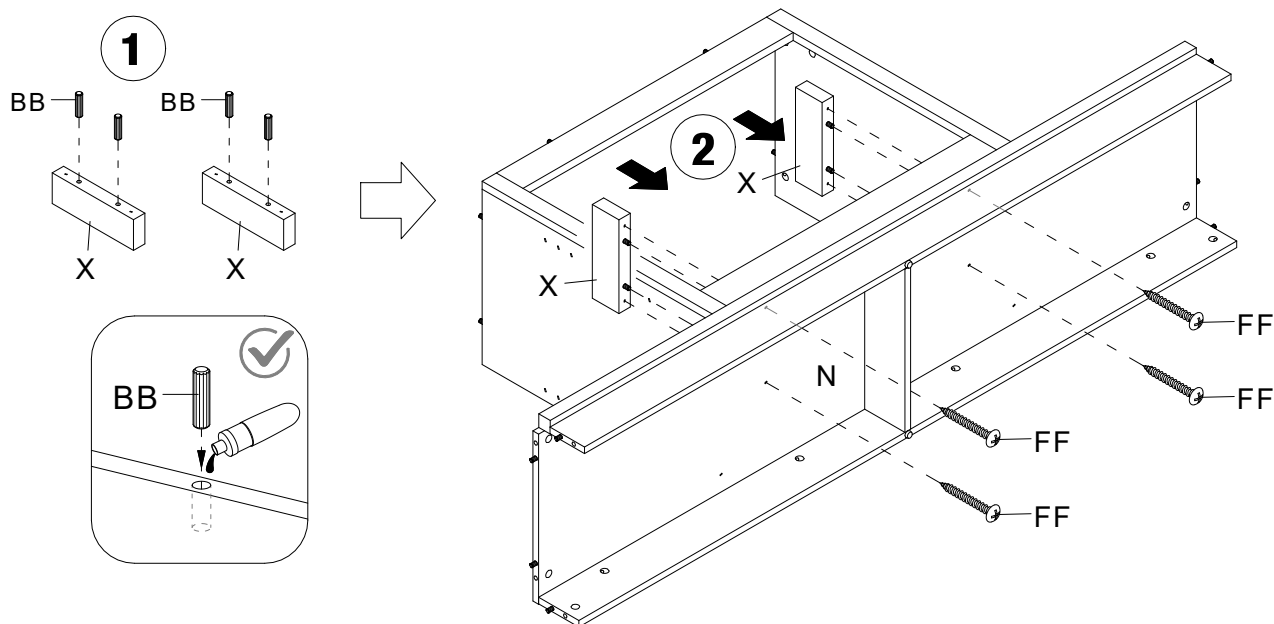

16 Preparing top panel and side panels assembly


- Securely screw eighteen cam bolts (DD) into the designated small holes on the top panel (M) and side panels (Q and T) using a phillips screwdriver.

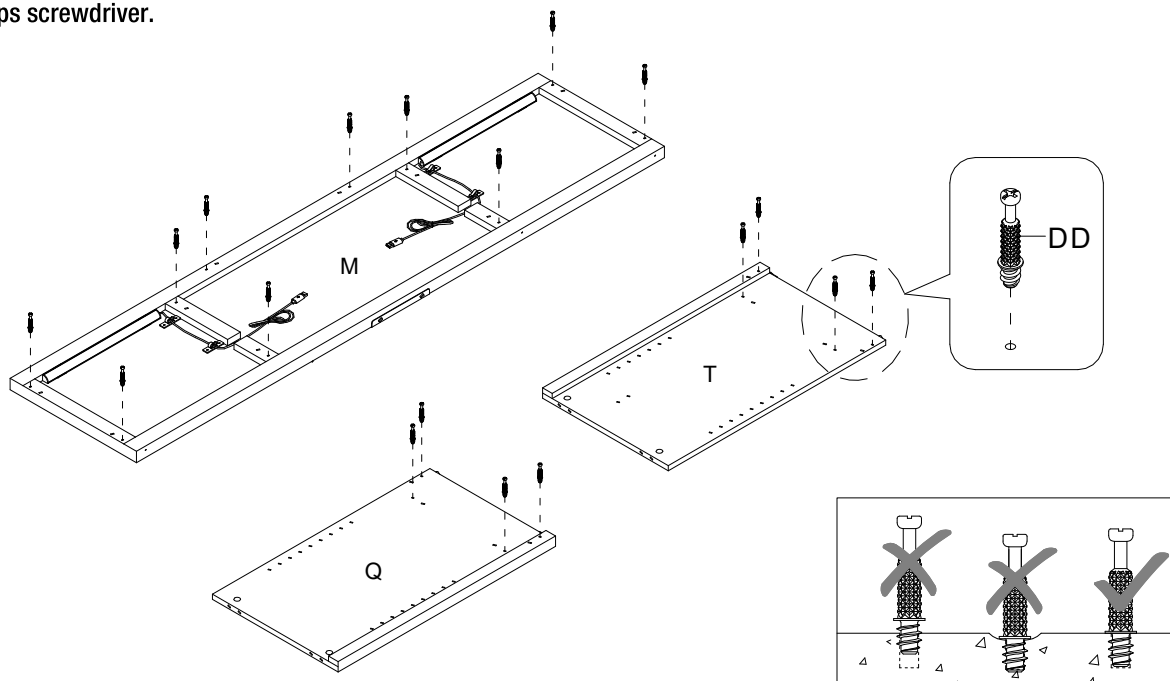

Assembly (continued)


17 Gluing wood dowels

- Glue two wood dowels (BB) into the inner holes on the top edge of the side panels (Q and T) respectively.

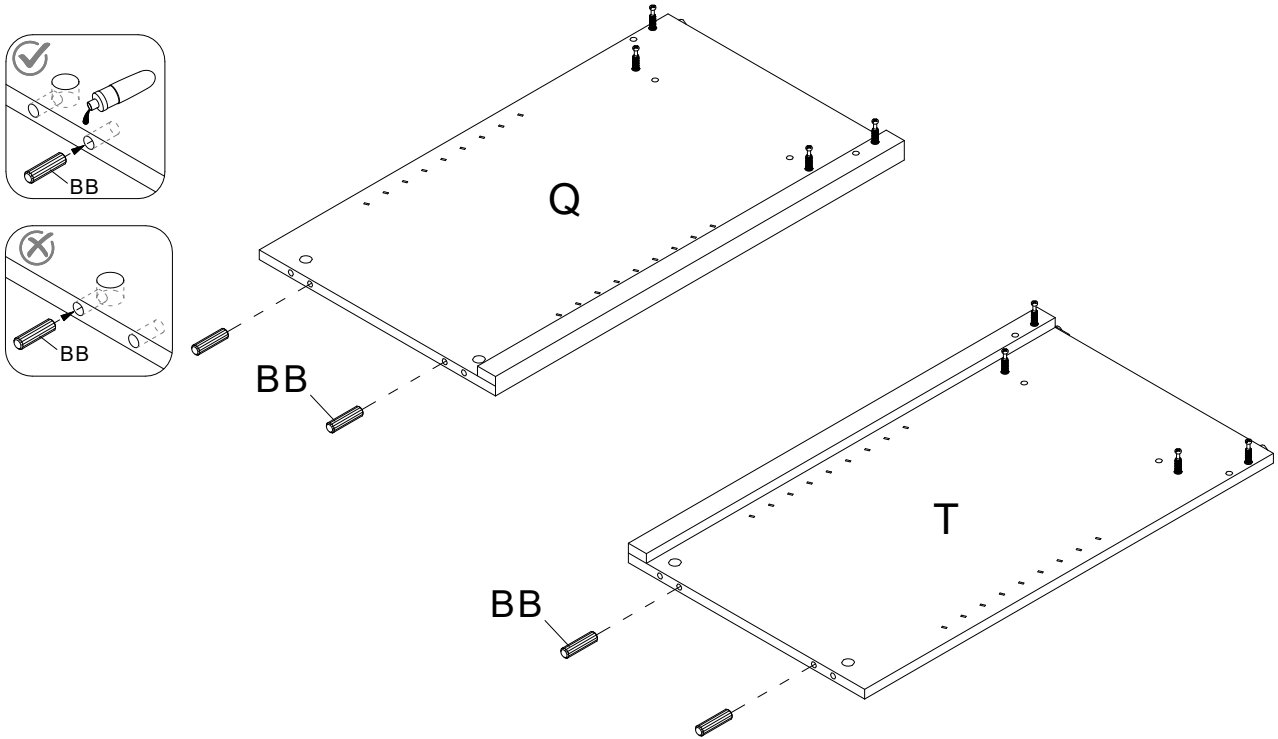

18 Attaching side panels


- Align and attach the left side panel (Q) to the assembled base by engaging four cam locks (CC). Turn the cam locks with a Philips screwdriver until securely locked onto the cam bolts.
- Repeat the same process to attach right side panel (T) at the other end.

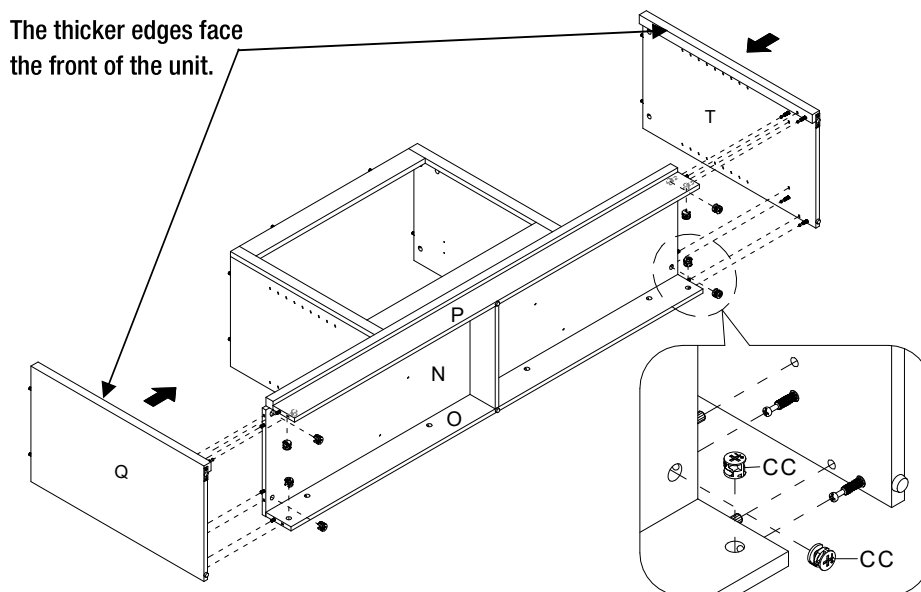

Assembly (continued)

19 Attaching top panel

- Route the LED lighting cables through the grooves on the middle rails underneath top panel (M) as shown.
- Ask for assistance to properly position the top panel (M) onto the previous assembly and fasten it in place by engaging ten cam locks (CC). Turn the cam locks with a Philips screwdriver until securely locked onto the cam bolts.

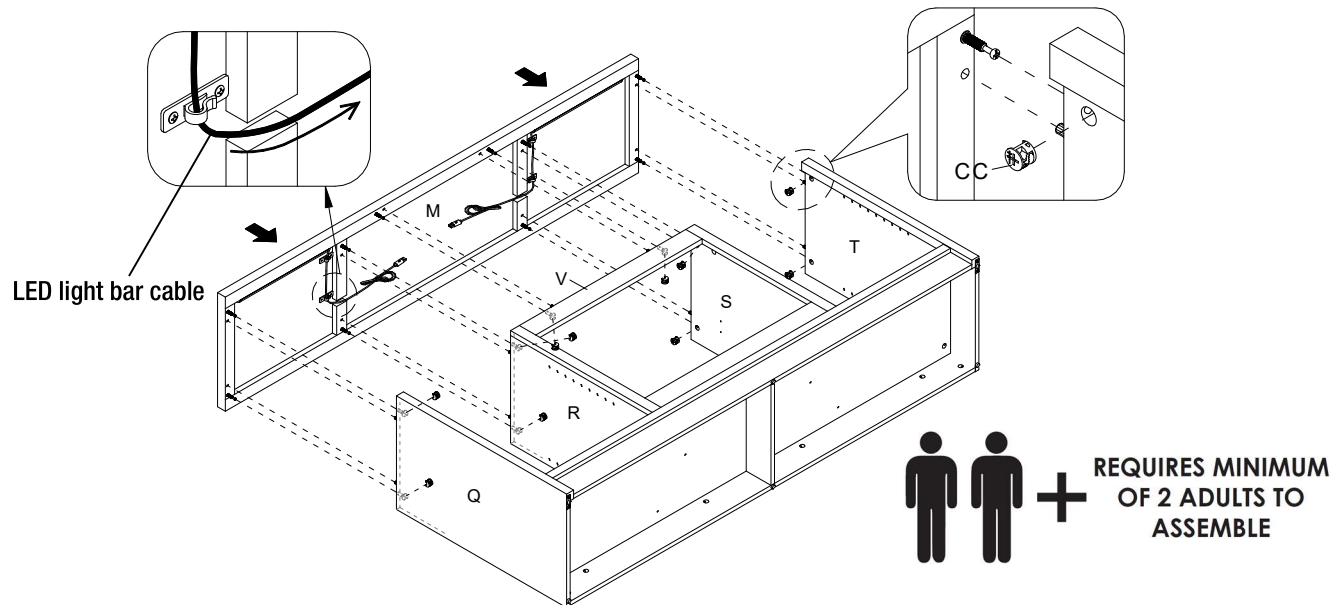


20 Installing back panels

- Now, go back and securely tighten all the cam locks and screws. Make sure all the parts are tight and there are no gaps between the parts. This will help keep the unit square.
- Ask for assistance to flip around the assembled unit on its front edge.
- Unfold the back panels (Y) and lay them to the back of the assemble unit. Make sure that the pre-drilled holes against the upper edge overlap the pilot holes on the back edge of the top panel (M). Fasten them into place with thirty-two washer head screws (GG). Do not damage the edges.




NOTE: We recommend attaching back panel with the screws at the corners first.

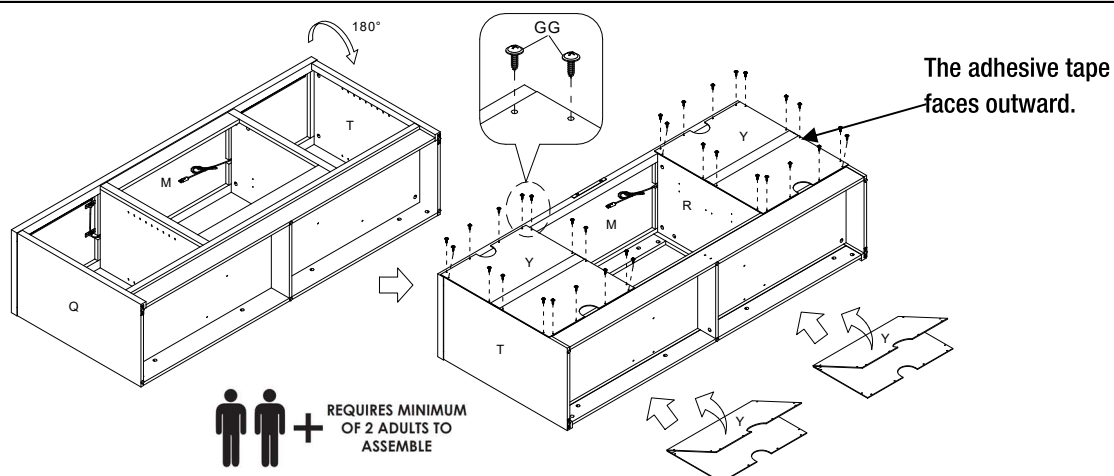

Assembly (continued)


21 Installing glass shelves

- Ask for assistance to lift the assembled unit upright and position it near the final location.
- Insert eight shelf supports (II) into the holes at the desired height inside each side compartment. Make sure you place the four shelf supports at the same level to make the shelf level.
- Tilt and rest the glass shelves (A1) onto the shelf supports (II).

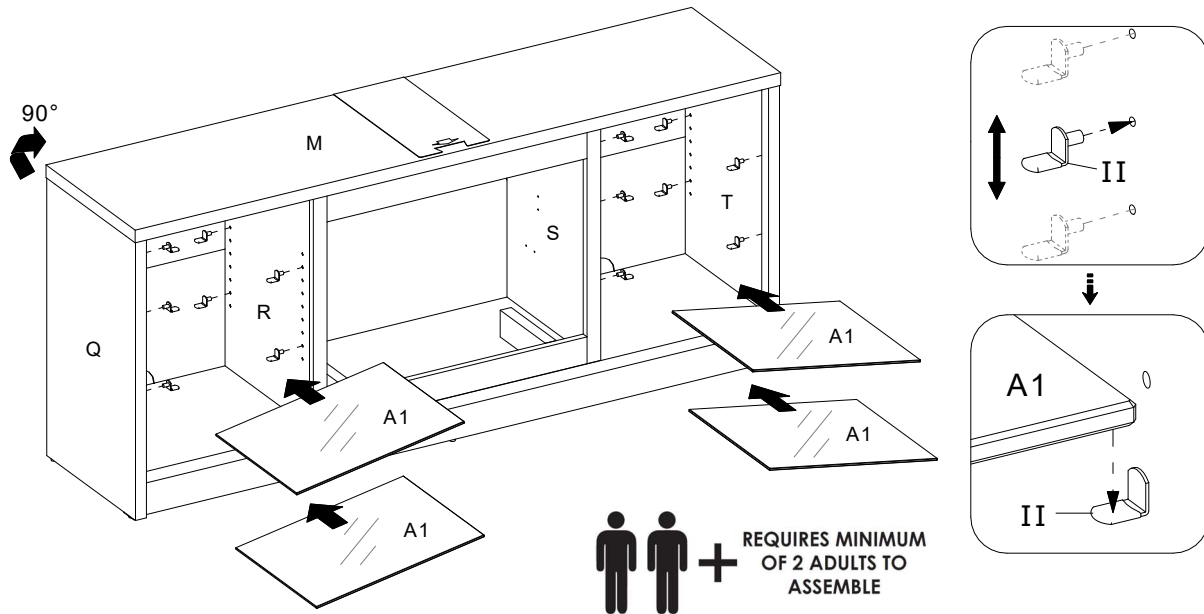

22 Affixing cam lock covers

- Affix the paper stickers (LL) onto the visible cam locks.

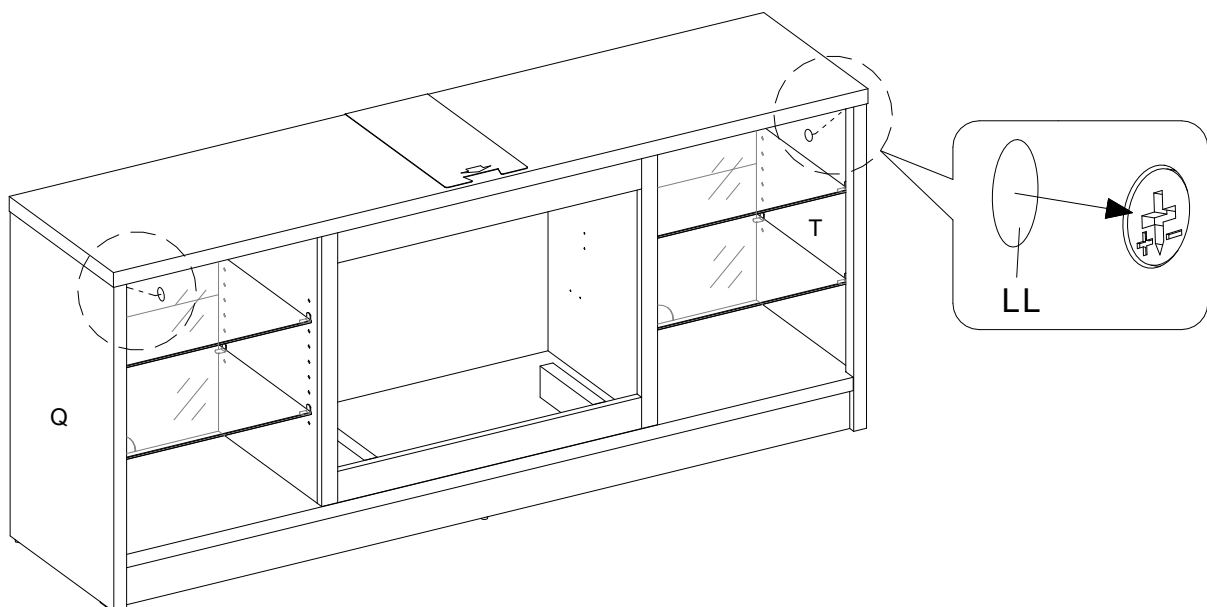

Assembly (continued)

23 Attaching upright arms



IMPORTANT NOTE: Use hand screwdriver, not power driver to assemble fireplace insert. See BILT for video instructions.

- See **figure A**: Fasten upper 2 screws (AA) through the upright arm (C) into the heater (A) until tight.
- See **figure B**: Fasten lower 2 screws (AA) into the upright arm (C) until tight.
- Fully tighten all 4 screws (AA) one final time.
- Repeat the same process with upright arm (B).



WARNING: Do not lift or transport the heater by using the upright arms.

Figure A



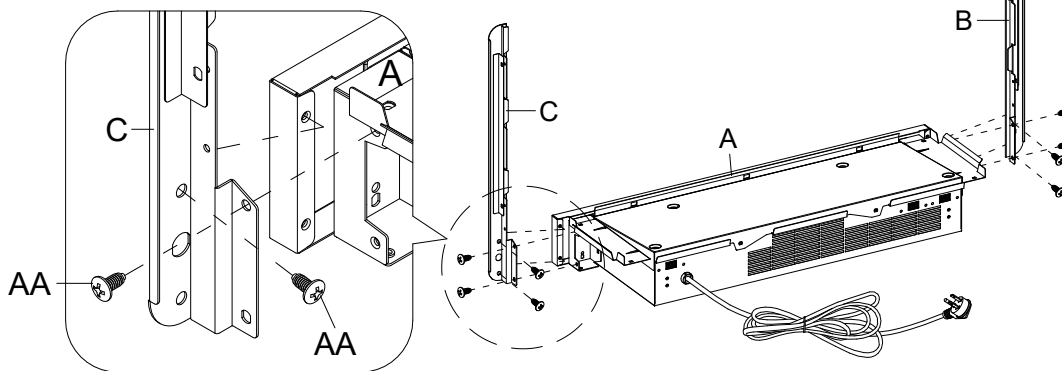


Figure B

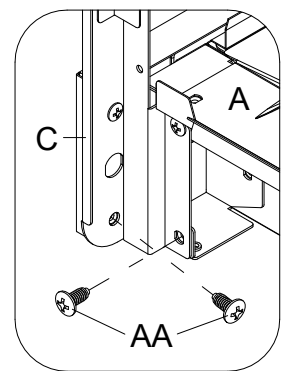

24 Inserting viewing glass


- Slide the viewing glass (G) into the inner U-channels on both upright arms (B and C) until the glass sits onto the heater (A). If needed, push top of upright arms in or out to accommodate glass. Make sure the top of the glass (G) is flush with the top of both upright arms (B and C).

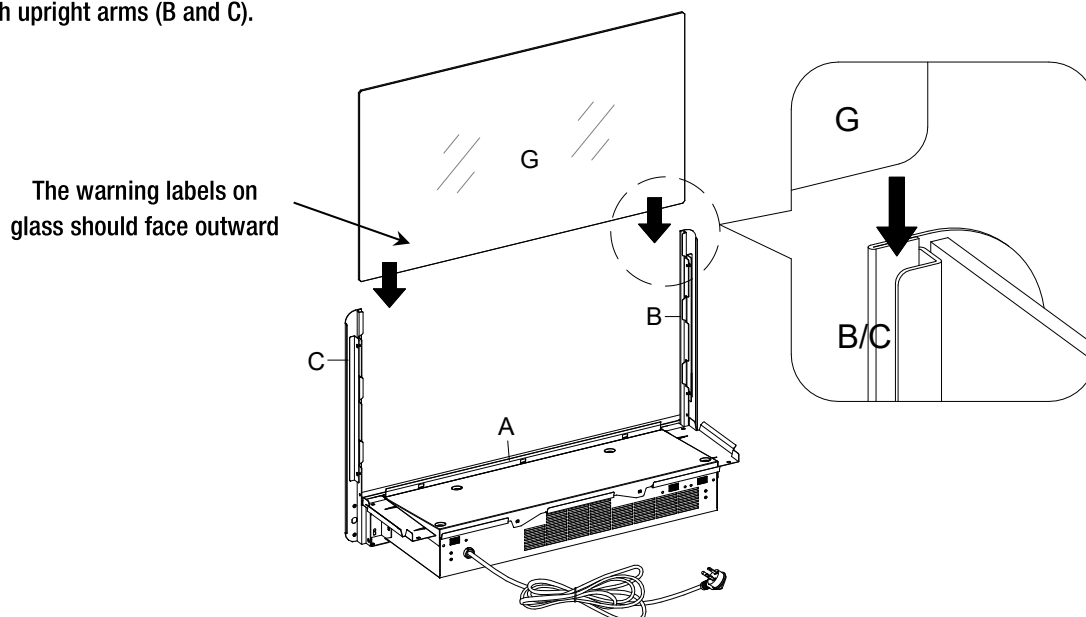

Assembly (continued)


25 Positioning fuel bed

- Set the fuel bed (E) onto the heater (A) as shown.
- Push fuel bed forward against the front flange of heater.
- Position the USB cable as shown below.

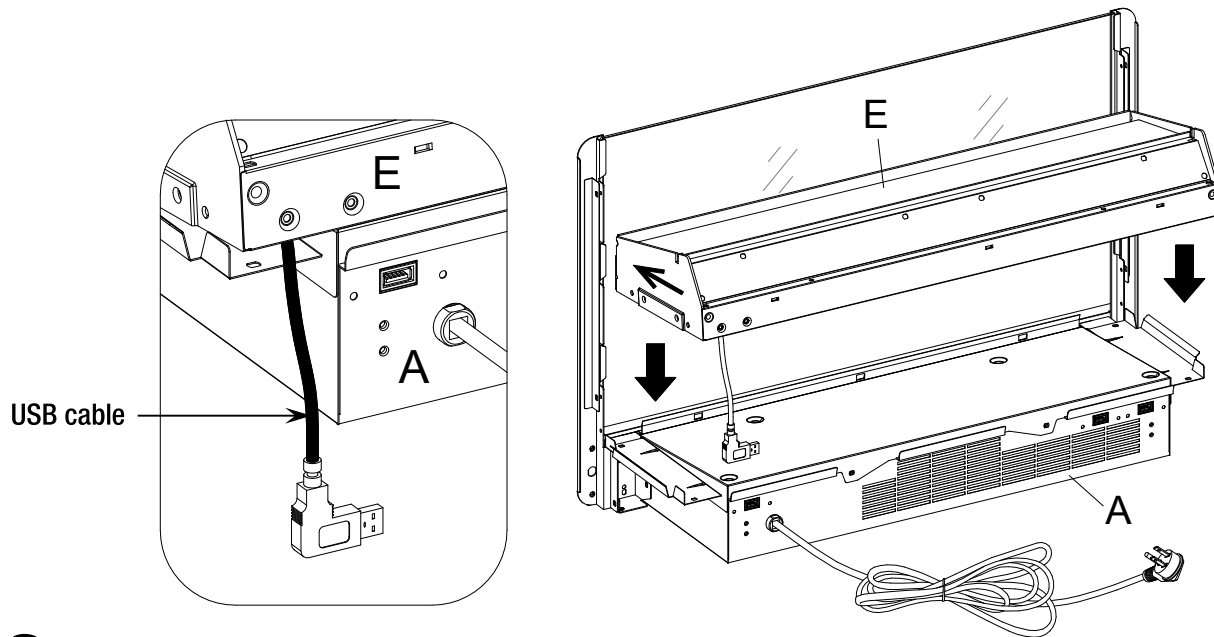

26 Attaching wall panel


- Fold the wall panel (F) as shown. Then position yourself at back side of heater (A).
- Hold wall panel (F) at the angle shown below and insert lower back edge into metal slots on back of heater (A).
- Tilt wall panel (F) forward until bottom corner inserts into lower U-channels on both upright arms (B and C).
- Continue to tilt wall panel (F) forward until the top corner inserts into upper U-channels on both upright arms (B and C).

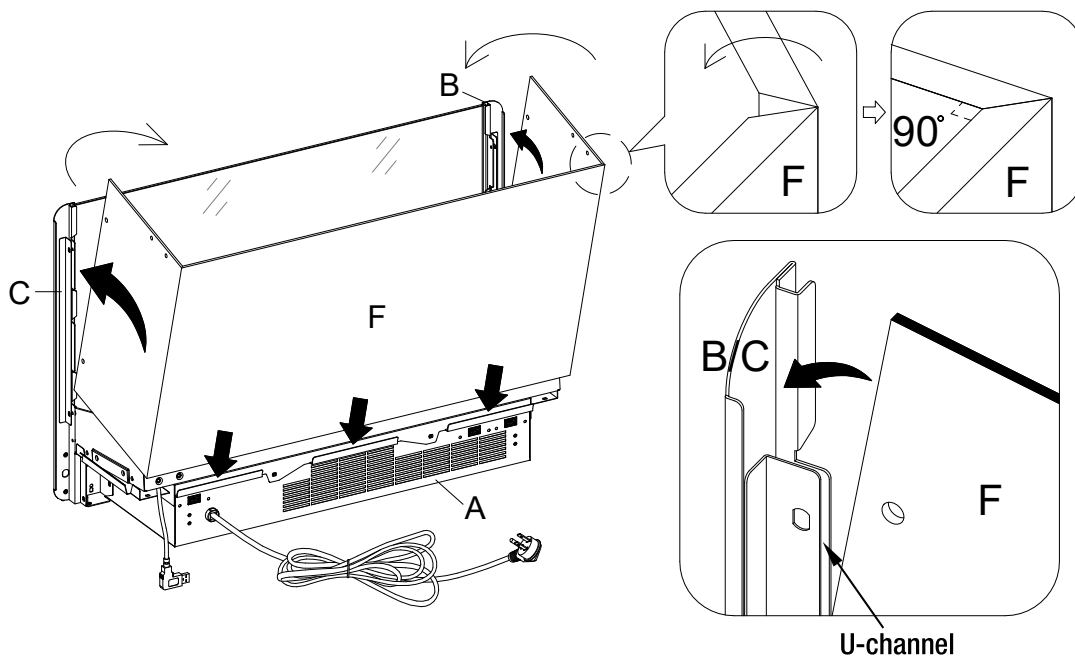

Assembly (continued)

27 Connecting fuel bed cable to heater

- Fully plug the USB connector of the fuel bed (E) into the back port of heater (A).

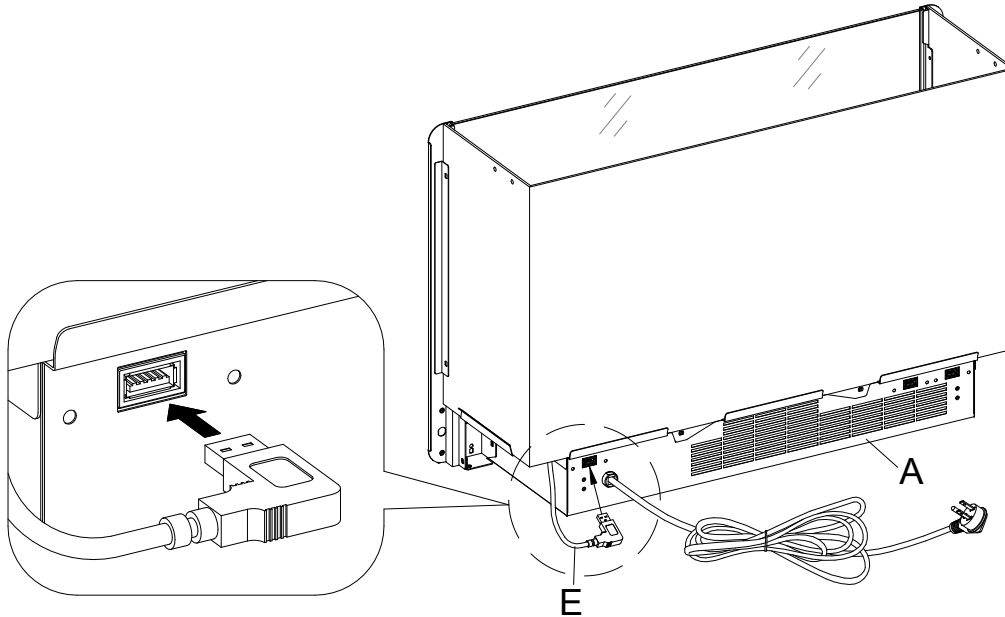


28 Inserting the reflective glass

- Slide the reflective glass (H) into the two slots of the fuel bed (E) as shown.




NOTE: Always wear the provided white gloves when working with glass, to protect your fingers and to prevent fingerprints.

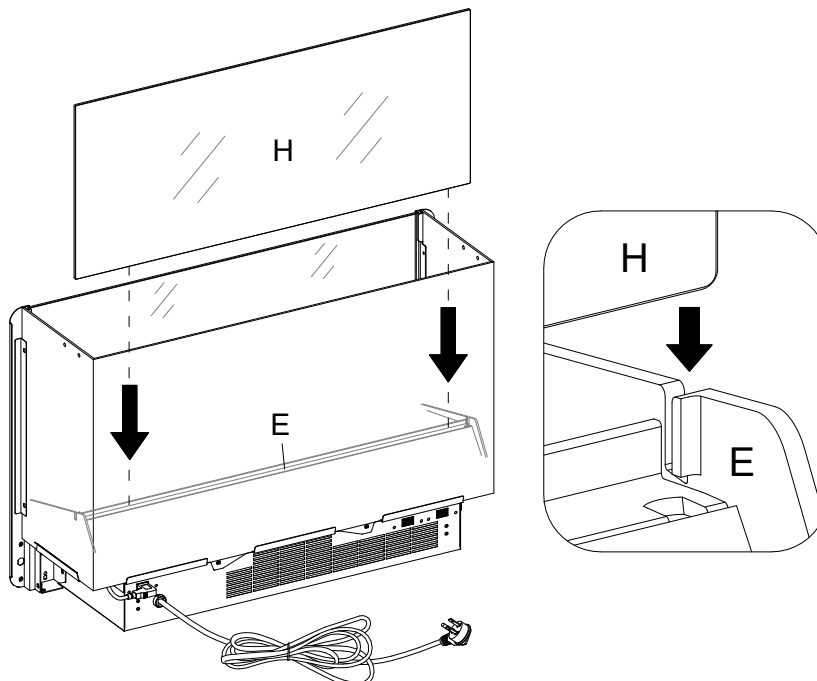

Assembly (continued)


29 Securing the reflective glass

- Fit the two plastic clips (K) at the top junctions of the wall panel (F) and reflective glass (H) as shown.
- Secure the plastic clips (K) into place with four insert screws (AA).

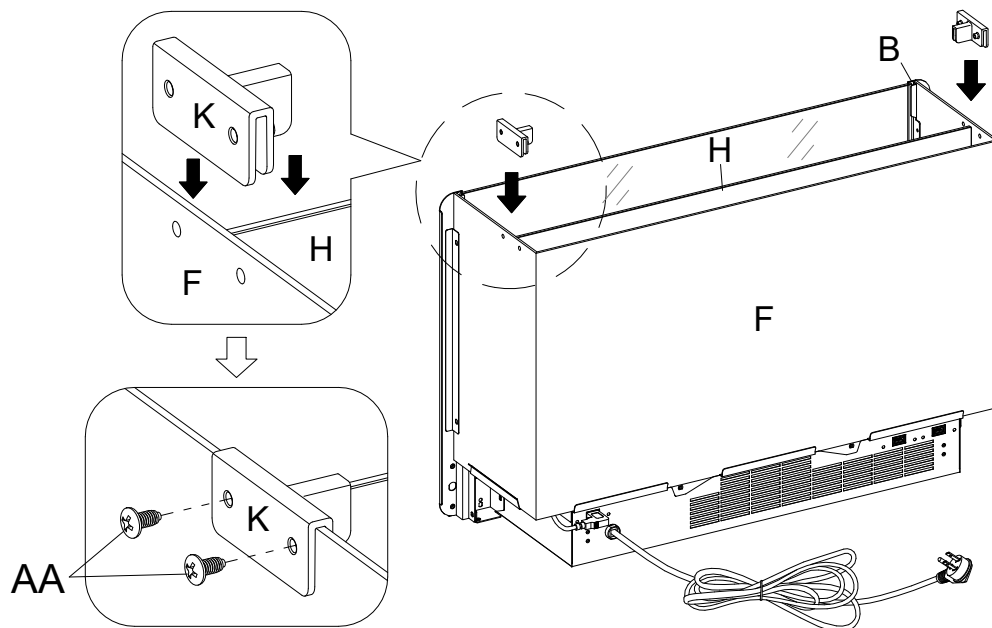

30 Positioning connector strap


- Position top connector strap (D) over the viewing glass (G) and upright arms (B and C). Follow orientation shown below.

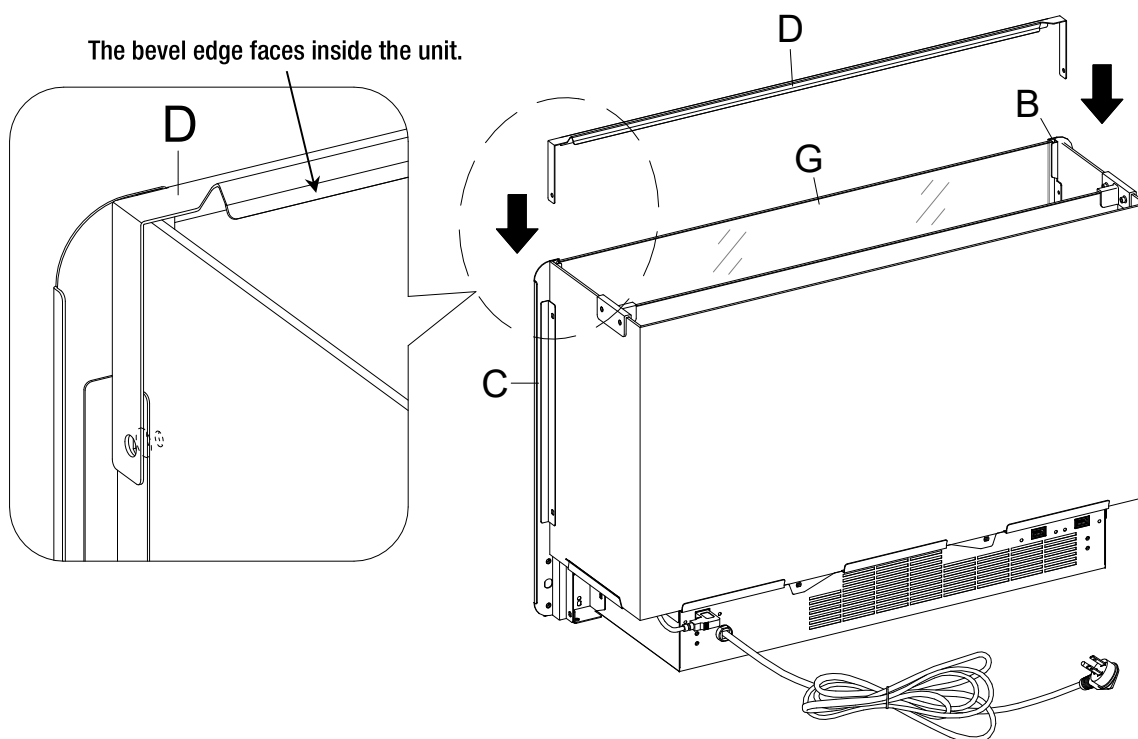

Assembly (continued)

31 Attaching connector strap

- Fasten connector strap (D) to both upright arms (B and C) using four screws (AA) as shown below. Holes must be in line for screw to pass through.

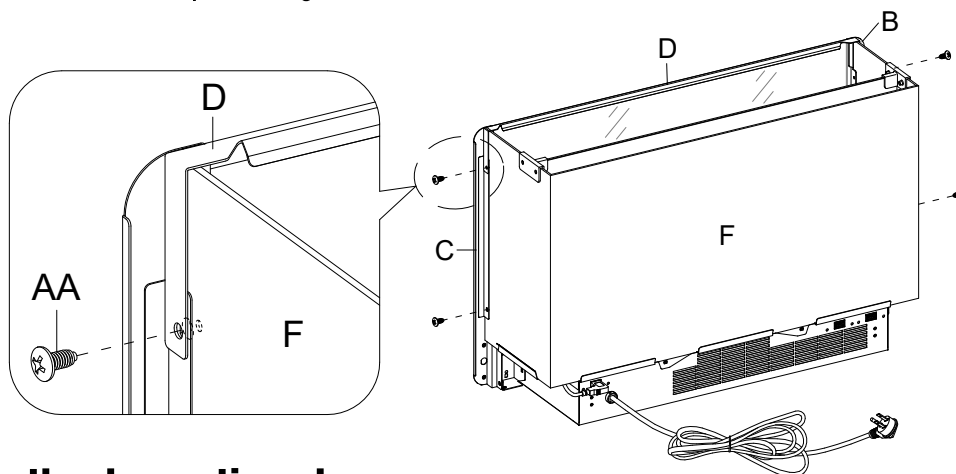


32 Pouring the decorative glass



CAUTION: DO NOT pour the decorative glass into the back compartment behind the reflective glass wall.

- Pour the decorative glass into the front media tray and spread out the decorative glass evenly across the media tray to a uniform depth. Always wear the provided white gloves when working with glass, to protect your fingers and to prevent fingerprints.

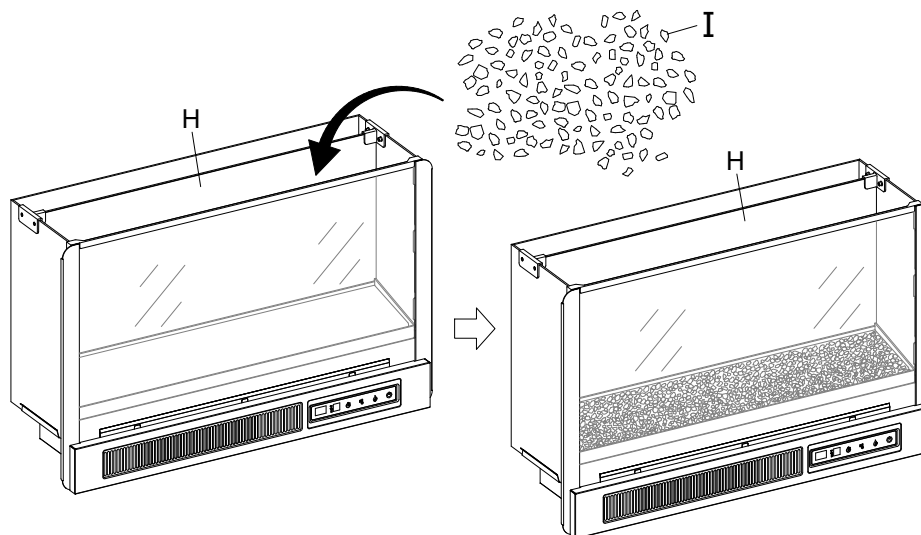


- **Pour decorative glass into the front media tray -- DO NOT pour into the area shown with the X.**

- Spread out the decorative glass evenly across the media tray to a uniform depth.

A: Decorative glass pile should follow the sloped angle of the media tray.

B: Be sure decorative glass covers the bottom edge of reflective glass wall.



- Plug into 120-volt grounded outlet to verify media tray is fully & evenly covered by decorative glass. There should be no gaps between decorative glass so that no portions of the media tray are visible.
- Adjust decorative glass pile by filling gaps and sloping it upwards to top of media tray (as shown in above illustration A & B) before installing the top lid.

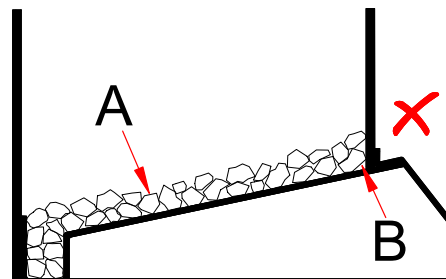

Assembly (continued)


33 Inserting firebox

- Carefully hold fireplace level when inserting into console to prevent decorative glass from sliding out of the desired position.
- Two people are required for holding & positioning, one on each end of fireplace, to maintain proper level installation.
- Slowly slide fireplace into console and rest it onto the firebox short supports (X) without bumping it against console to keep decorative glass in the correct position. If decorative glass pile slides downwards due to tilting or bumping, then remove the fireplace insert and reposition decorative glass, and then reinstall into console.
- Proceed to gently slide the firebox forward and center it in the opening.

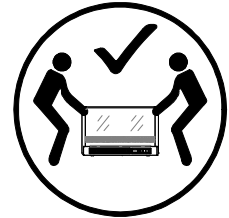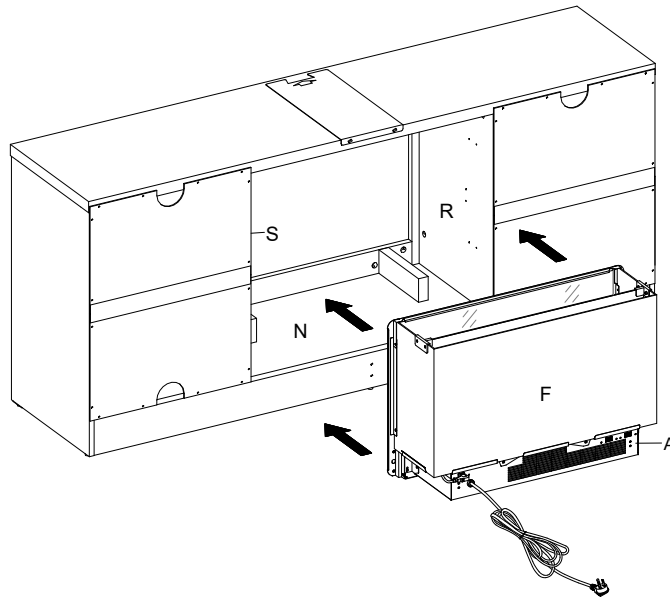

34 Attaching firebox brace


- Using the pilot hole as a guide, orient and fasten two L-shaped brackets (HH) onto both ends of the firebox brace (Z) with four short pan head screws (EE) as shown. Make sure that the right-angle side is flush with the short edge of firebox brace (Z).
- Using the pilot hole as a guide, faster the firebox brace (Z) between the partitions (R & S) with four short pan head screws (EE).

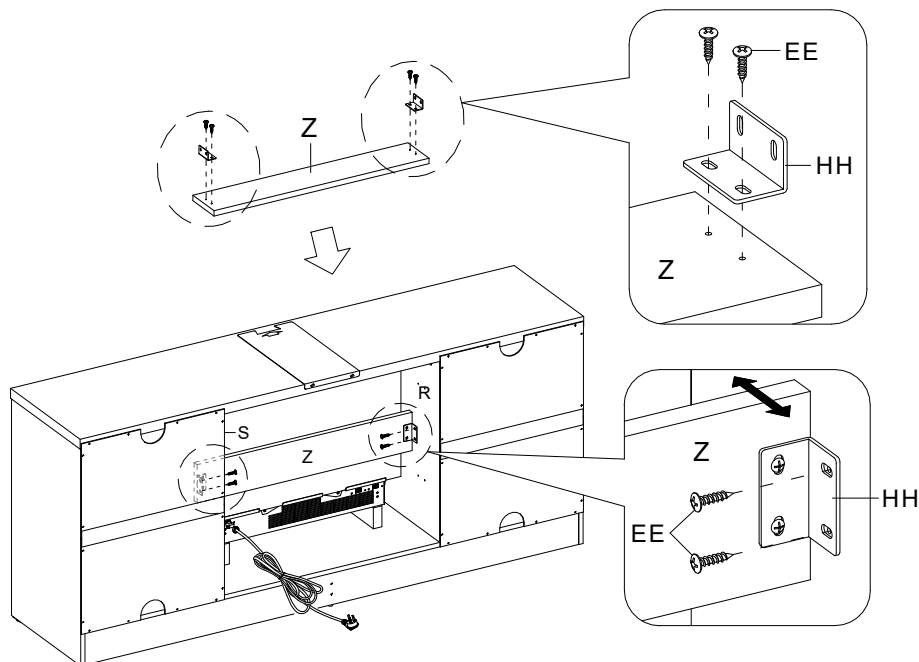

Assembly (continued)


35 Attaching cord clips

- Using the pilot hole as a guide, attach four cord clips (JJ) to the partitions (R and S) using eight short pan head screws (EE).

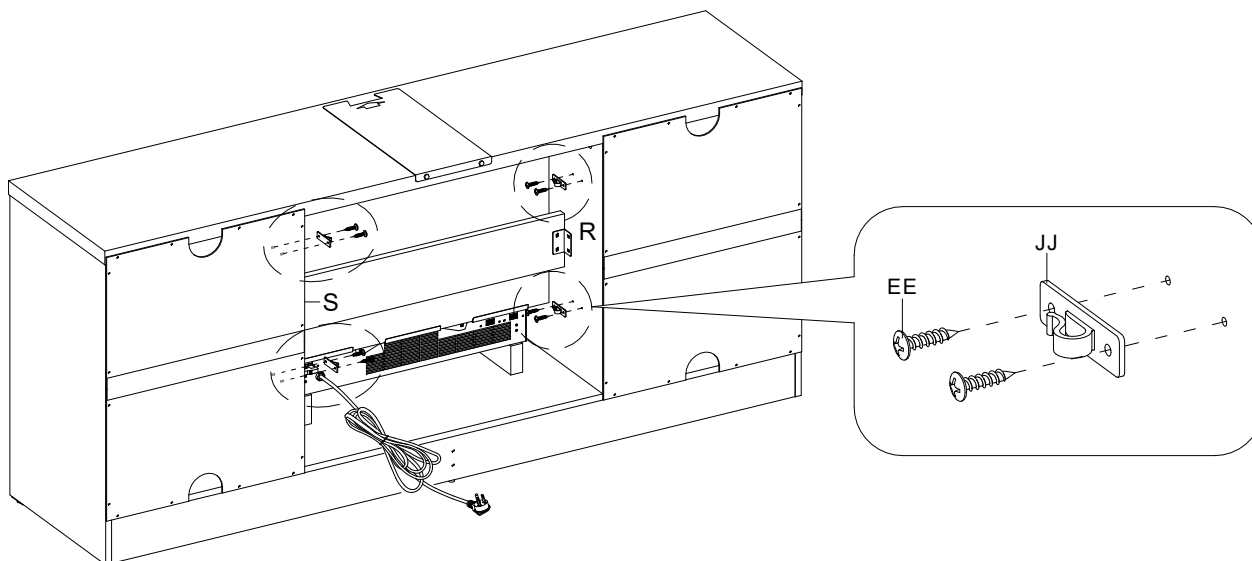

36 Connecting LED light bars to heater

- Route the LED Lighting cables to the installed cord clips as shown.
- Fully plug the USB connector of the LED strip into the back port of heater (A).

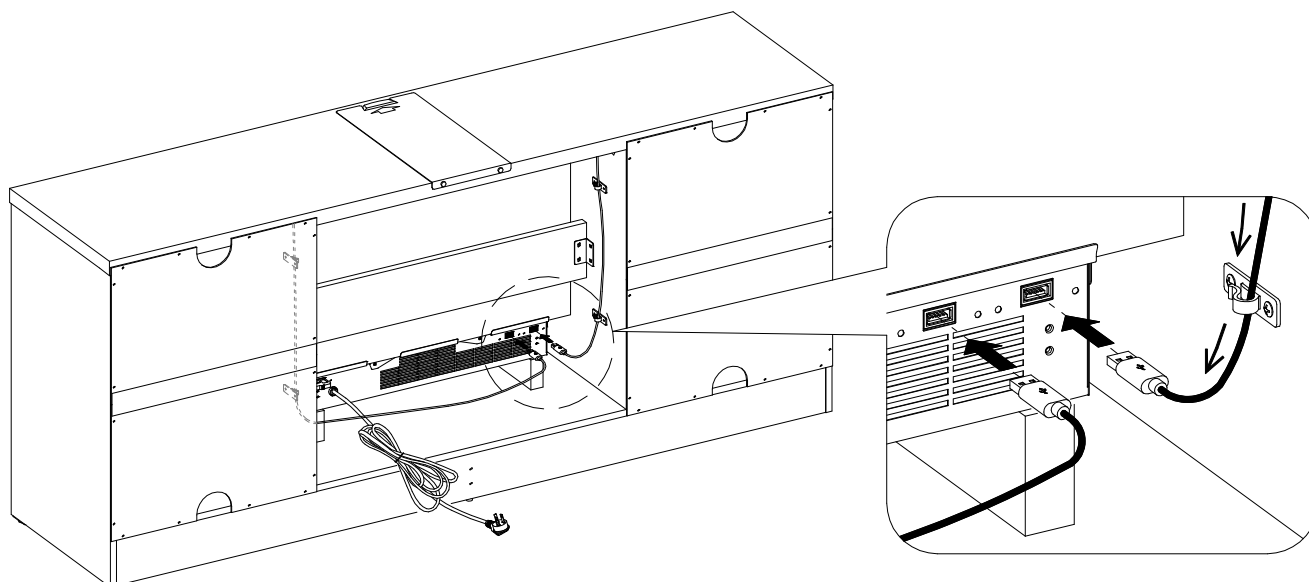

Assembly (continued)


37 Installing acrylic stopper

- Remove the paper backing of acrylic stopper (KK), then properly align the acrylic stopper into the cutout on the acrylic stopper template on the front of the top panel (M). Press down on the acrylic stopper to help adhere to the top panel (M).



NOTE: To prevent your TV from tipping, you must install the acrylic TV stopper if you place a flat panel television on the top panel. Otherwise, skip to next step.

- At the back of top panel (M), grip the heads of plastic tacks with pliers, with twisting motion pull tacks loose to remove the acrylic stopper template.

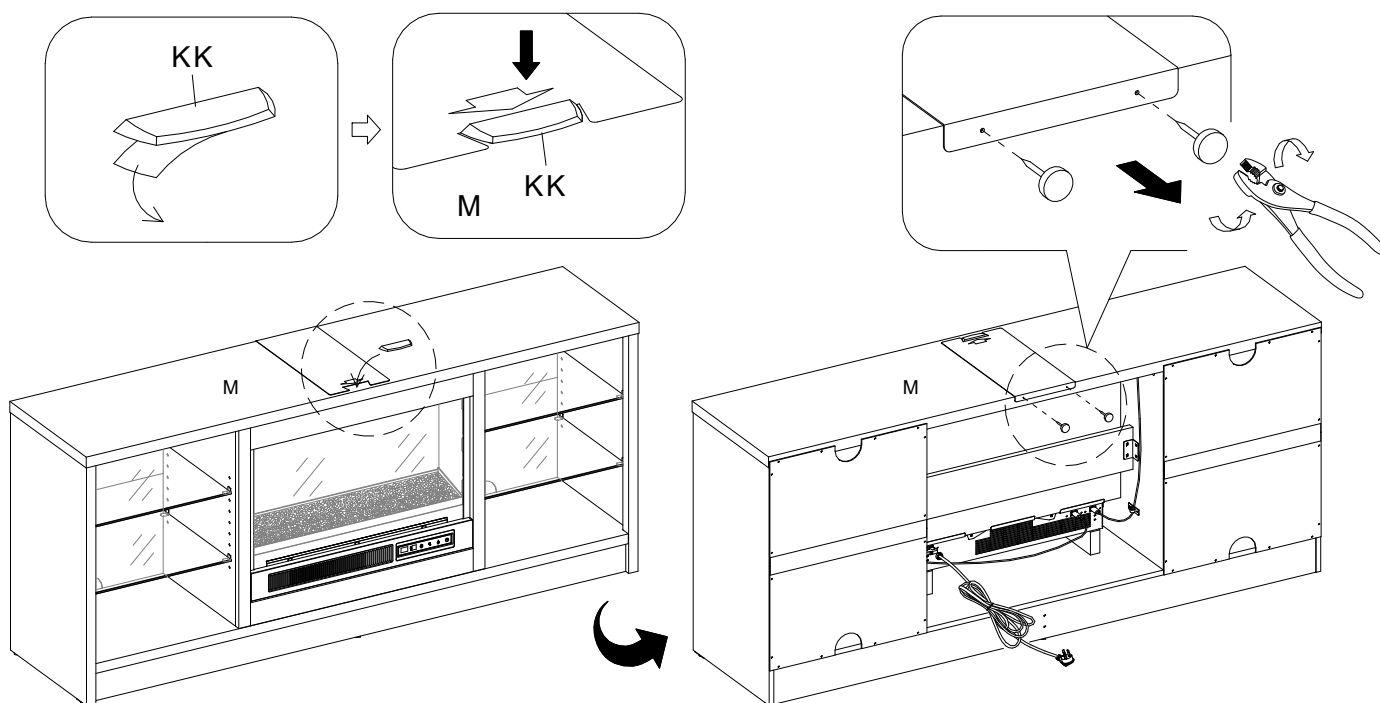


Assembly (continued)

38 Installing tipping restraint hardware



WARNING: Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent, they are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

- With assistance, position the assembled fireplace at the desired location against a wall. Be careful not to bump console during movement to ensure decorative glass remains in the correct sloped position.
- Adjust the pre-attached floor levelers by hand to correct tilting, until the unit is level.
- Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.
- Connect the fireplace to the power transformer. Follow the operating manual for the electric fireplace insert to control your fireplace.

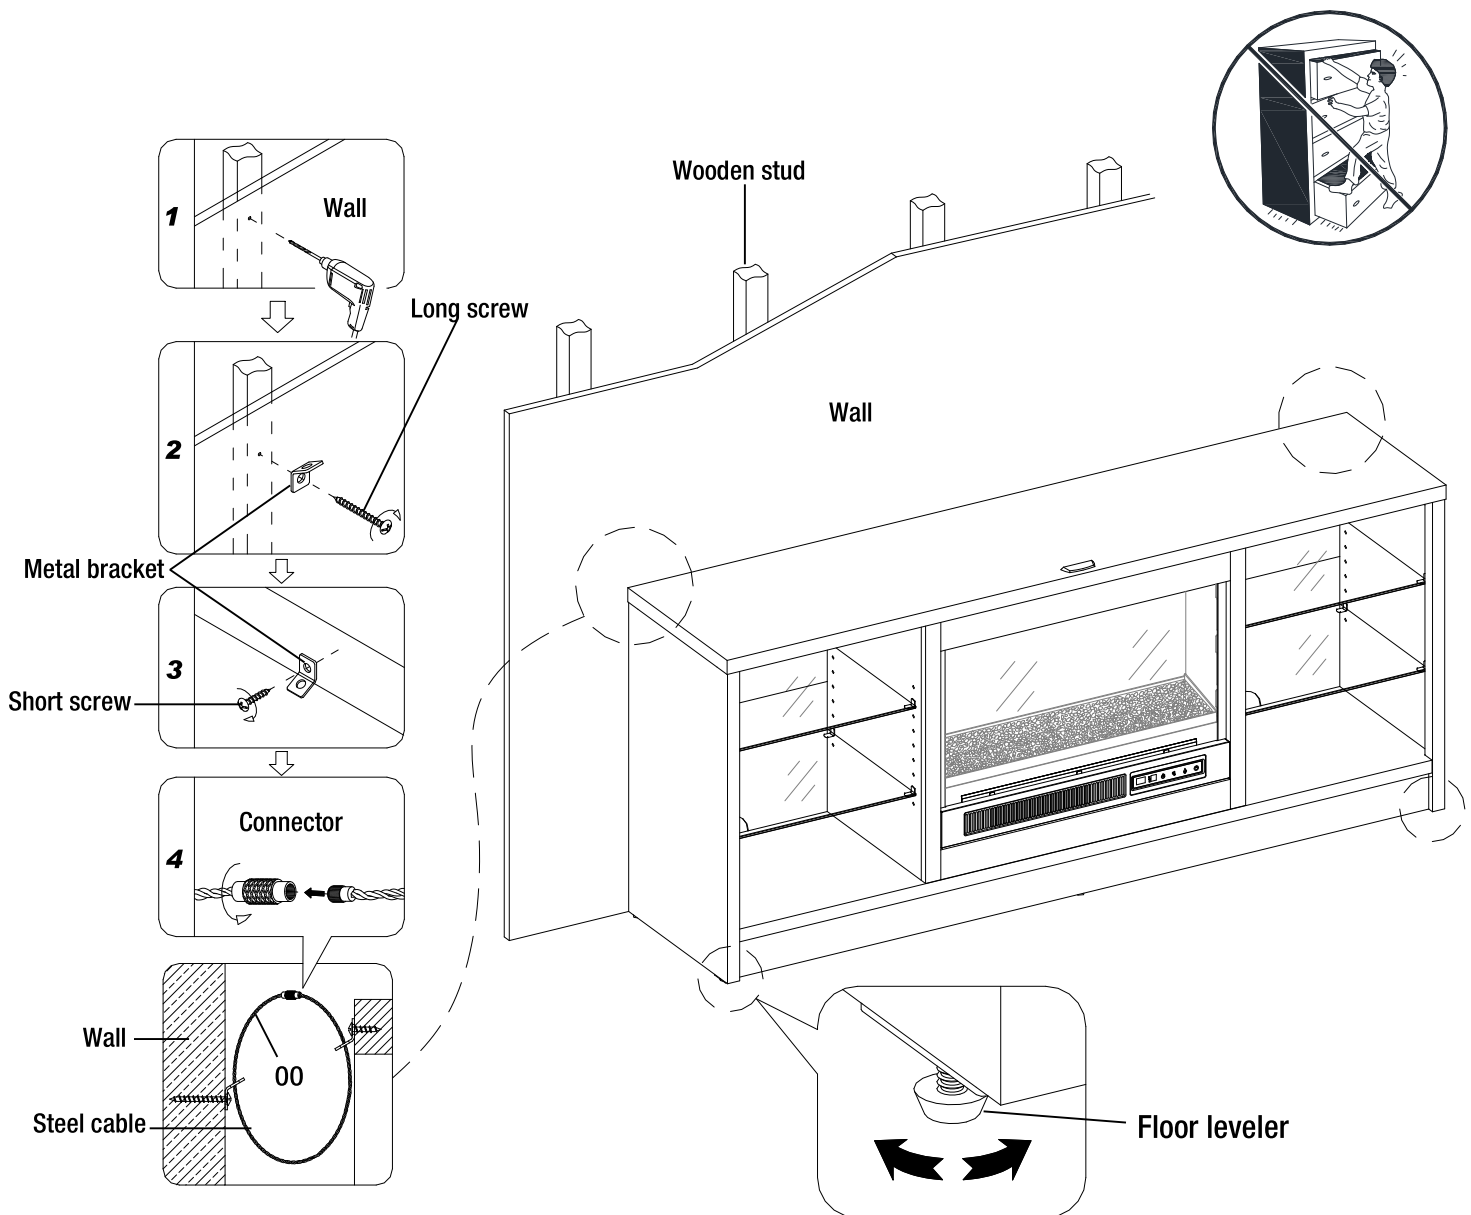

Care and Maintenance

A touch-up pen has been provided to minimize the small nicks or scratches that may occur during assembly or shipping.

To clean and care for your furniture:

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes is not necessary. Should you choose to use polishes, test first in an inconspicuous area.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently. Avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.
- Check bolts/screws periodically and tighten them if necessary.

CARING FOR WOOD FURNITURE

It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase. Following these important and helpful tips will enhance your furniture as it ages.

CLEANING THE FIREPLACE TRIM

Clean the metal trim using a soft cloth, slightly dampened with citrus oil-based product and buff with a clean, soft cloth. DO NOT use brass polish or household cleaners as these products will damage the metal trim. Citrus oil-based products can be obtained at supermarkets or hardware stores.

 WARNING	
	Children have died from furniture tip-over. To reduce the risk of furniture tip-over: • ALWAYS install anti-tip device restraint provided. • FOR use with televisions weighing 65.8 kg (145 lb) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury. • NEVER allow children to stand, climb or hang on any drawers, doors, or shelves. • NEVER open more than one drawer at a time. • Place heaviest items in the lowest drawers.
	Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.