

Item # 1002 782 622  
1002 782 602

Model # 9235976 (Zinc)  
9236030 (Bronze)

# EVERBILT

## Use and Care Guide

### Double Roller Catch with Strike

## TOOLS REQUIRED



Phillips screwdriver

## PACKAGE CONTENTS



A - Roller Catch x 1



B - Strike x 1




C - Screws x 4

## Installation


### 1 DETERMINING THE INSTALLATION LOCATION

- You can attach the catch (A) on the top, bottom, or side of the cabinet.

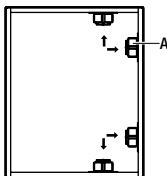



### 2 INSTALLING THE ROLLER CATCH

- Use two screws (C) to attach the catch (A) to your chosen installation location.

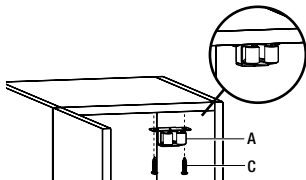

### 3 INSTALLING THE STRIKE

- Attach the strike (B) to the cabinet door using two screws (C). Ensure the strike (B) is able to snap in place between the wheels of the roller catch (A) when you close the cabinet door.

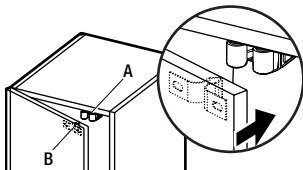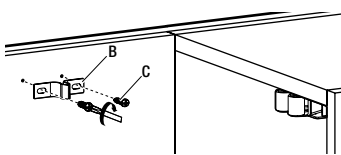

## Warranty

Subject to the terms of this warranty, the Manufacturer warrants to the original consumer purchaser that the product will be free from defects in material and workmanship. If the product does not comply with this warranty, the Manufacturer will repair or replace the product or, at the Manufacturer's option, refund the purchase price. Repair, replacement, or refund of the original purchase price is your sole remedy under this or any other warranty on the product, whether expressed or implied. For additional details and questions, please contact Everbilt Customer Service at 1-800-305-1726.