

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

a) READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

- b) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c) This seasonal use product is not intended for permanent installation or use.
- d) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.
- e) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.
- f) Do not let lamps rest on the supply cord or on any wire.
- g) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- h) This is an electric product-not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- i) Do not use this product for other than its intended use.
- j) Do not hang ornaments or other objects from cord, wire, or light string.
- k) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.
- l) Do not cover the product with cloth, paper or any material not part of the product when in use.
- m) This product is equipped with push-in type LED lamps. Do not twist lamps.
- n) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- o) Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS

 
USE AND CARE INSTRUCTIONS

- a) When the product is placed on live a tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
- b) If the product is placed on a tree, the tree should be well secured and stable.
- c) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- d) When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- e) When not in use, store neatly in a cool, dry location protected from sunlight.
- f) The LED lamp has polarity. Do not deliberately change the direction of the LED lamp in the lampholder.

USER SERVICING INSTRUCTIONS

To replace the fuse:

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades.
- c) Remove fuse carefully. Turn plug over to remove fuse.
- d) Risk of fire. Replace fuse only with 3 Amp, 125Volt fuse provided with product.
- e) Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- f) Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

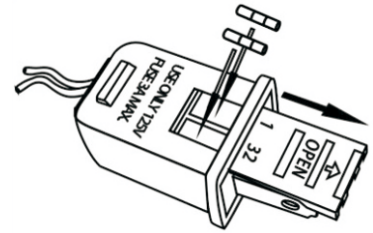

To replace a lamp:

- a) Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
- b) Pull lamp and plastic base straight out of lampholder as shown in Fig.1.
- c) Insert the spare LED lamp into the lampholder in correct direction by matching the tab on the lamp base of the replacement bulb with the tab on the lamp holder as shown in Fig.2. **IMPORTANT** – The tabs on the spare lamp and lampholder must line up.
- d) Replace lamp with only **3.4 volt, 0.068 watt** LED type lamps provided with this product.

CAUTION:

- a) Do not exchange the lamp base on the new lamp with the old one or the LED wires may break.
- b) Pull lamp and plastic base straight out of lampholder.
- c) Do not deliberately change the direction of the LED lamp in the lampholder (always match the tab on the lamp base to the tab on the lamp holder, see Fig. 2).

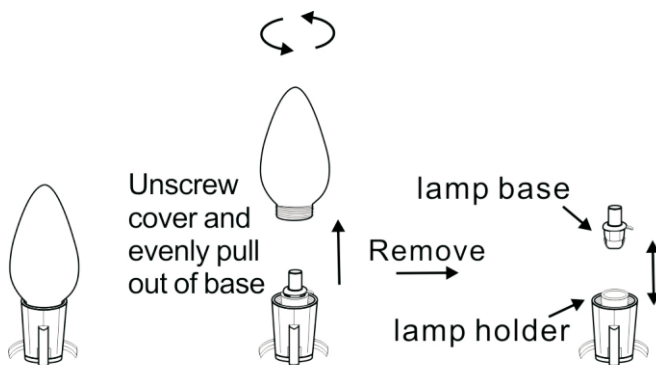 


Fig.1 Remove the burned out lamp

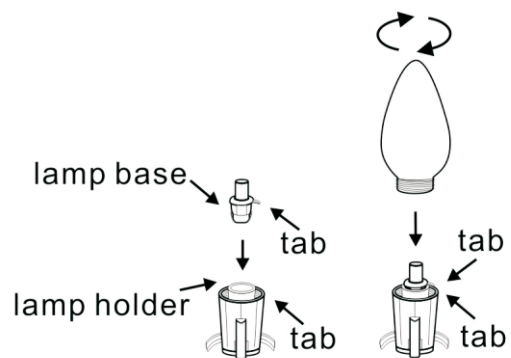 


Fig.2 Replace with the spare lamp

CAUTION:

This string is rated **4.2 Watts (0.035Amps)**, do not overload. Connect other Lighting Strings or decorative outfits end-to-end up to a maximum of 216 Watts (1.8 Amps) total.

If connecting to a lighting string that does not have a wattage (W) rating (found on the tag within 6 inches of the plug), Calculate The wattage (W) as follows: Multiply the current (A) which is on the flag type label located Within 6 inches of the plug, by 120.

For example, string is rated 120V, 60Hz, **0.035Amps**

$0.035 \times 120 = 4.2$ Watts.

Add the wattage of each light string together for a total of 216 Watts or less. (Do not exceed 216 Watts.)

CAUTION:

- 1) Risk of fire. This product does not contain shunts inside the lamps. Replace lamps only with the spare lamps provided with this product.
- 2) Replace lamps only with **3.4 volt, 0.068 watt** spare LED lamps provided with this product.
- 3) Do not operate with bulbs missing from sockets. Missing bulbs should be replaced promptly.
- 4) To reduce the risk of electric shock, personal injury, or fire, replace broken bulbs before using.
- 5) To reduce the risk of fire and electric shock: a) Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal.
b) Do not mount on support strings in manner that can cut or damage wire insulation.

Why CONTINUOUS-ON?

Never worry about a Light String going out with one or more bulbs broken, missing, burnt out or loose. With

Continuous-On Technology each lampholder has a resistor installed in it. This allows the entire Light String to work with one or more bad bulbs. Normal LED Light Strings do not have this feature and benefit.

Continuous-On Light Strings are an excellent option for high roof lines, trees, poles, columns and other areas or structures that are difficult to get to or if you simply do not want the inconvenience of checking and changing bulbs for wherever you use Light Strings. It is that easy!

Continuous-On Bulbs are like other LED bulbs where they are Cool to the Touch, Last Longer than Traditional Bulbs, Save Energy and they Look Great.

Always check any Light String for damage during storage and storage removal, decorating and any weather issues that may have damaged the Light String. Replace loose or broken bulbs immediately. Follow all instructions for use and cautions.

Enjoy **CONTINUOUS-ON** Light Strings for years to come.

FOR INDOOR AND OUTDOOR USE
MODEL NO. TY-B-25L/1W-C9-C