


TO OPEN • POUR OUVRIR • ABRIR



TO FOLD • POUR PLIER • DOBLAR

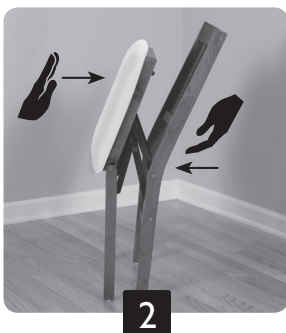

CARE & MAINTENANCE

Periodic inspections should be made to the chair.

If the wood surface is soiled, clean using a mild household cleaner and damp cloth. If the surface becomes scratched, use a touch up material compatible with varnish. Do not use any lacquer type material, as this will cause the finish to lift or blister.

If upholstery fabric becomes soiled, use a name brand fabric cleaner or shampoo and follow the instructions on cleaner.

Chair frame maintenance requires periodic inspections of the joints and fasteners. Check to be sure all screws are tight, should any screws have become loose, tighten. Should any part of the chair frame develop a crack or break, immediately remove the chair from use and contact a qualified furniture repair person.

08.7035.00

DIRECTIVES & ENTRETIEN · CUIDADO & MANTENIMIENTO

Français traduction disponible en ligne: www.mecofurniture.com

Español traducción disponible en línea: www.mecofurniture.com

STAKMORE®